

# WWW.HSPUTELIDS.COM

Part No: A4R-S3

## **INSTALLATION INSTRUCTIONS**

To suit Volkswagen Amarok Dual Cab





**INSTALLATION TIME:** 2 Hours (Approximately)

IMPORTANT	Do not stand/sit or rest heavy objects on Roll R Cover     Humans or animals are not to be under the closed cover at any given time     Tonneau Cover is not dust or water tight     If contact with volatile chemicals occur, clean Cover with mild detergent and water solution		
Care Instructions	Read Instructions fully before commencing installation.  Clean Cover with a mild detergent and water solution  Do not use abrasive cleaners or solvents  Refer to manufactures instructions applicable to power drill.  Protect Tub floor against scratches during installation process.		
Maintenance	Refer to Maintenance instructions.		
Tools Required	Pen / Marker Centre Punch Drill & Drill bits Caulking Gun Silicon - Non Acetic	<ul><li>Scissors &amp; Knife</li><li>Spanner &amp; Socket</li><li>Tape measure</li><li>Holesaw</li><li>Filing tool</li></ul>	<ul><li>Soapy water solution</li><li>Allen Key set</li><li>Screw driver</li><li>Rust Inhibitor</li><li>Trim Removal Tool</li></ul>

### PERSONAL PROTECTIVE EQUIPMENT:








**Rubber Gloves** 


**Hearing Protection** 

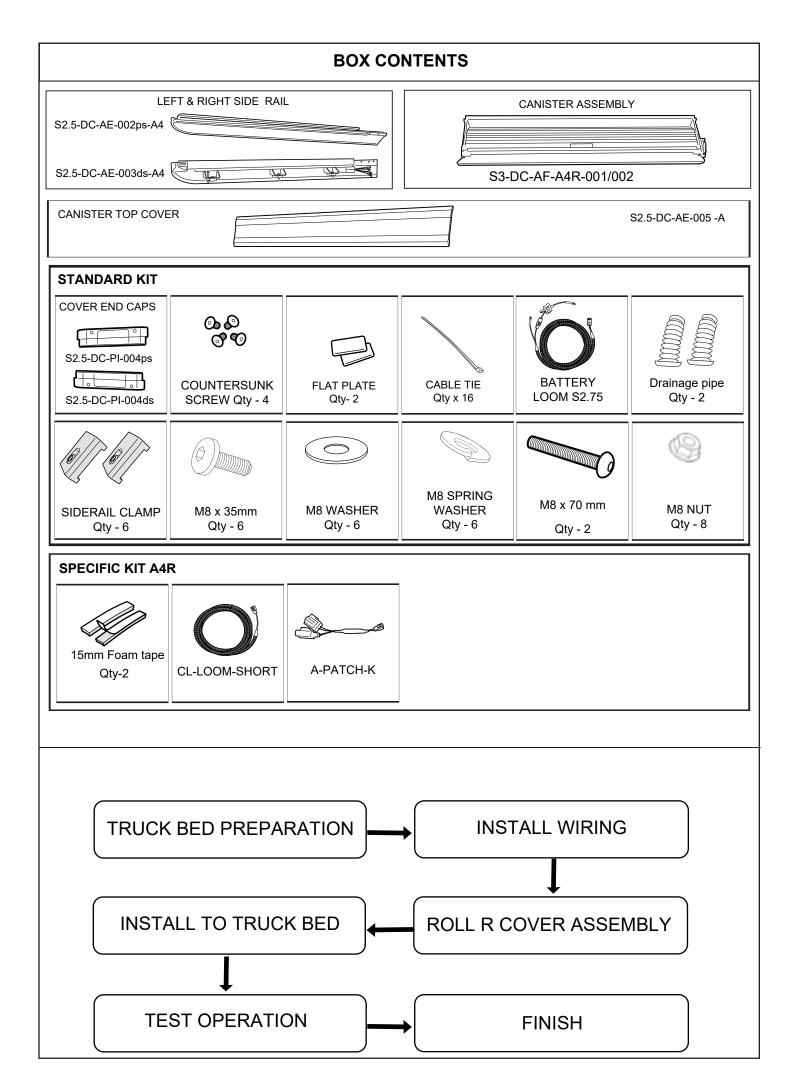


## **TUB PREPARATION**



Clean are as indicated.

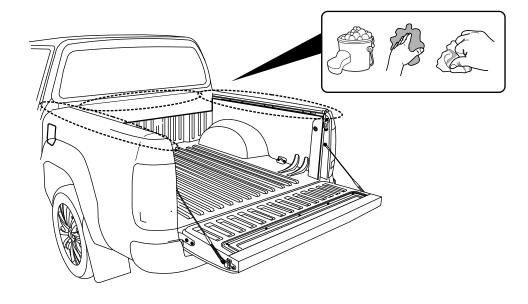

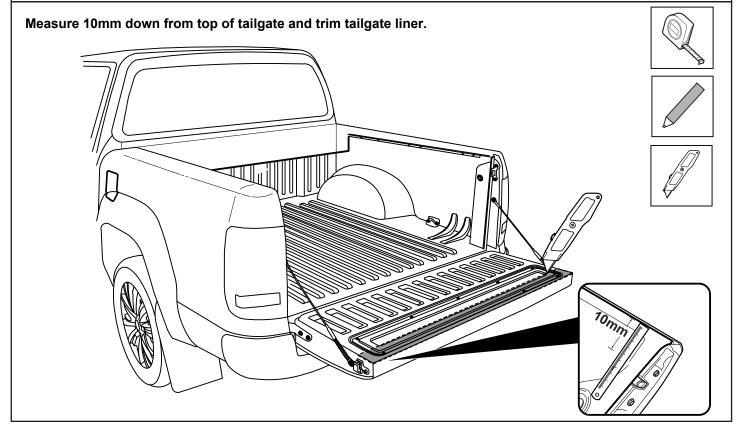


Measure down from top of assembly bar 210mm & 135 mm from inside wall of bed liner as shown. Repeat to the other side. Using a 50mm hole-saw drill the liner only as indicated.










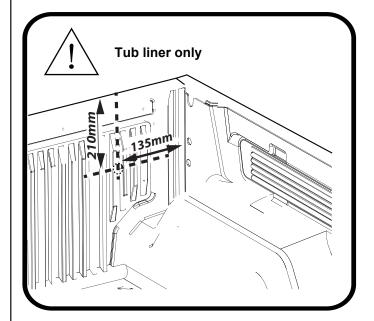

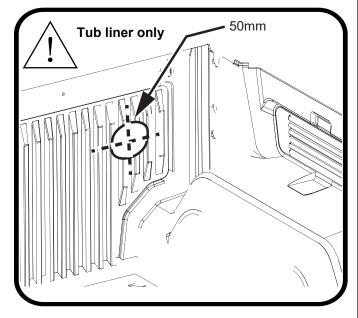

Measure down from top of headboard 210mm & 145mm from inside wall of bed as shown. (or 115mm if measuring from the side of the top rail) Repeat to the other side. Using a 30mm hole-saw drill through tub front panel, file away any sharp edges. Apply anti rust coating. Repeat to other side.




 










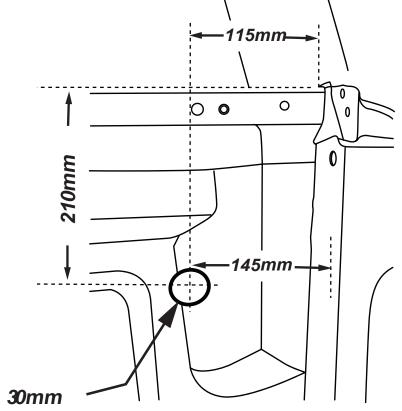





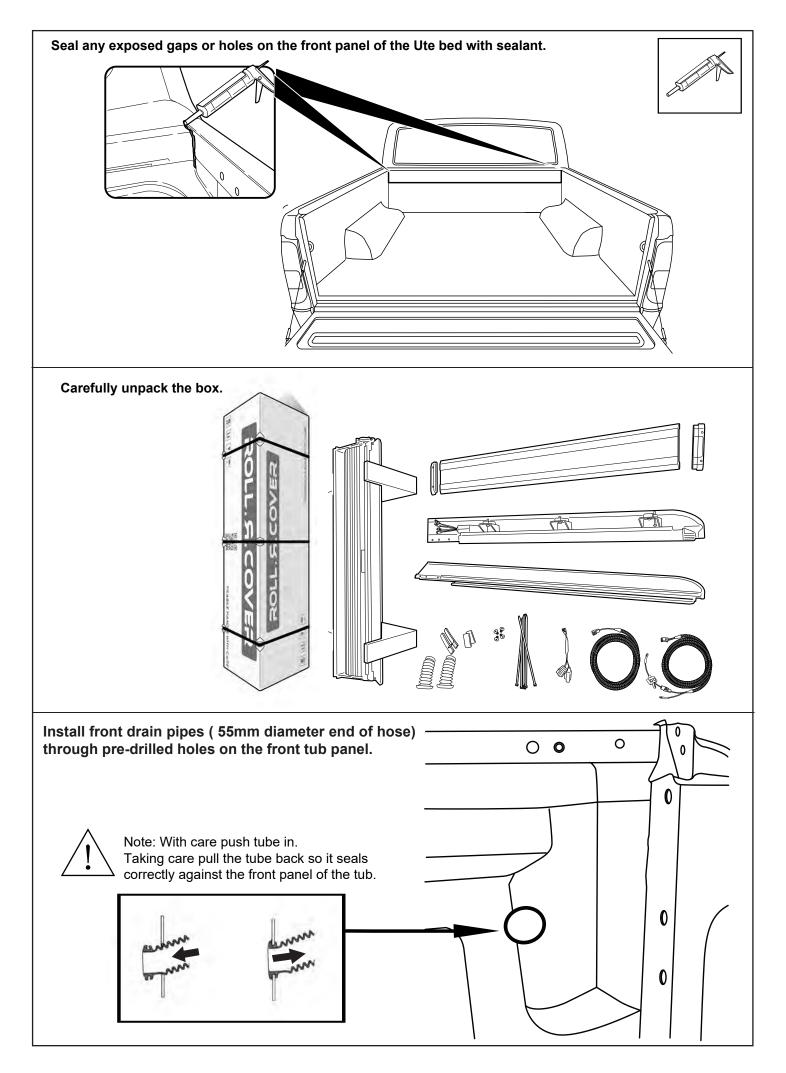

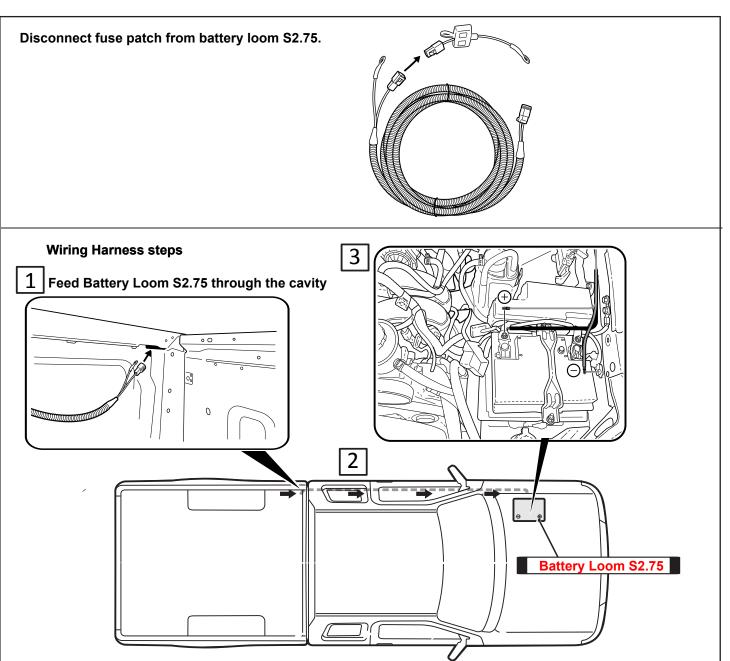



Run the wiring from the front corner cavity (leaving 200mm in the tub) to the battery over the chassis rail. Making sure to keep away from hot obstructions and cable tie every 400mm. Reconnect fuse patch to battery loom S2.75, now attach fuse patch to positive of battery and earth to the body of the Ute.

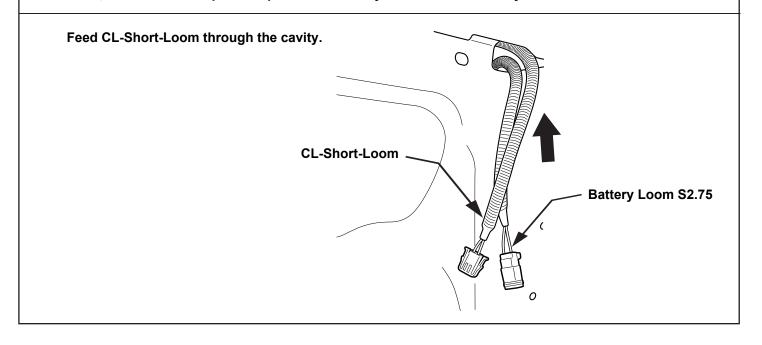


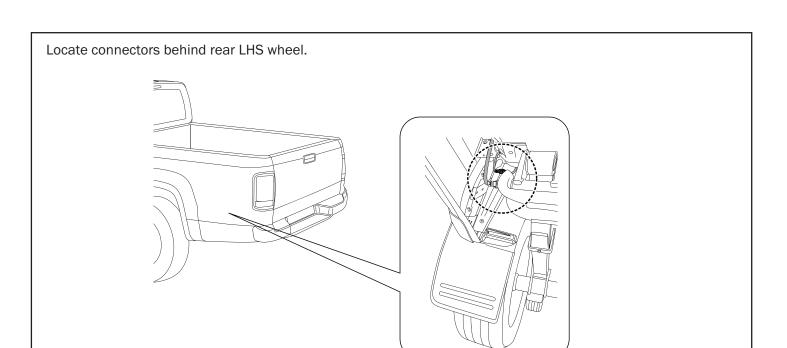



Disconnect the existing vehicle harness connectors under the vehicle as shown.

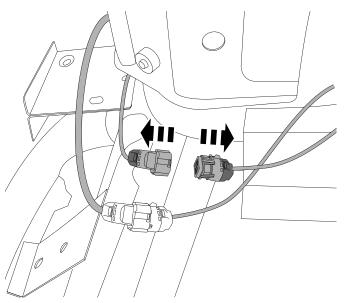


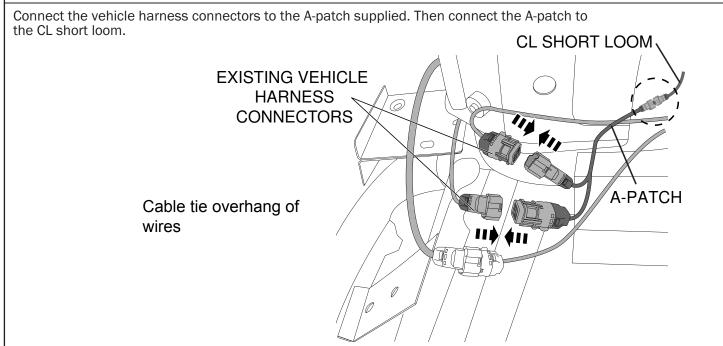


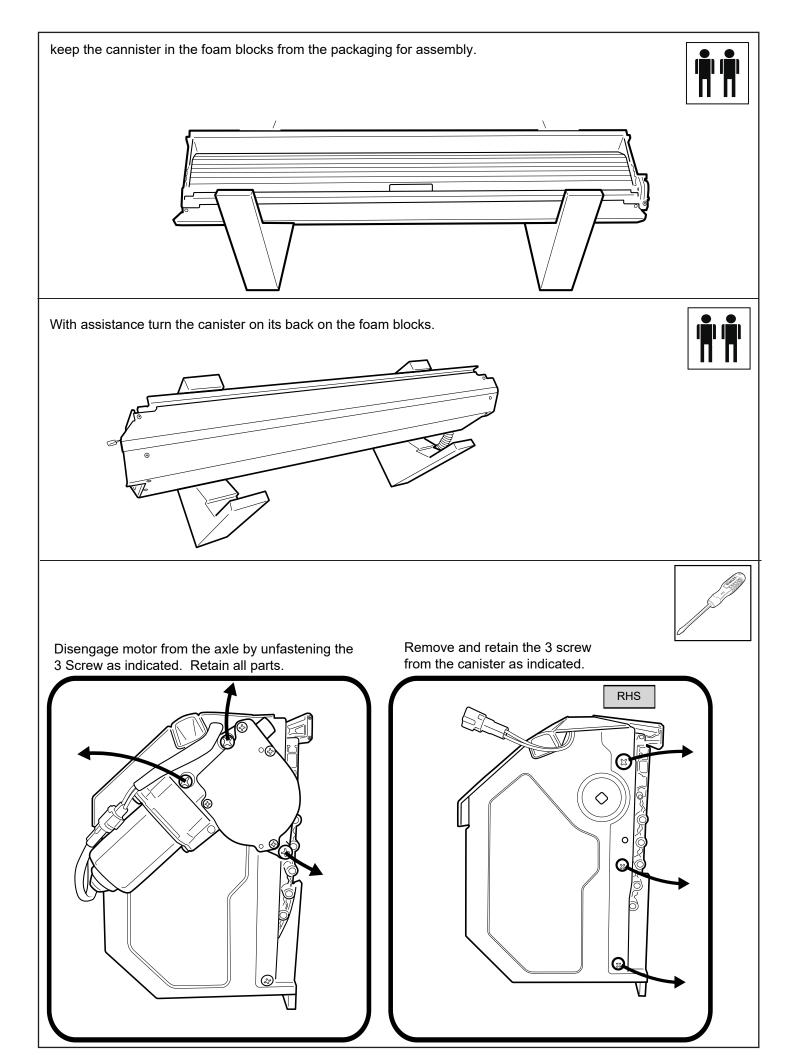


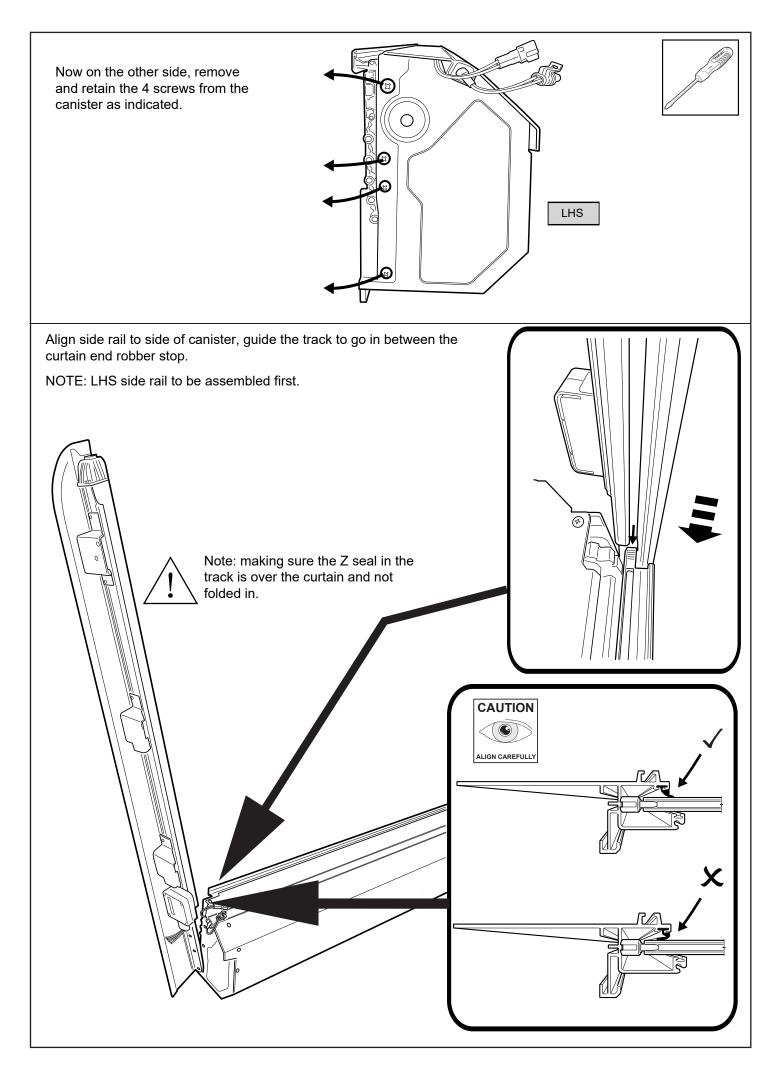


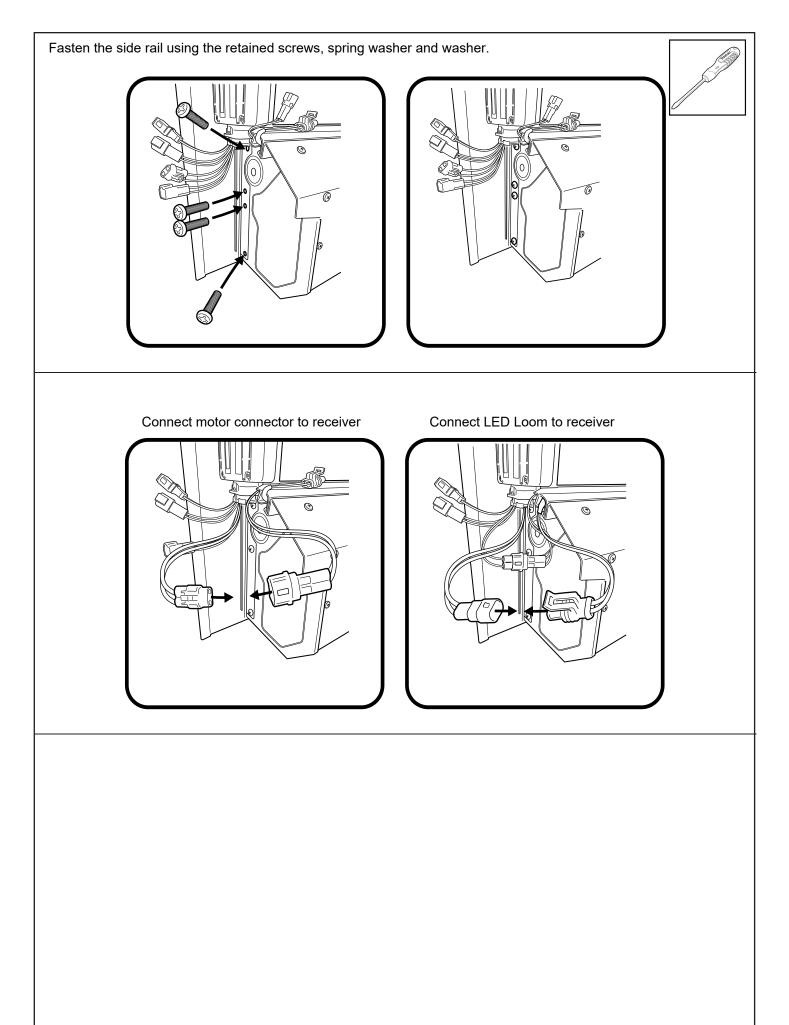

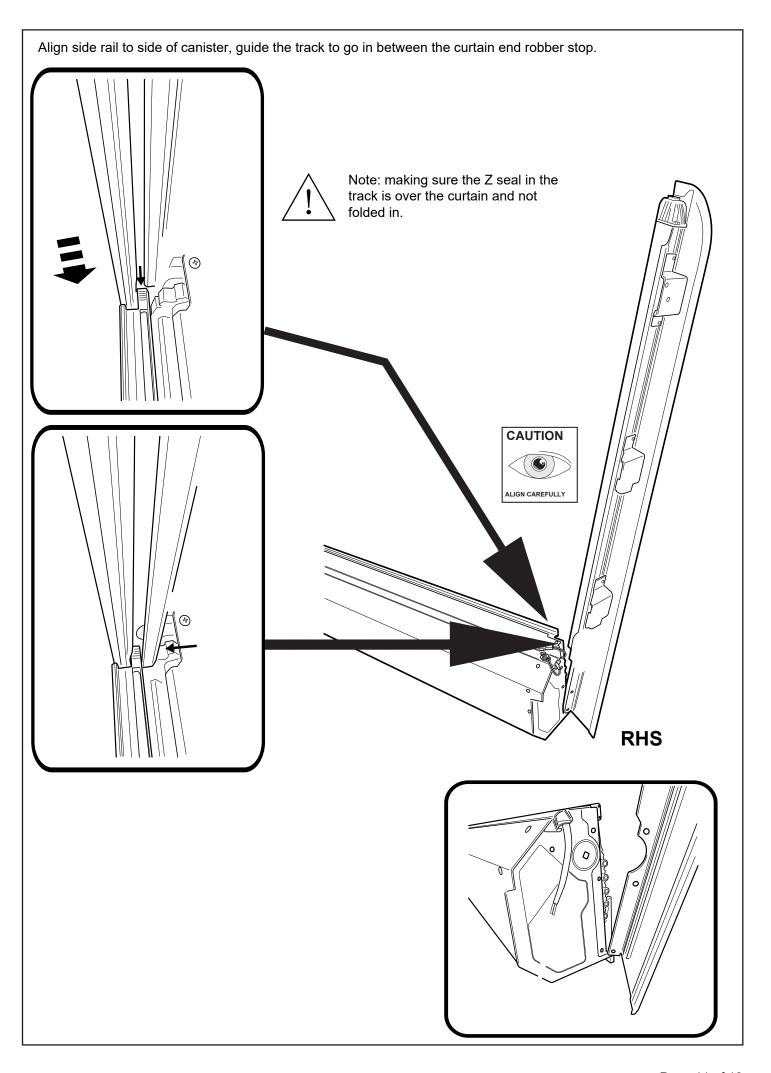


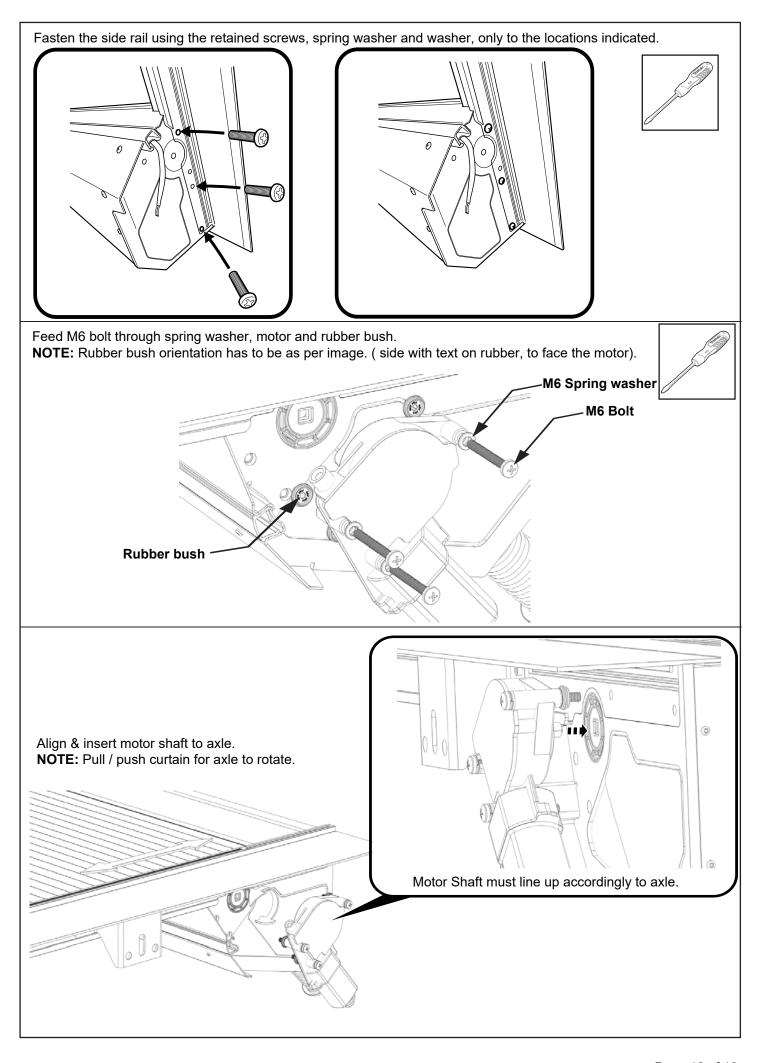

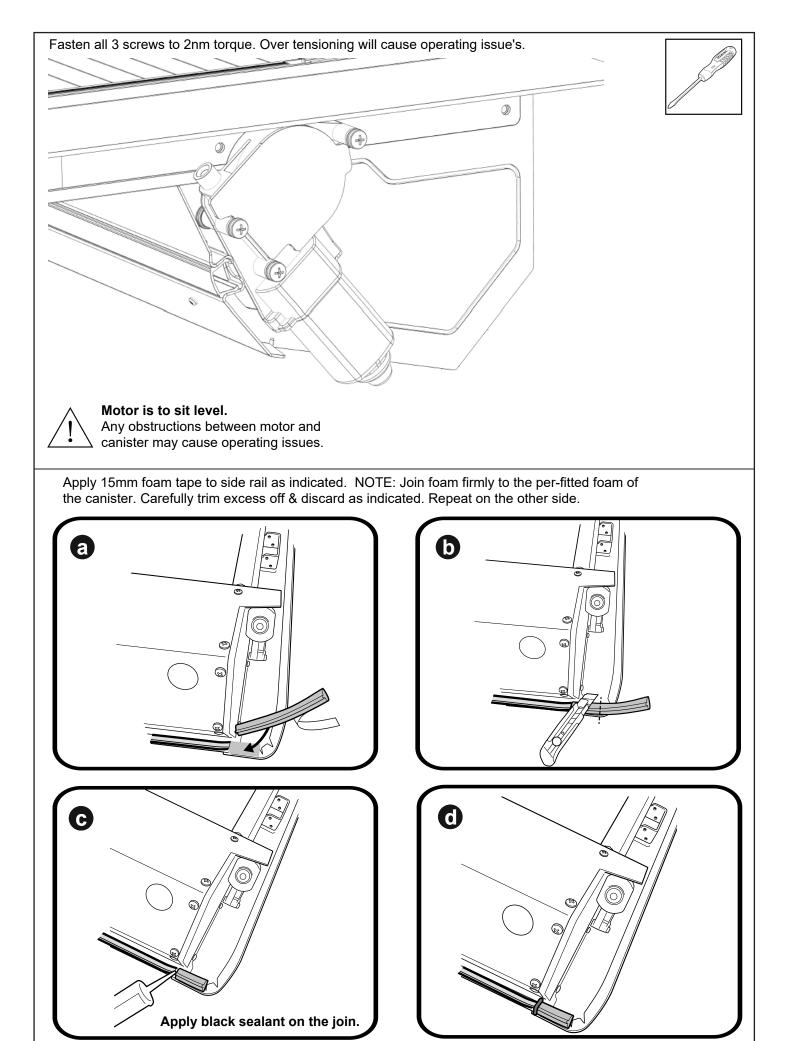


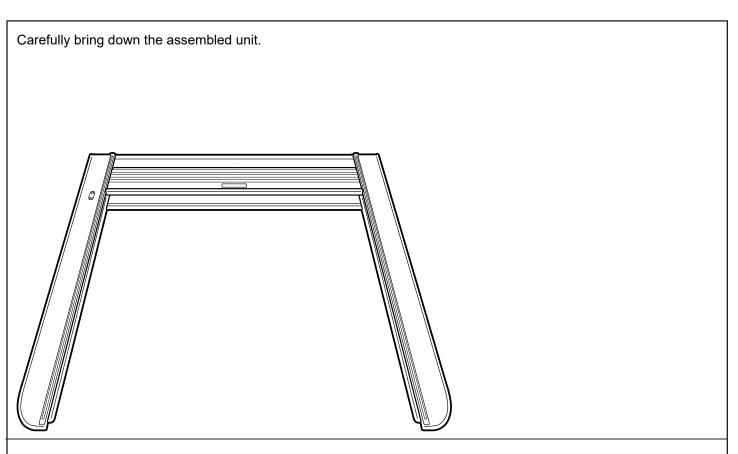

Insert side end caps to the top cover.

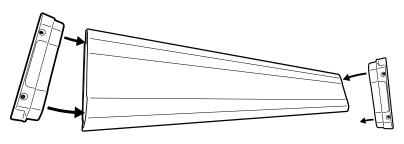



Place & Align top cover over the canister and side rails.

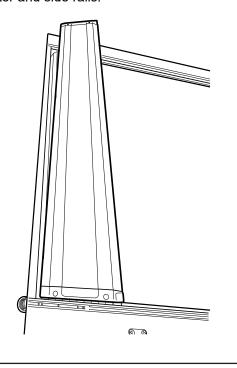


Using countersunk screws provided, line up end cap holes to the threads on the side rail.

Fasten to 3nm torque. Repeat to the other side.

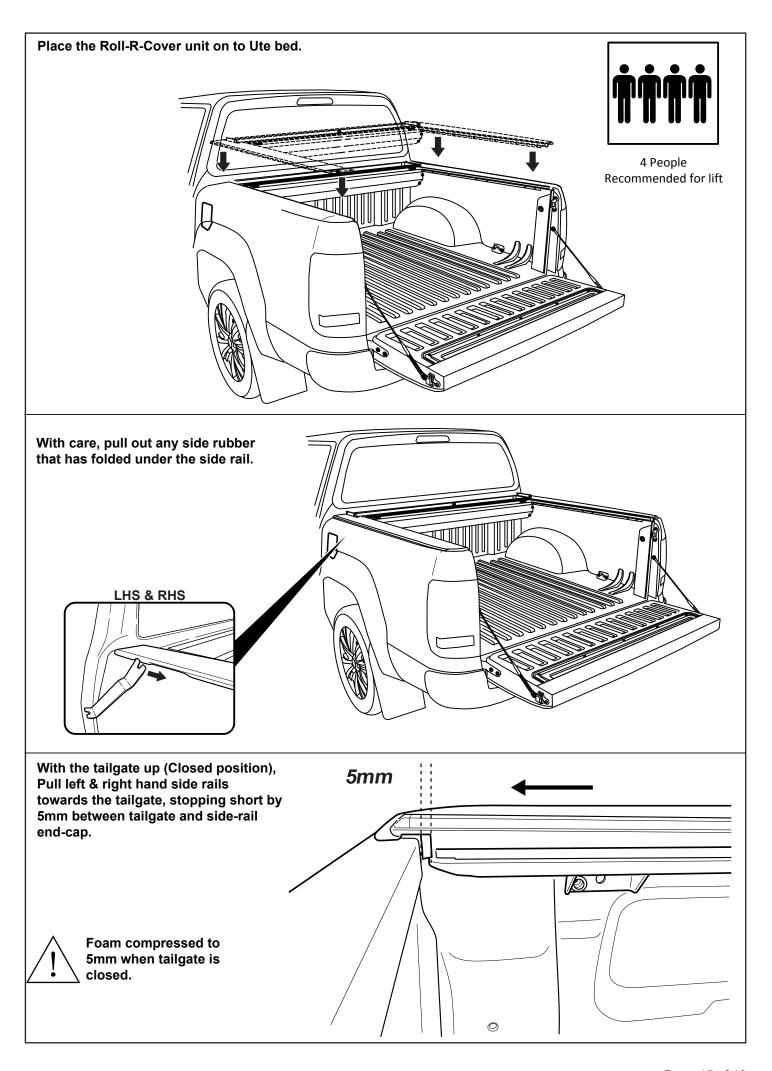

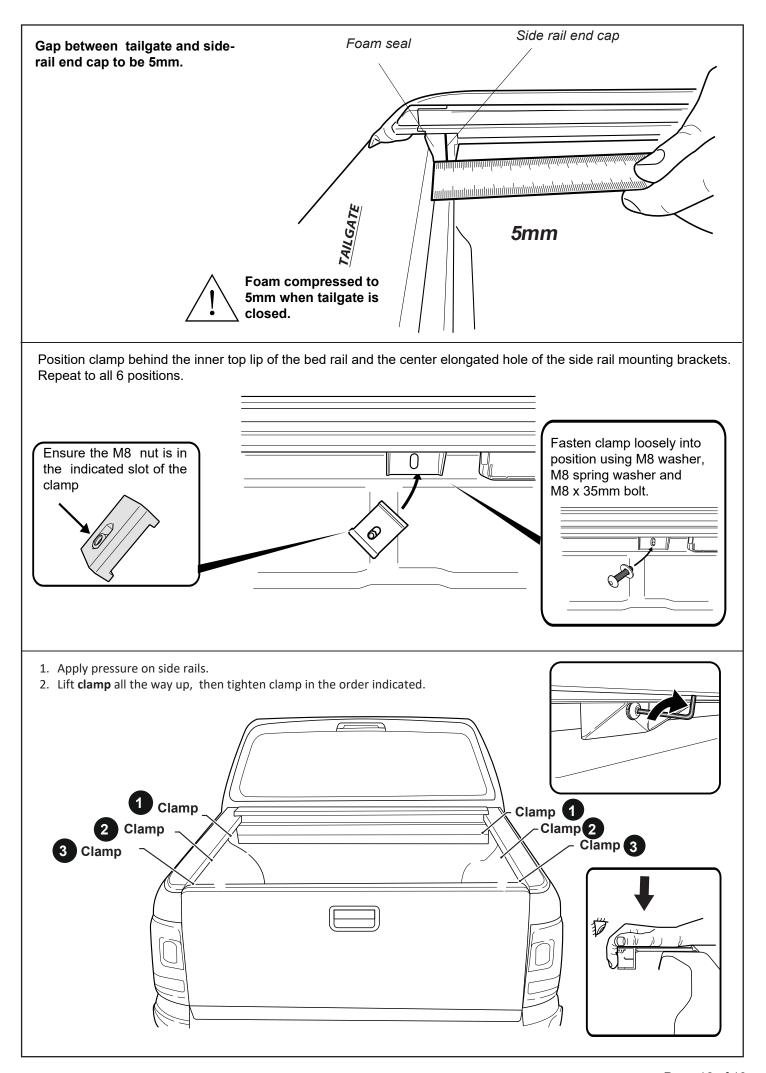


Apply flat plate behind adjusting bolt hole to the ute bed panel or to the liner if the Ute is equipped with a tub liner.

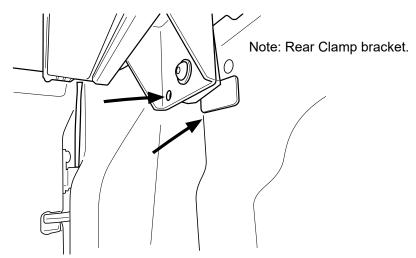





Note: Clean surface before applying flat plate.

Feed M8 nut into M8x70mm bolt and through clamp bracket's pre-installed nutsurt as indicated.

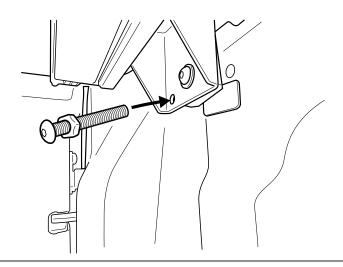


Side rail rubber must have a 1mm gap from the top of the tailgate in the closed position.

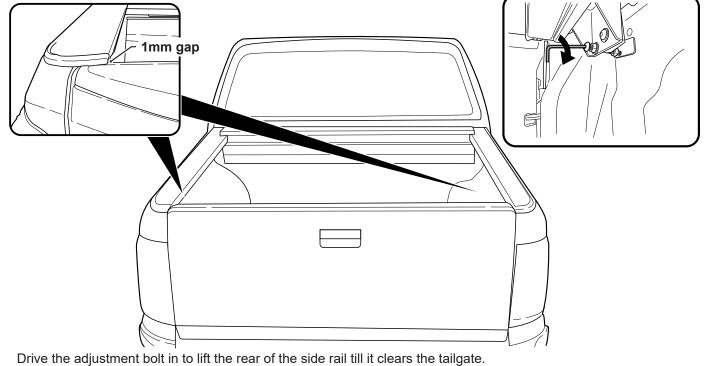

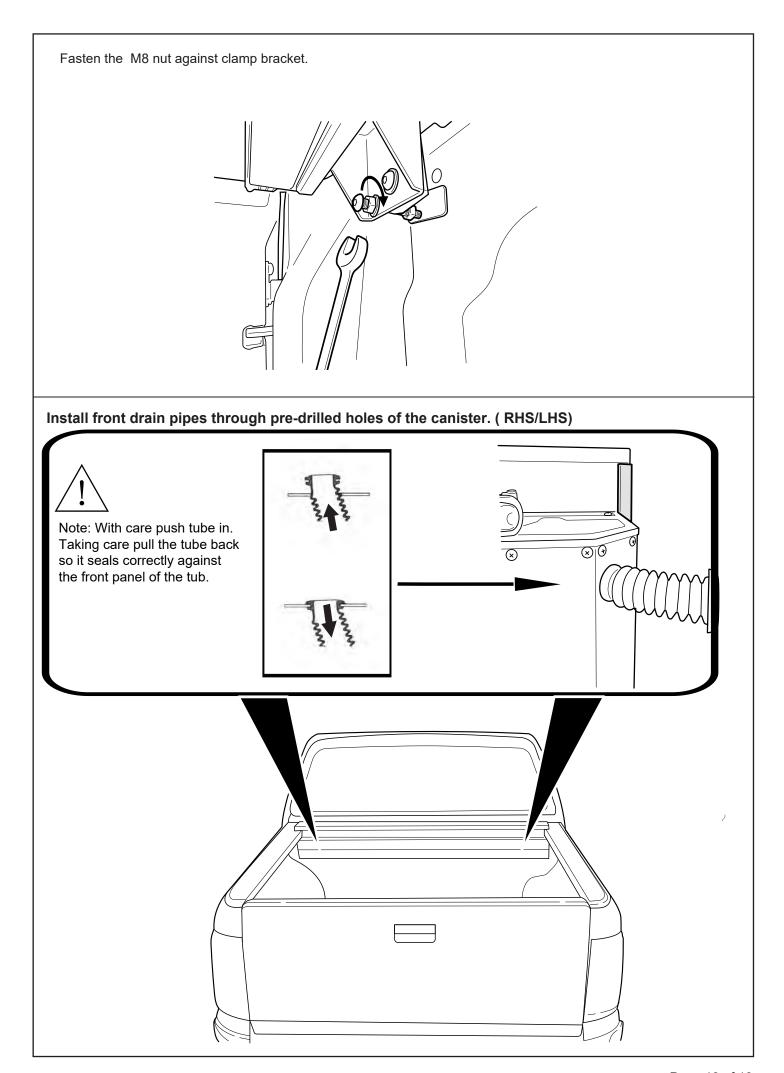

- a. Connect Battery loom S2.75 to Receiver loom.
- b. Carefully connect CI-Loom-short to Receiver loom.

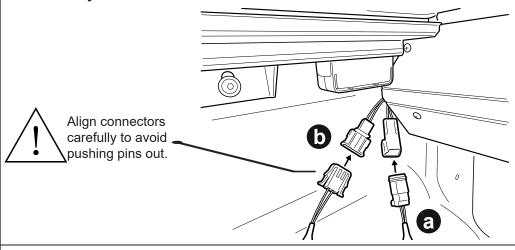



NOTE: 1. To wear in the Roll R Cover please fully open & close the cover approximately 15 times after install is complete.

2. Set your vehicle locking system to unlock all doors with one press of the factory remote unlock button. This setting can be found in your vehicle settings.

## **Operating instructions:**

Press unlock on vehicle key fob to activate controller.

When vehicle is unlocked the side rail sensor buttons will be active to control.

When vehicle is locked the side rail sensor buttons will be inactive.

## Using factory key fob to operate:

Pressing unlock twice on the factory key fob within 4 seconds, will activate the roll r cover to open. Pressing lock twice on the factory key fob within 4 seconds, will activate the roll r cover to close.



#### Amarok variation which is based on the base model:

**Rolling open:** Pressing unlock twice on the factory key fob within 4 seconds, will activate the roll r cover to open.

**Rolling open:** Pressing lock followed by unlock followed by lock, on the factory key fob within 4 seconds, will activate the roll r cover to close.

