WWW.HSPUTELIDS.COM



Part No: H4R-S3

INSTALLATION INSTRUCTIONS

Vehicle Model: To suit Toyota Hilux Revo 2016+ Dual Cab



INSTALLATION TIME: 2 Hours (Approximately)

IMPORTANT	 Do not stand/sit or rest heavy objects on Roll R Cover Humans or animals are not to be under the closed cover at any given time Tonneau Cover is not dust or water tight If contact with volatile chemicals occur, clean Cover with mild detergent and water solution 		
Care Instructions	 Read Instructions fully before Clean Cover with a mild de Do not use abrasive cleane Refer to manufactures instruction Protect Tub floor against some 	tergent and water solution	
Maintenance	Refer to Maintenance instructions.		
Tools Required	 Pen / Marker Centre Punch Drill & Drill bits Caulking Gun Silicon - Non Acetic 	 Scissors & Knife Spanner & Socket Tape measure Holesaw Filing tool 	 Soapy water solution Allen Key set Screw driver Rust Inhibitor Trim Removal Tool
PERSONAL PROTECTIVE EQ	UIPMENT:		


Rubber Gloves

J.


Hearing Protection


C

Goggles

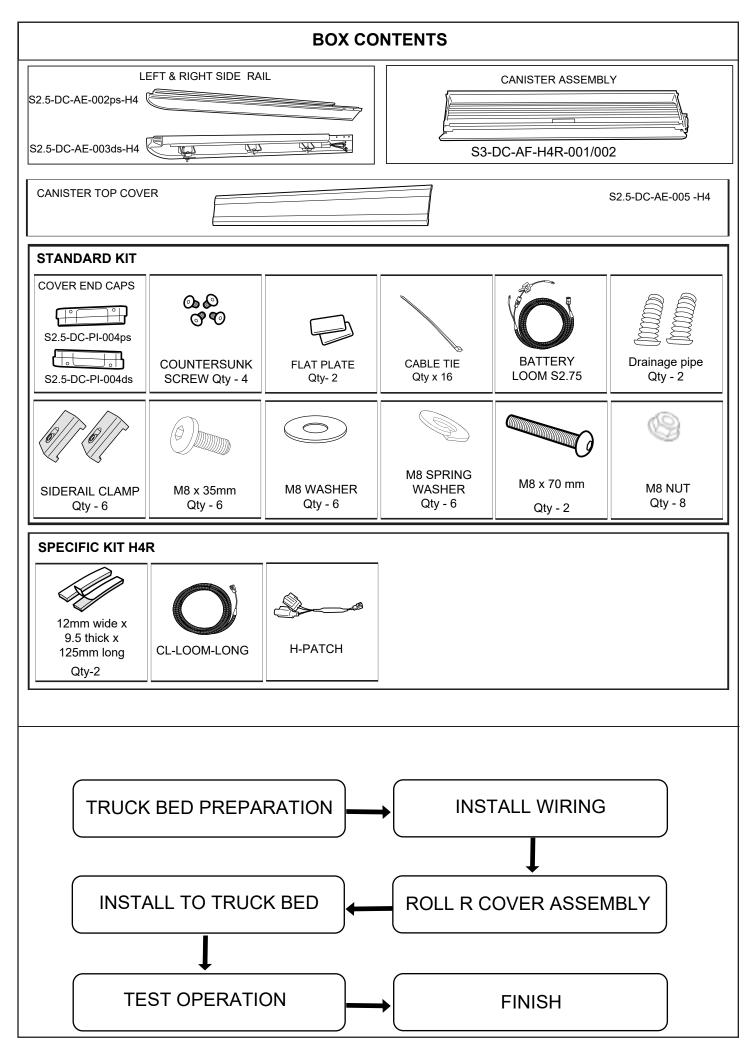

TUB PREPARATION

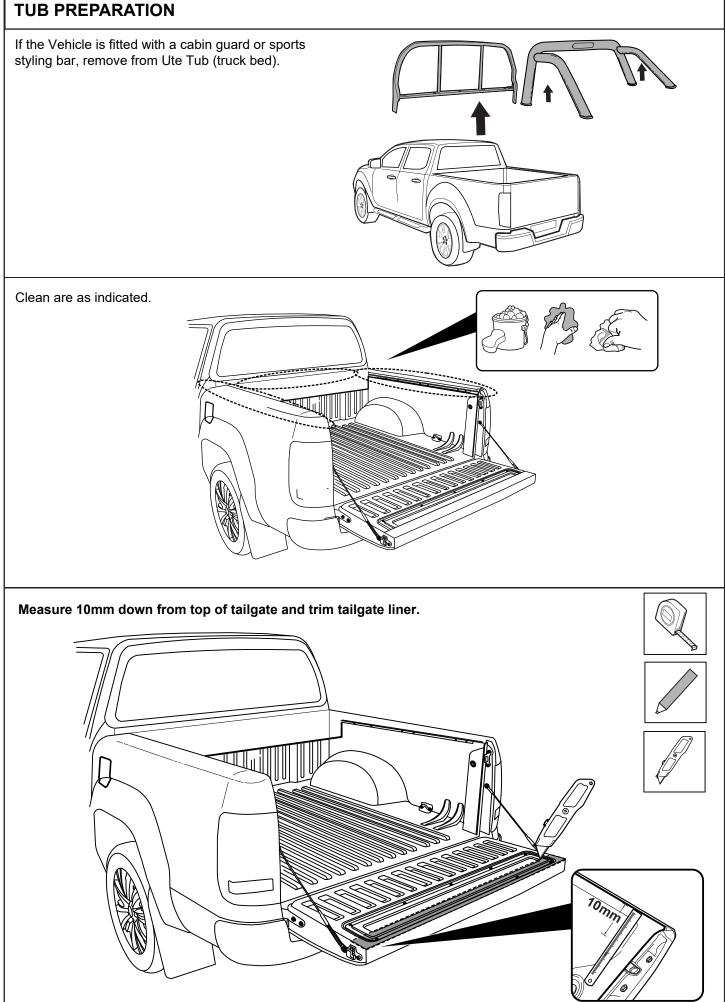

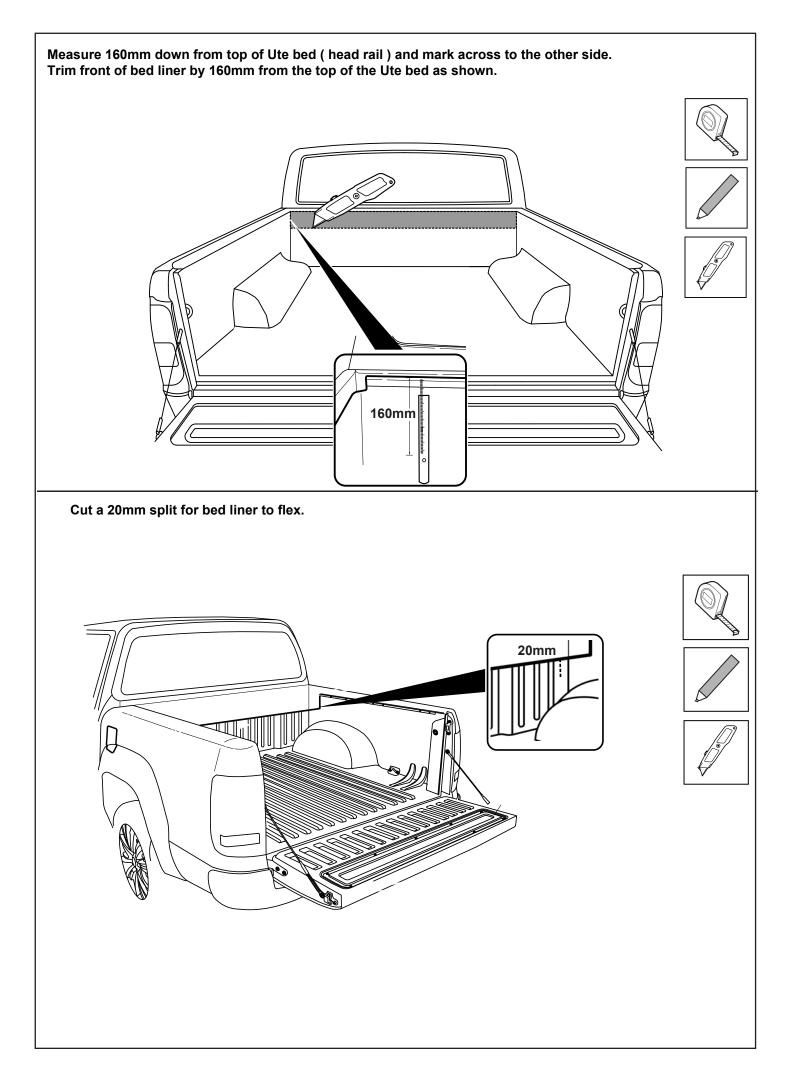

 Measure down from top of assembly bar 200mm & 135 mm from inside wall of bed liner as shown. Repeat to the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.

 Image: Constraint of the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.


 Image: Constraint of the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.

 Image: Constraint of the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.


 Image: Constraint of the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.


 Image: Constraint of the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.

 Image: Constraint of the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.
 Image: Constraint of the other side.
 <td

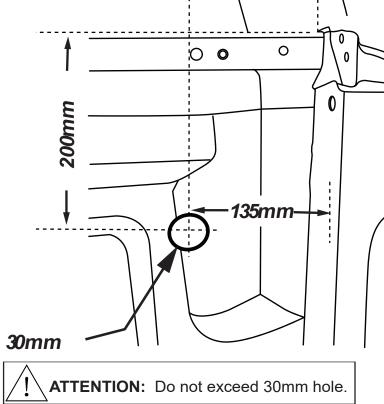




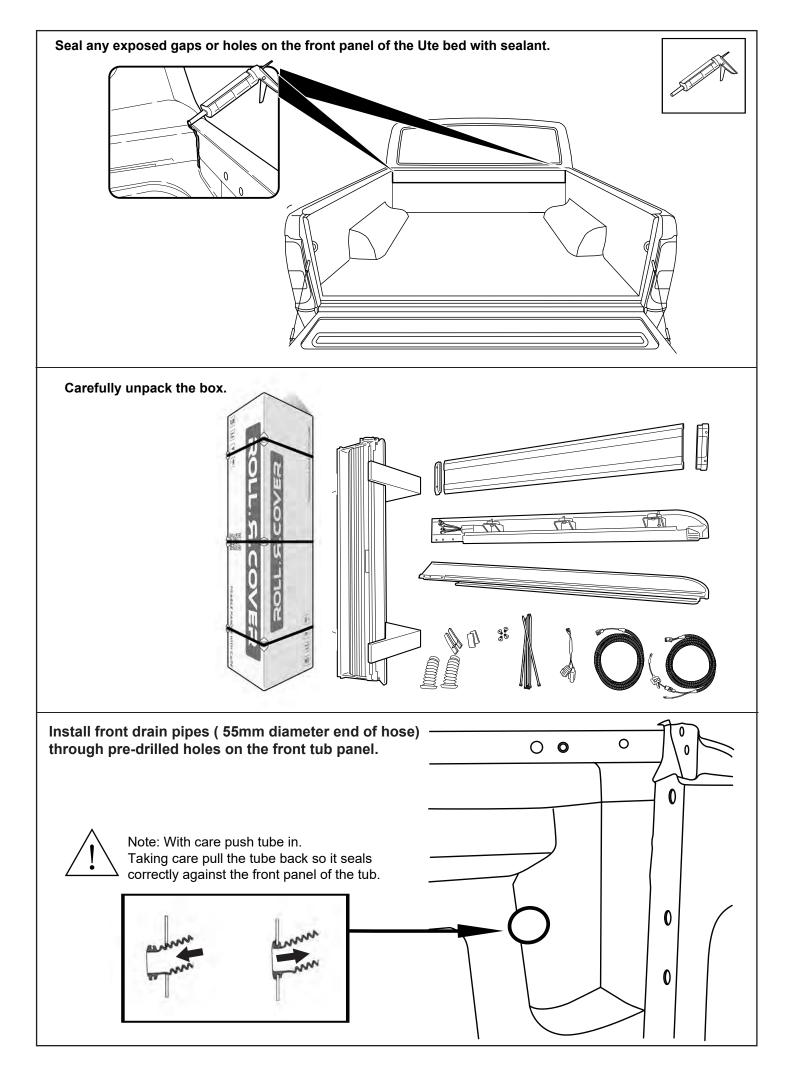


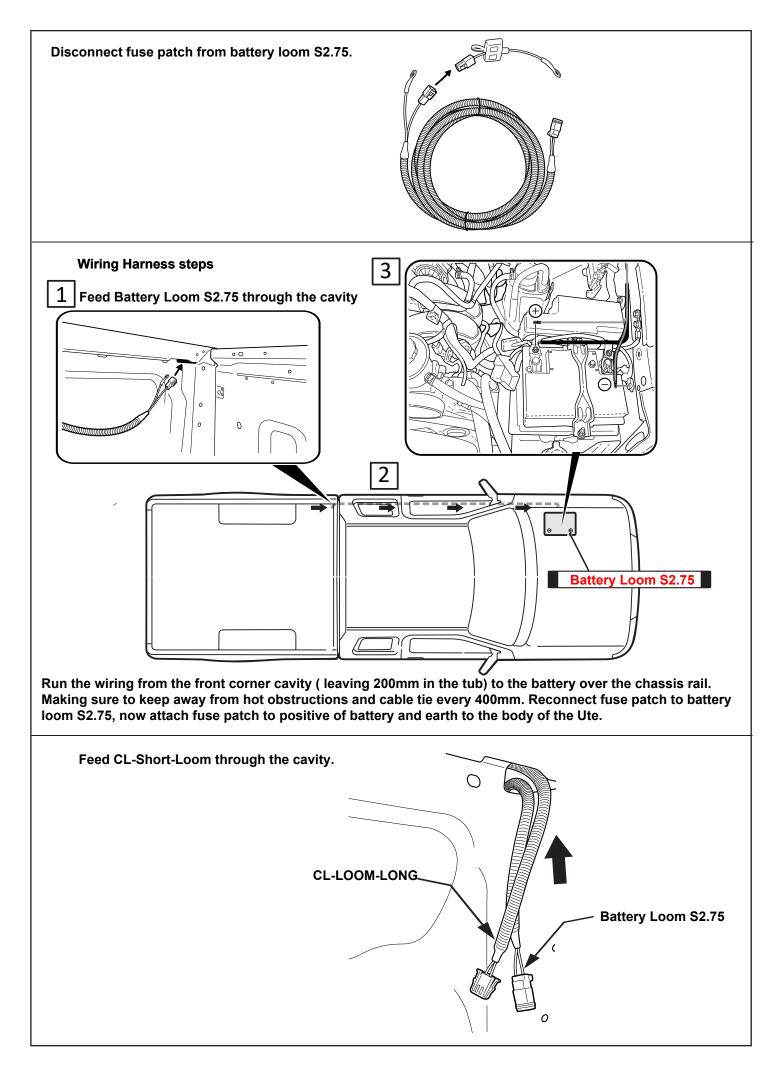


Run wiring from front tub corner cavity to passenger side kick panel. Cable tie wiring every 500mm over chassis rail. Find the large grommet on the firewall, make a small incision & run the loom through it to enter the cab and towards the kick panel. Seal accordingly.

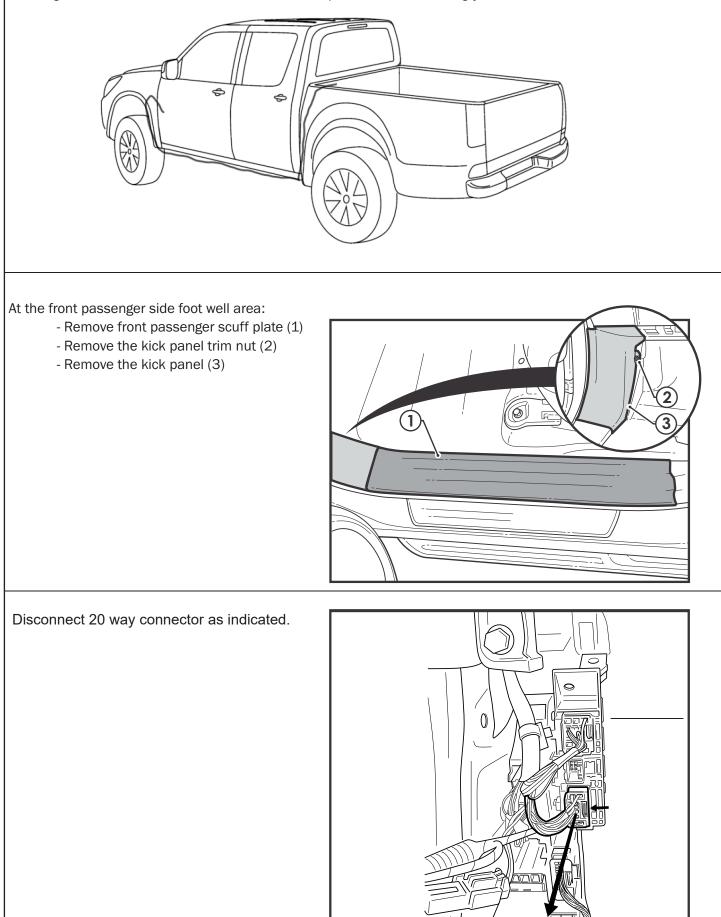



- Connect H-patch 20 way male connector to vehicle's female housing.
 Connect vehicles 20 way connector to H-patch female housing.

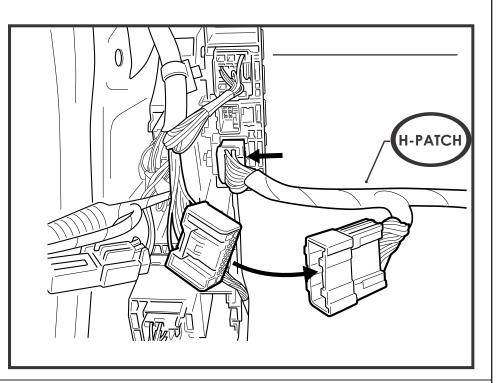



Connect H-PATCH loom to CL-LOOM-LONG

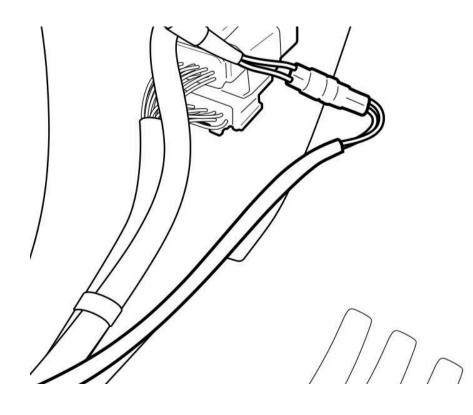


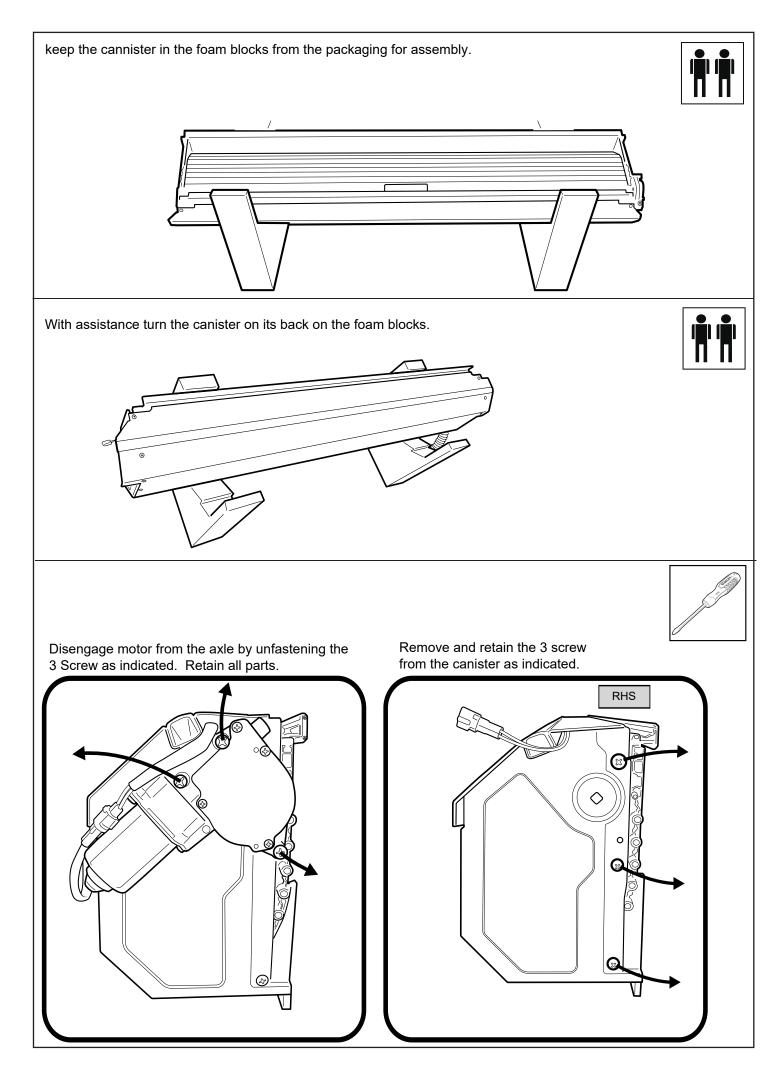


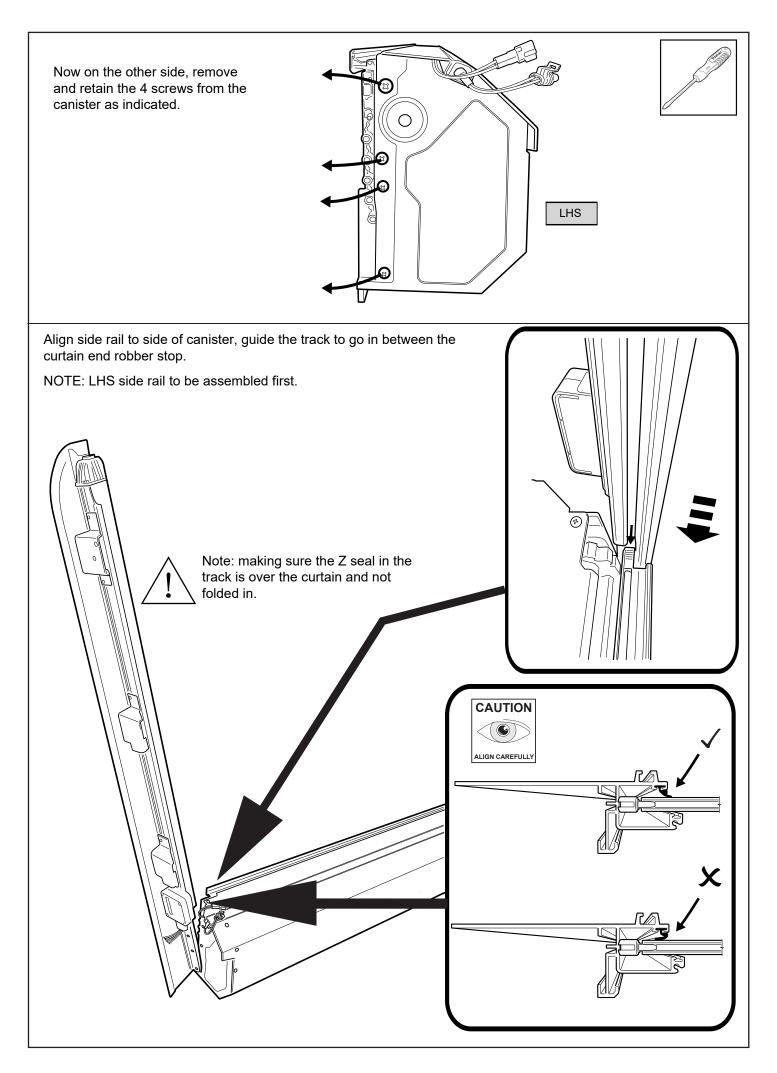


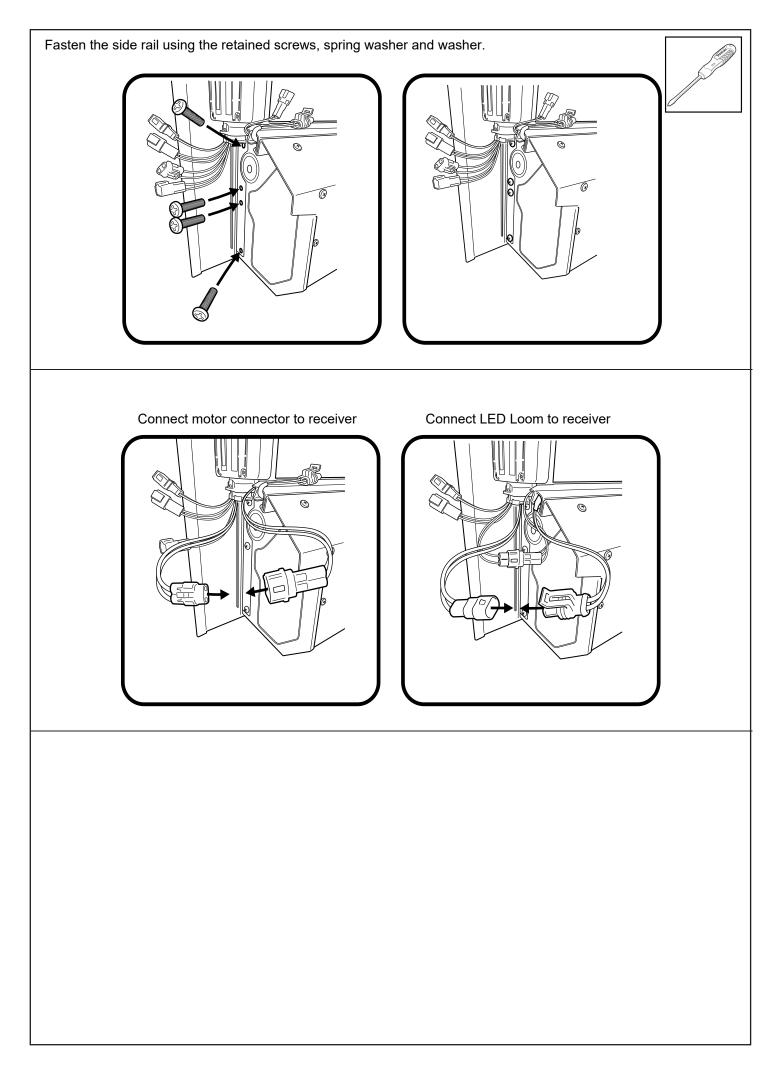


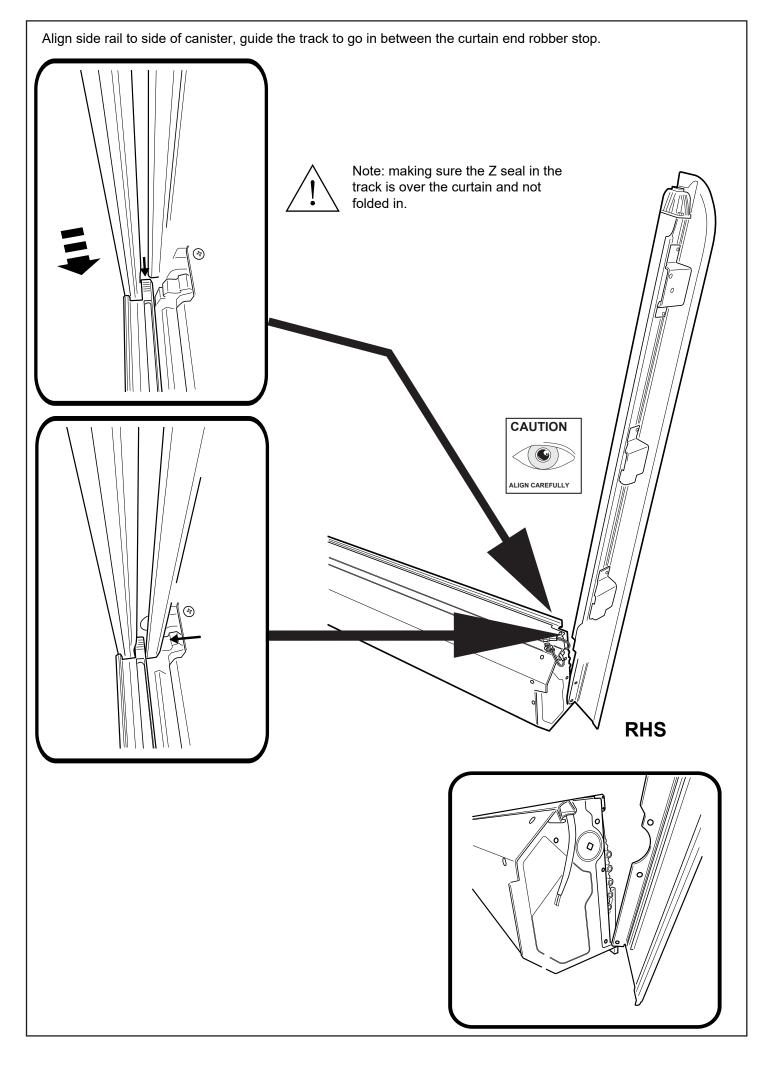


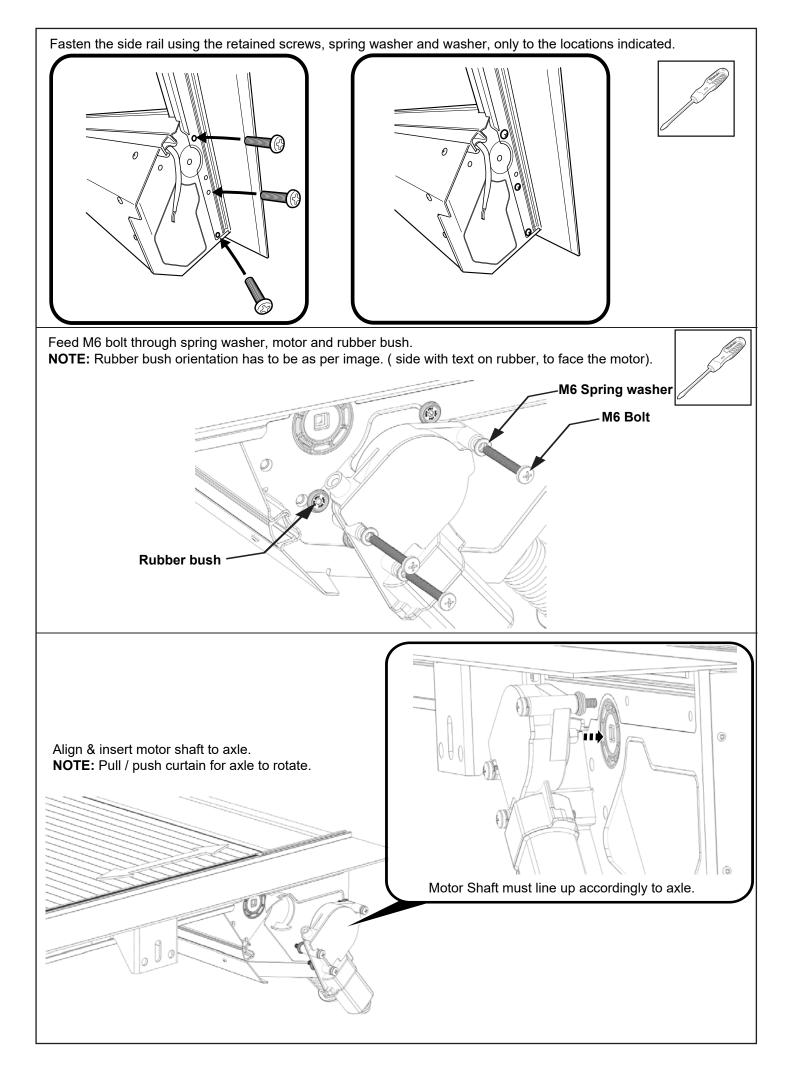


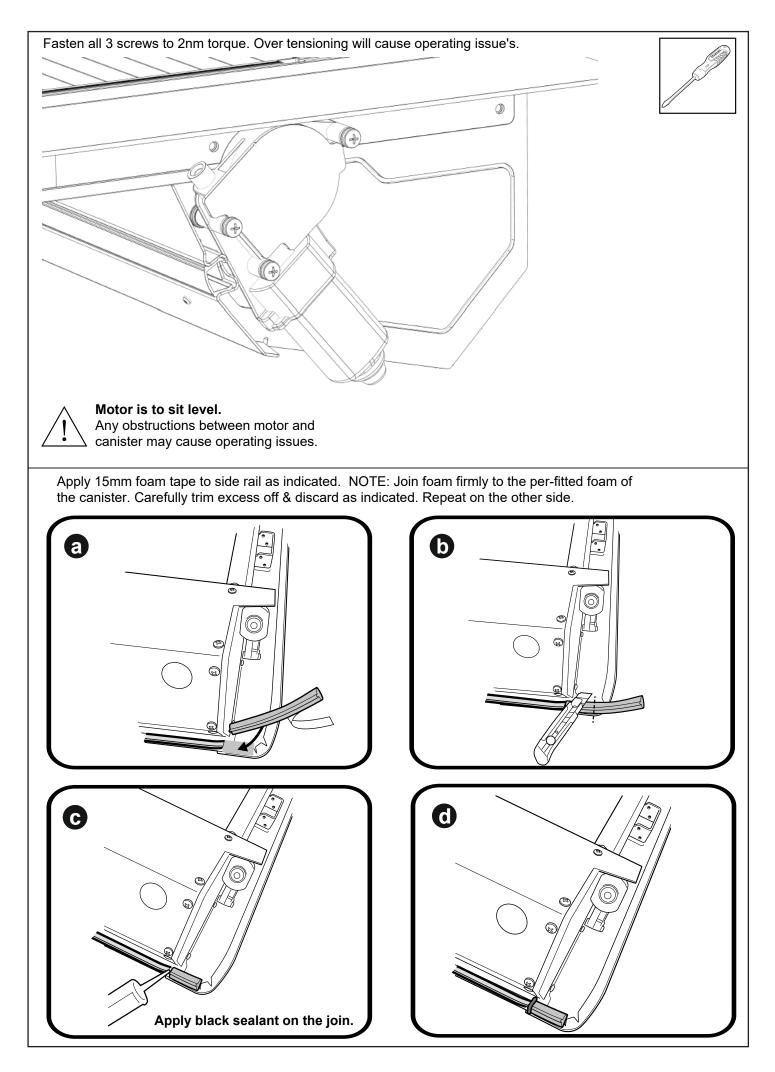

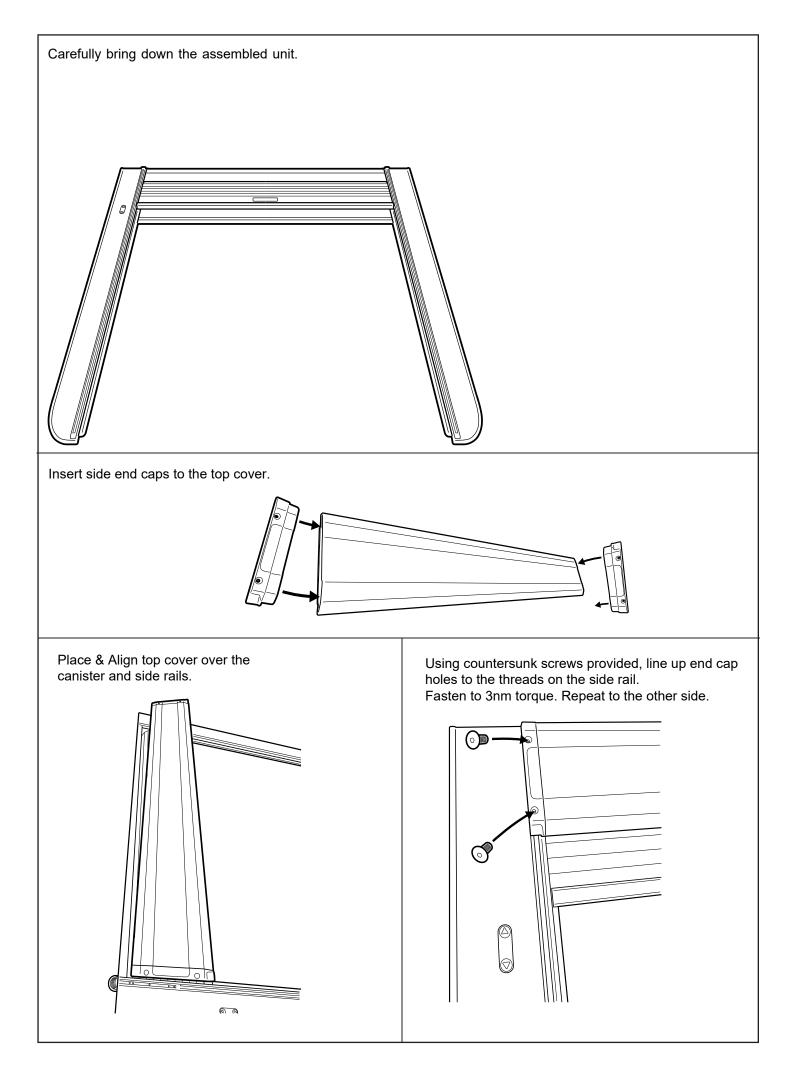


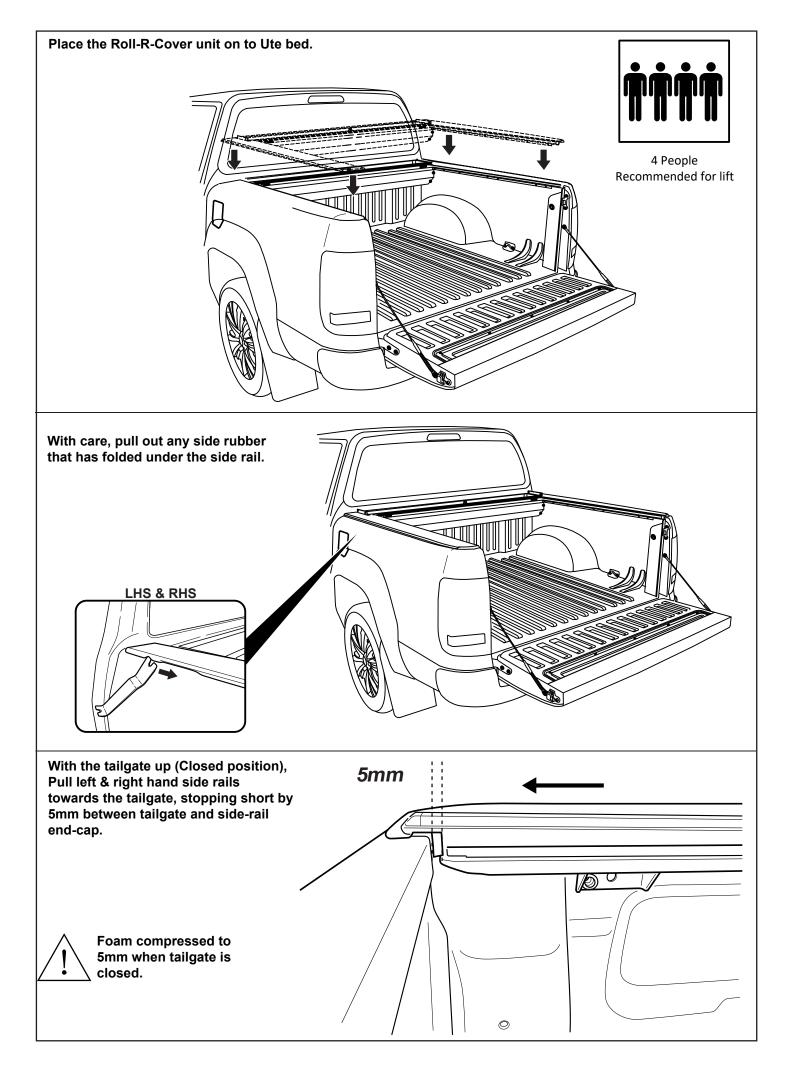

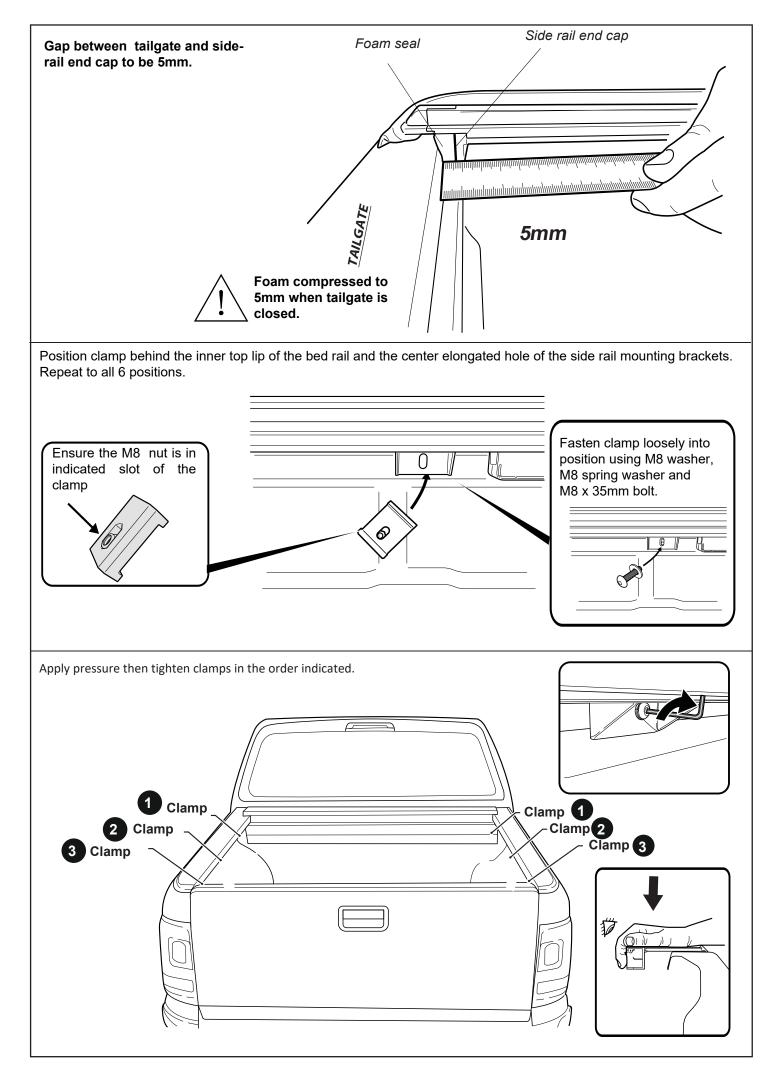


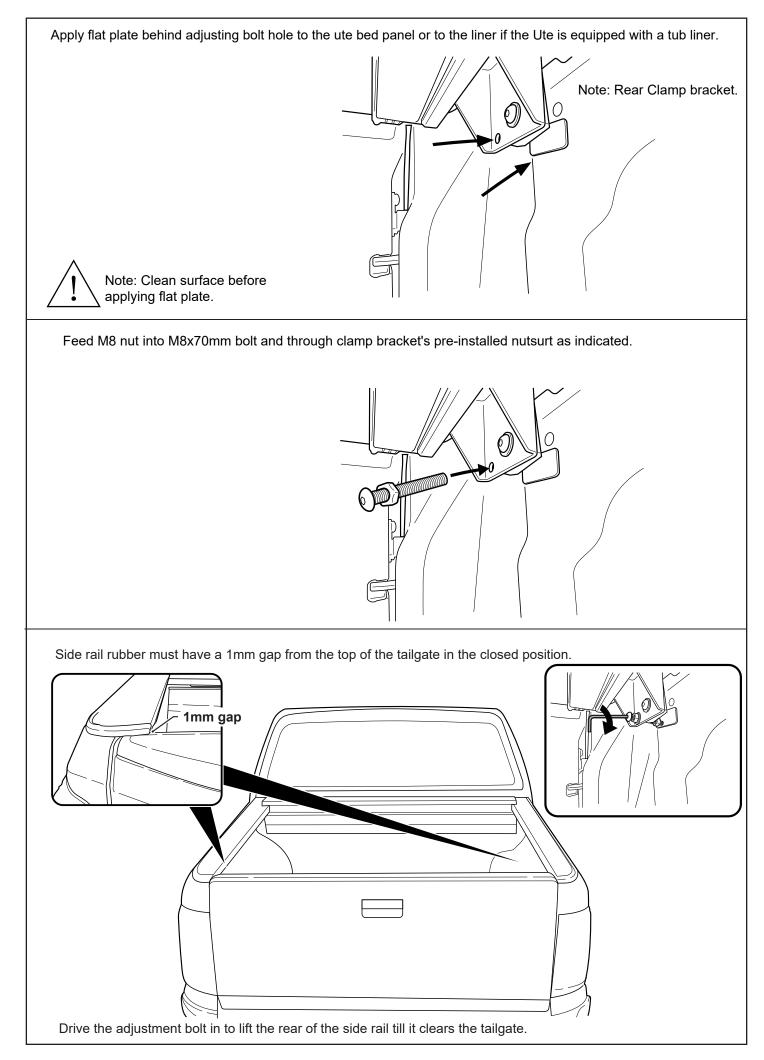


Fasten the M8 nut against clamp bracket.

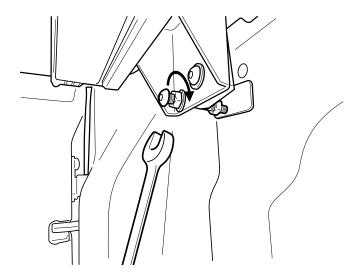

Install front drain pipes through pre-drilled holes of the canister. (RHS/LHS)

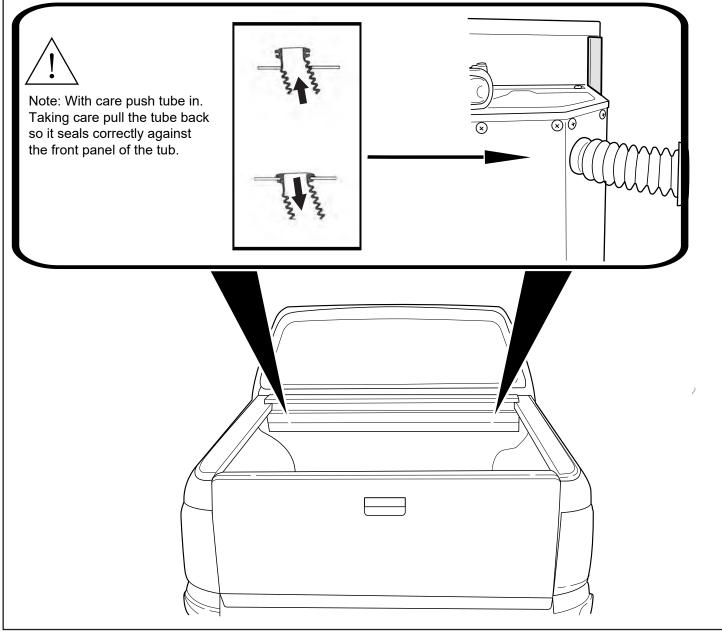

- a. Connect Battery loom S2.75 to Receiver loom.
- b. Carefully connect CI-Loom-short to Receiver loom.

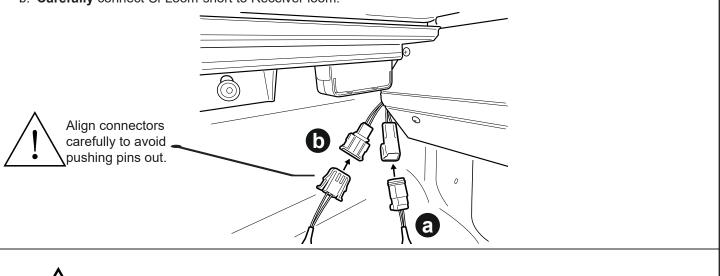



NOTE: 1. To wear in the Roll R Cover please fully open & close the cover approximately 15 times after install is complete.

2. Set your vehicle locking system to unlock all doors with one press of the factory remote unlock button. This setting can be found in your vehicle settings.

Operating instructions:

Press unlock on vehicle key fob to activate controller. When vehicle is unlocked the side rail sensor buttons will be active to control. When vehicle is locked the side rail sensor buttons will be inactive.

Using factory key fob to operate:

Pressing unlock twice on the factory key fob within 4 seconds, will activate the roll r cover to open. Pressing lock twice on the factory key fob within 4 seconds, will activate the roll r cover to close.

Vehicle proximity:

Tapping the proximity twice to open or lock the car door will act exactly the same way as the key fob being pressed twice.

