

WWW.HSPUTELIDS.COM

Part No: J4R-S3

INSTALLATION INSTRUCTIONS

To suit Jeep Gladiator (With Trail Rail System)





INSTALLATION TIME: 1 hours and 45 minutes (Approximately)

IMPORTANT	Do not stand/sit or rest heavy objects on Roll R Cover Humans or animals are not to be under the closed cover at any given time Tonneau Cover is not dust or water tight If contact with volatile chemicals occur, clean Cover with mild detergent and water solution		
Care Instructions	Read Instructions fully before commencing installation. Clean Cover with a mild detergent and water solution Do not use abrasive cleaners or solvents Refer to manufactures instructions applicable to power drill. Protect Tub floor against scratches during installation process.		
Maintenance	Refer to Maintenance instructions.		
Tools Required	Pen / Marker Centre Punch Drill & Drill bits Caulking Gun Silicon - Non Acetic	Scissors & KnifeSpanner & SocketTape measureHolesawFiling tool	 Soapy water solution Allen Key set Screw driver Rust Inhibitor Trim Removal Tool


PERSONAL PROTECTIVE EQUIPMENT:








Hearing Protection

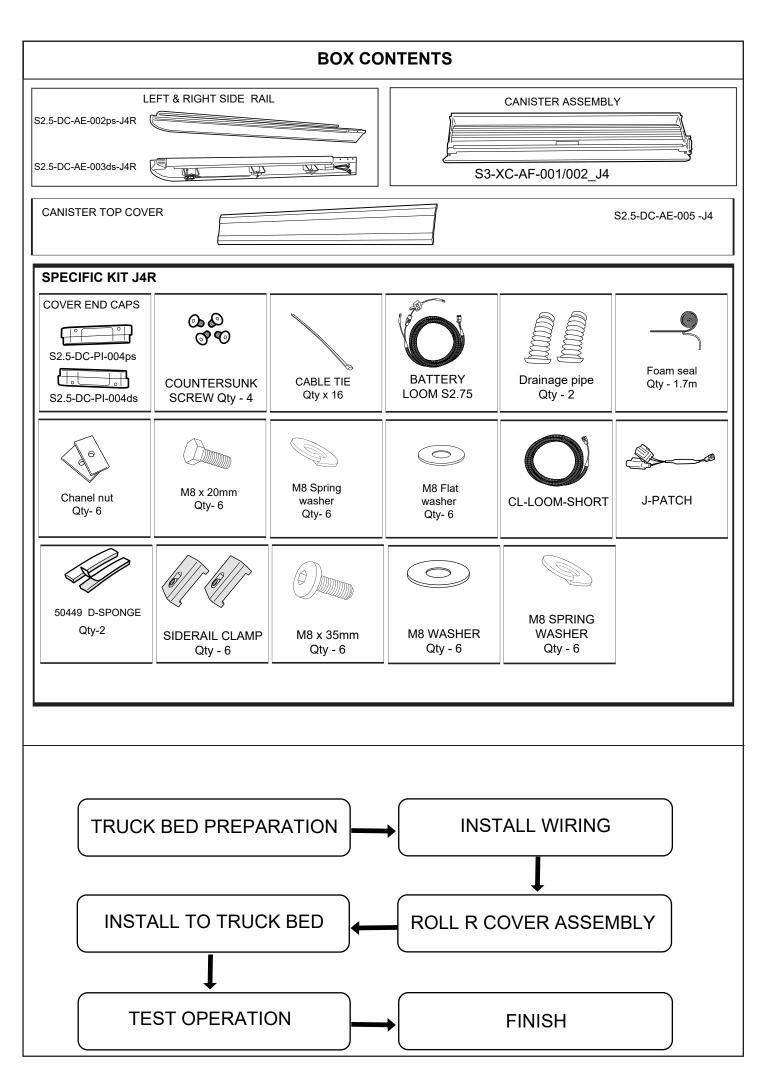





Clean are as indicated.

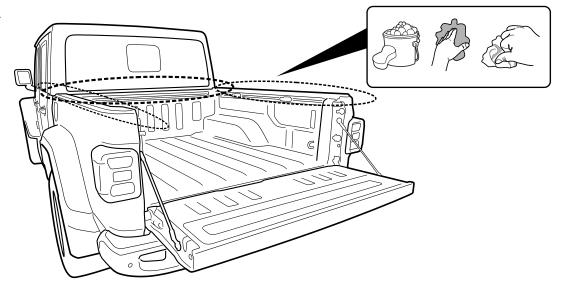


Remove and discard the front tie down rail.

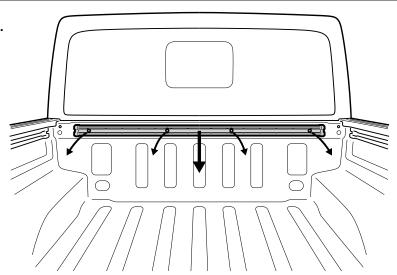


Drill the indicated hole to 19mm

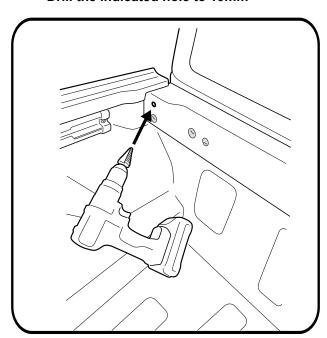


Apply rust inhibitor

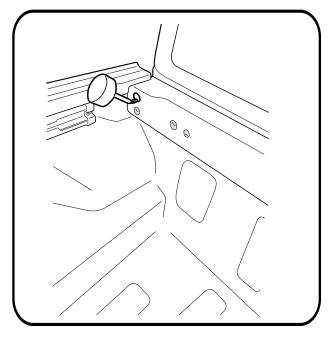

Slide out all side inner rail tie downs and retain.

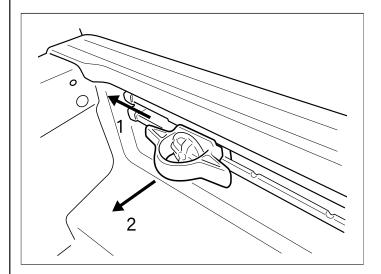

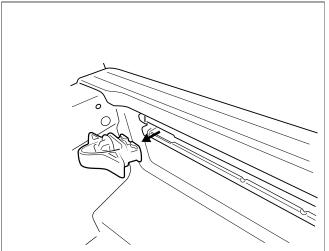

Measure down from top of headboard 210mm & 135mm from inside wall of bed as shown. (or 115mm if measuring from the side of the top rail) Repeat to the other side. Using a 30mm hole-saw drill through tub front panel, file away any sharp edges. Apply anti rust coating. Repeat to other side.




 











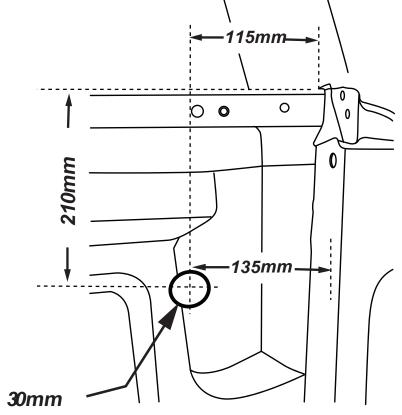




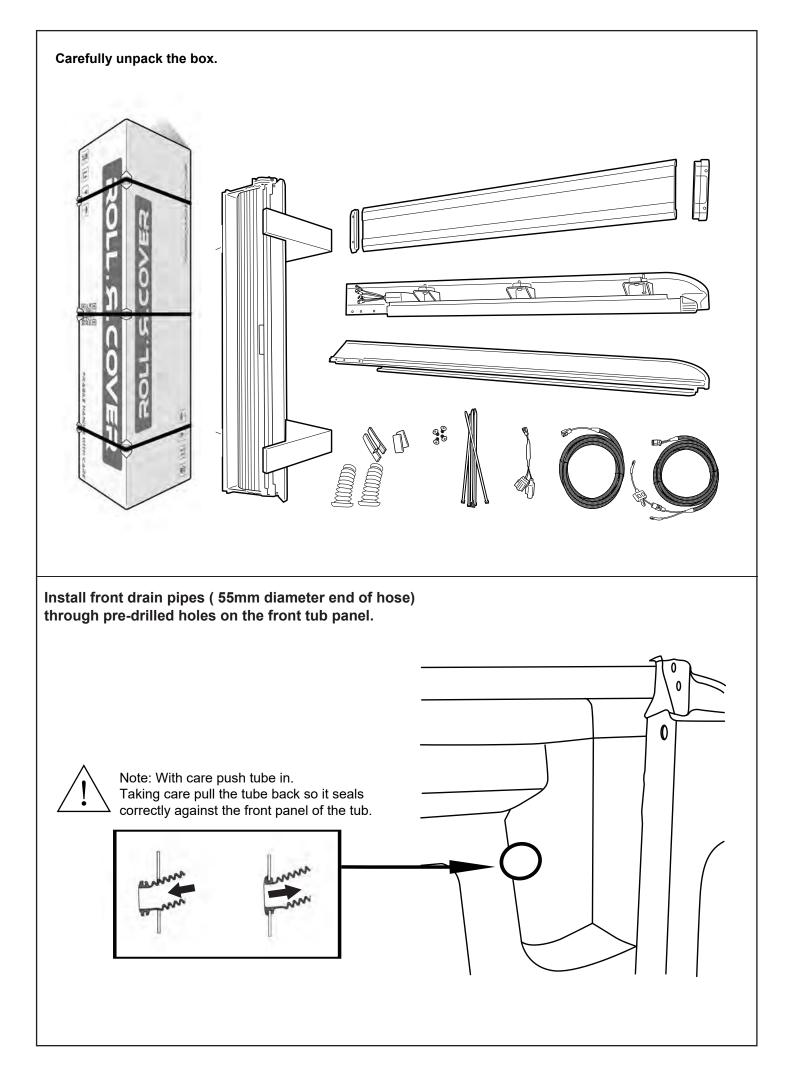

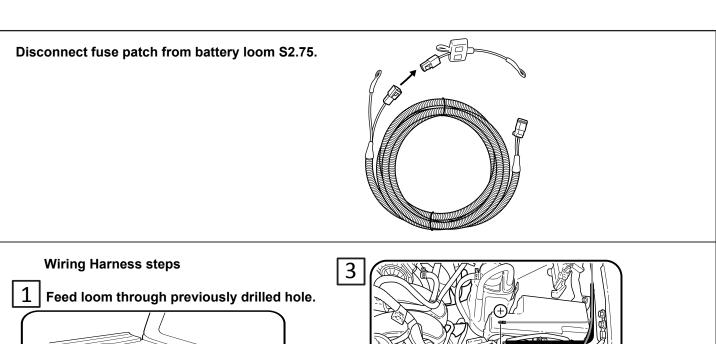

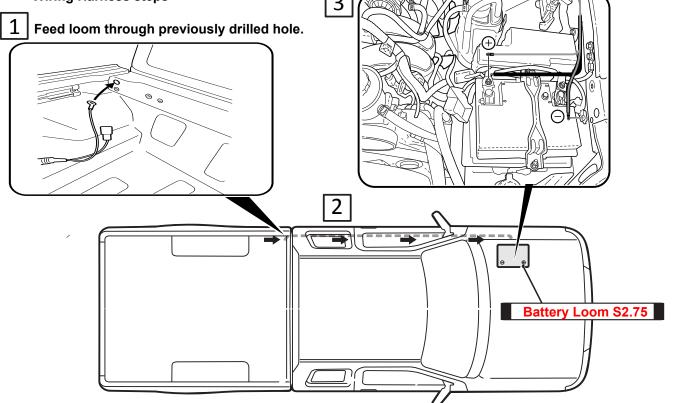


Run the wiring from the front corner cavity (leaving 200mm in the tub) to the battery over the chassis rail. Making sure to keep away from hot obstructions and cable tie every 400mm. Reconnect fuse patch to battery loom S2.75, now attach fuse patch to positive of battery and earth to the body of the Ute.

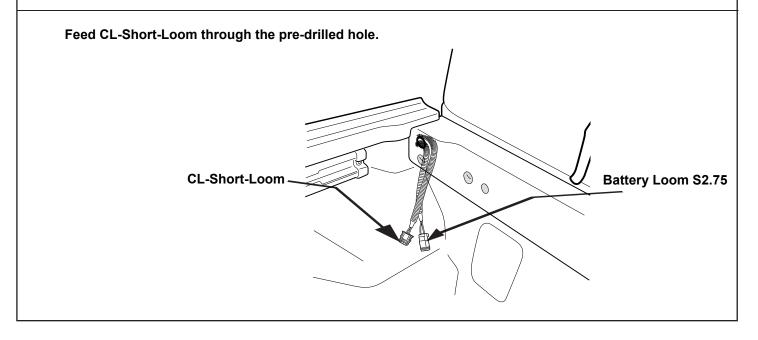

Run foam seal provided along the front (inside edge towards tailgate) of the tub to make head-rail level with sides.


Foam seal

Remove tail gate cover. Locate connector plugged into factory actuator behind tailgate handle.

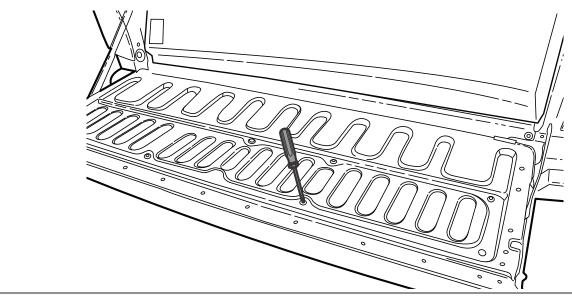



Run CL-short loom harness into the tailgate. Cable tie along the way to secure the harness.

- 1. Connect J-Patch to actuator.
- 2. Connect factory loom to J-patch.
- 3. Connect J-patch to CL-Short-Loom.

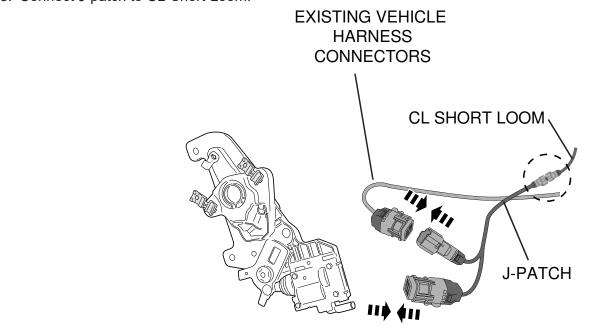


 Slide one channel nut into tiedown rail, followed by tie down. 1. Channel nut 2. Tie down 3. Channel nut 4. Tie down 5. Channel nut Repeat to the other side. 2 900

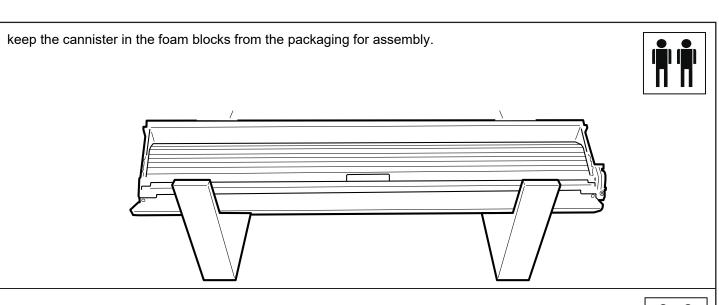






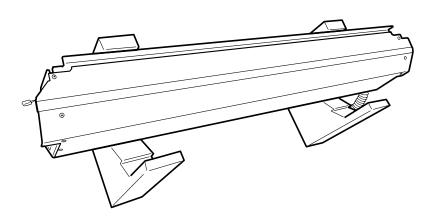





Disengage motor from the axle by unfastening the 3 Screw as indicated. Retain all parts.

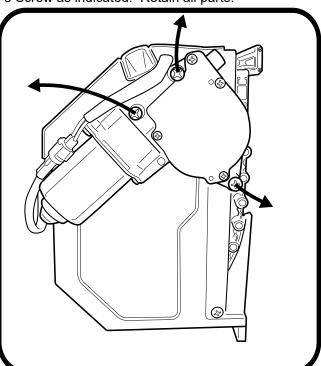


Remove and retain the 3 screw from the canister as indicated.

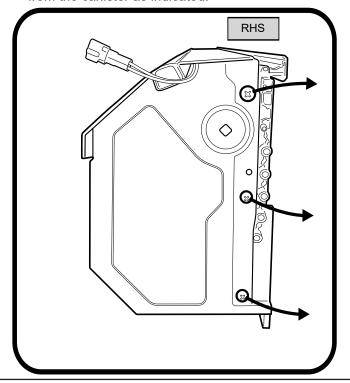


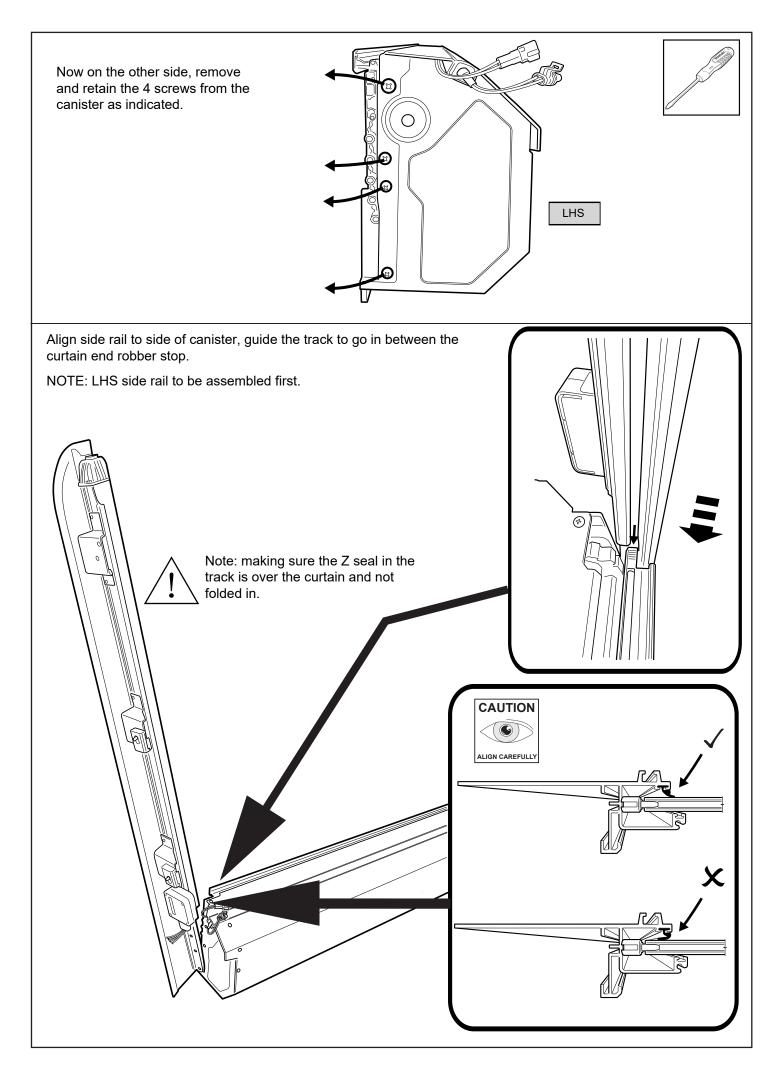


Fasten the side rail using the retained screws, spring washer and flat washer.



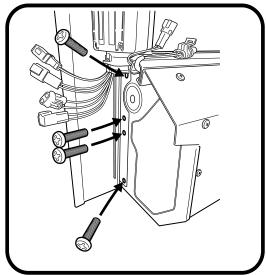


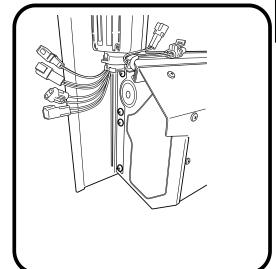



Connect motor receiver

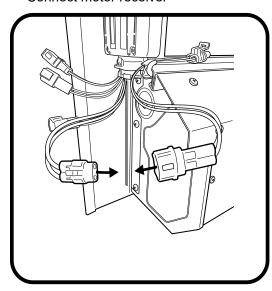


Connect LED Loom to receiver

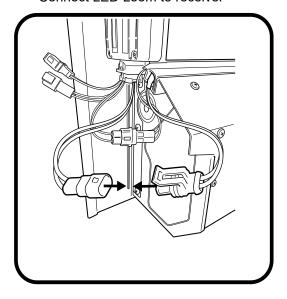


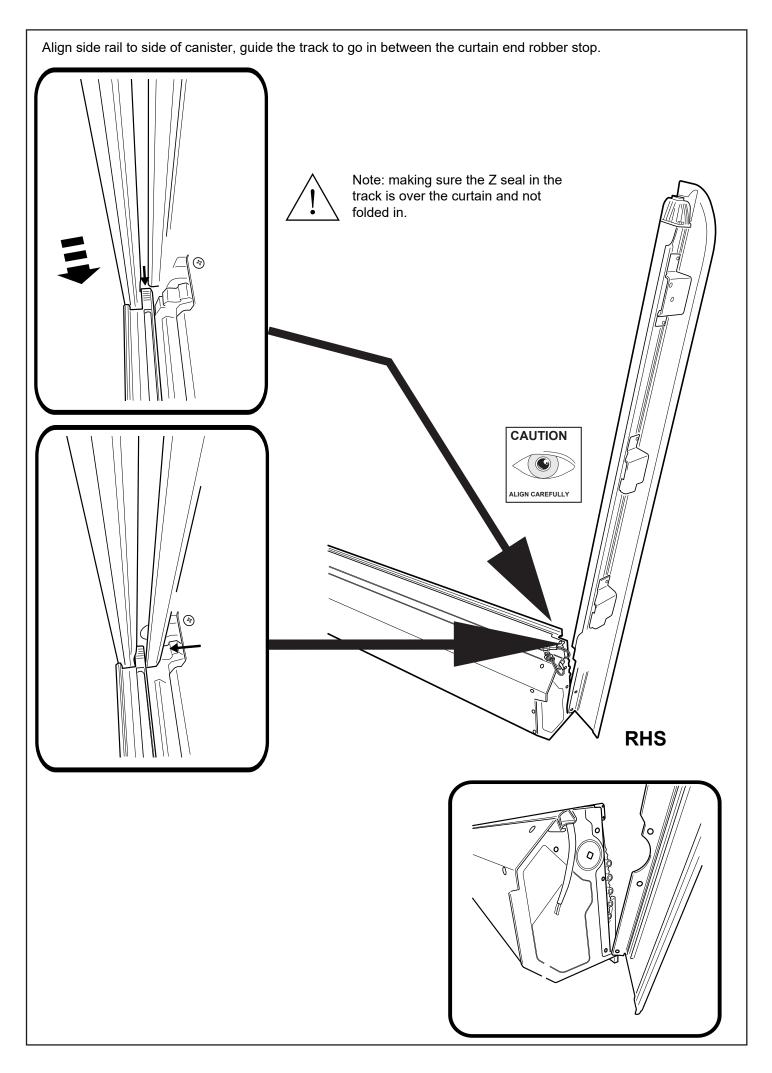

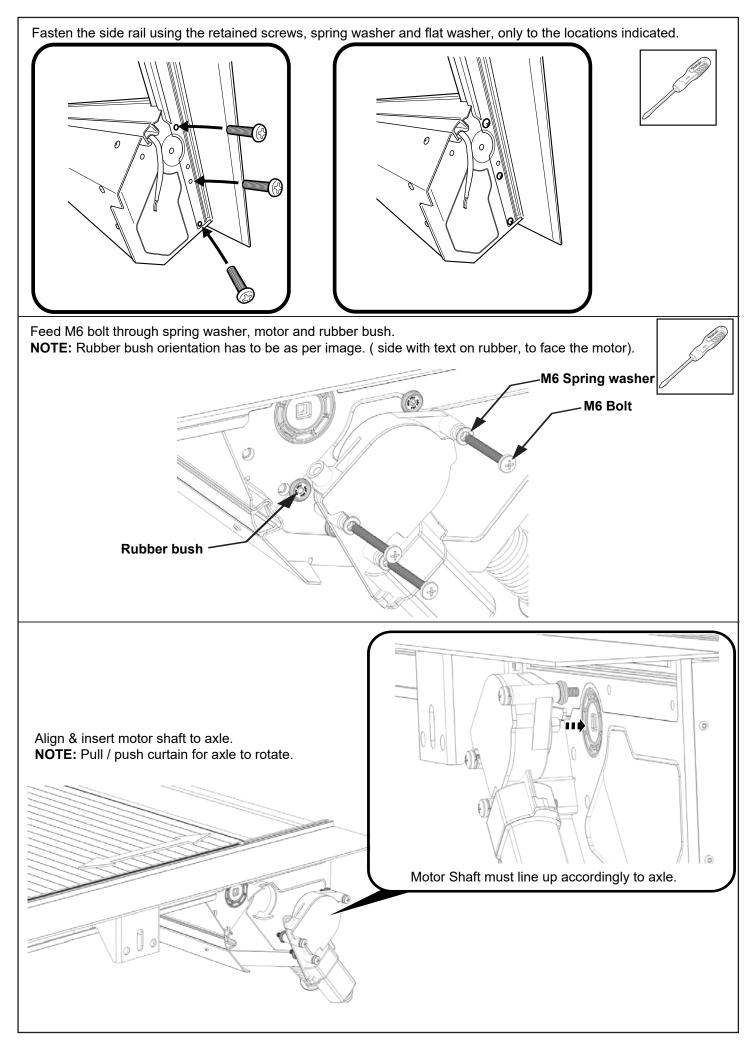


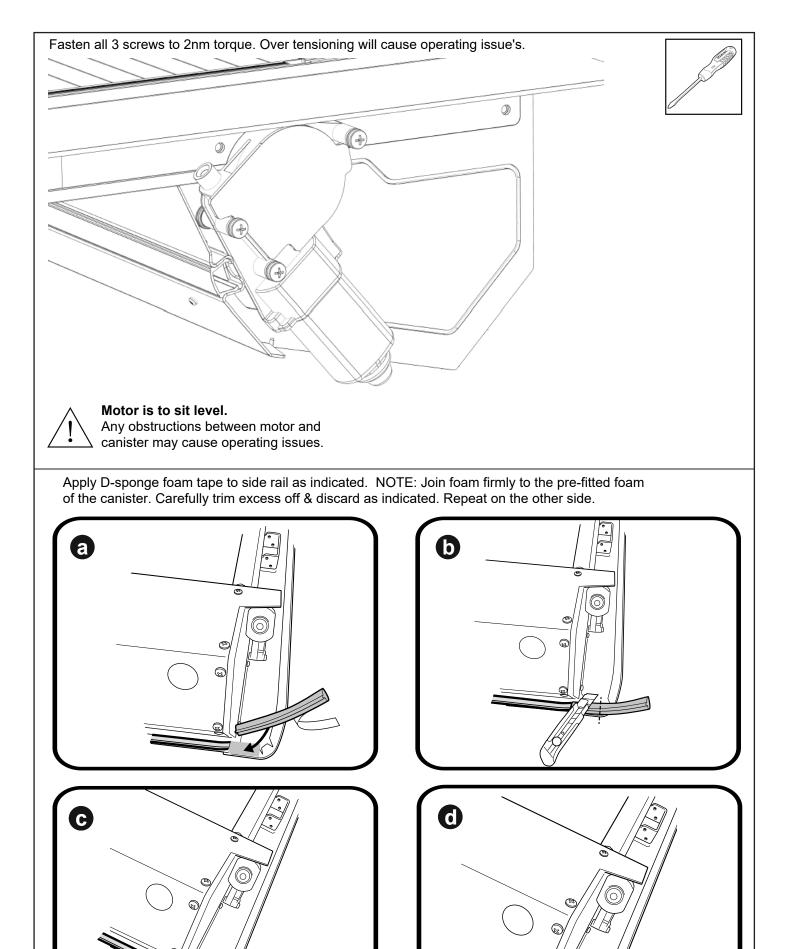


Apply black sealant on the join.

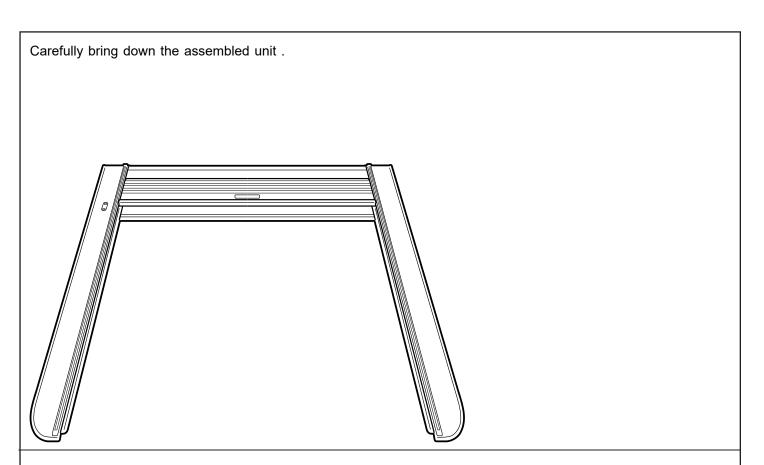

Insert side end caps to the top cover.

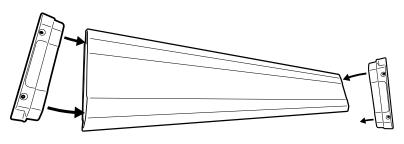



Place & Align top cover over the canister and side rails.

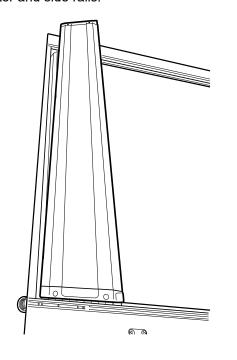



Using countersunk screws provided, line up end cap holes to the threads on the side rail.


Fasten to 3nm torque. Repeat to the other side.

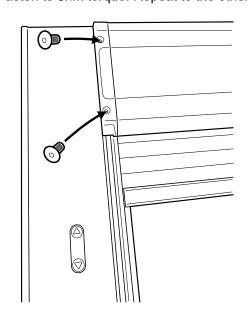

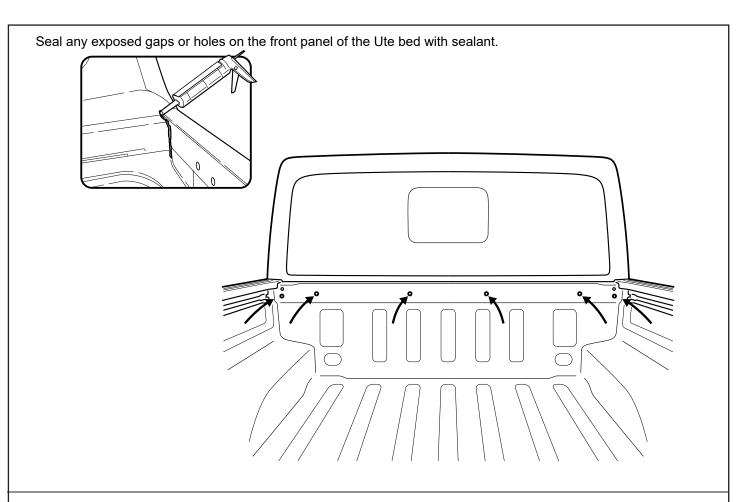


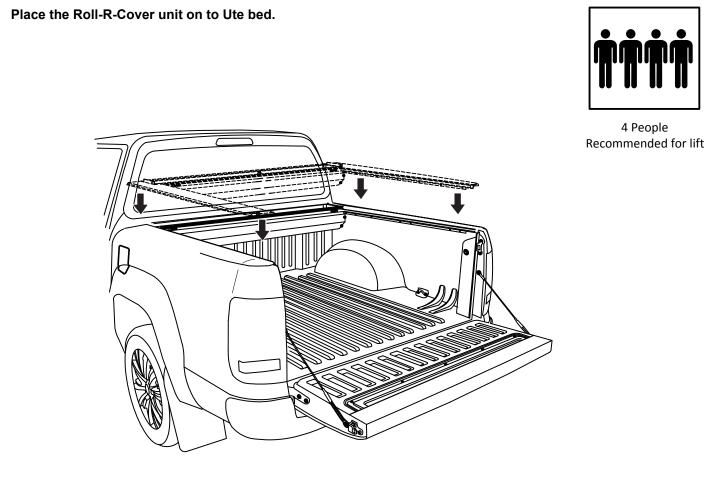


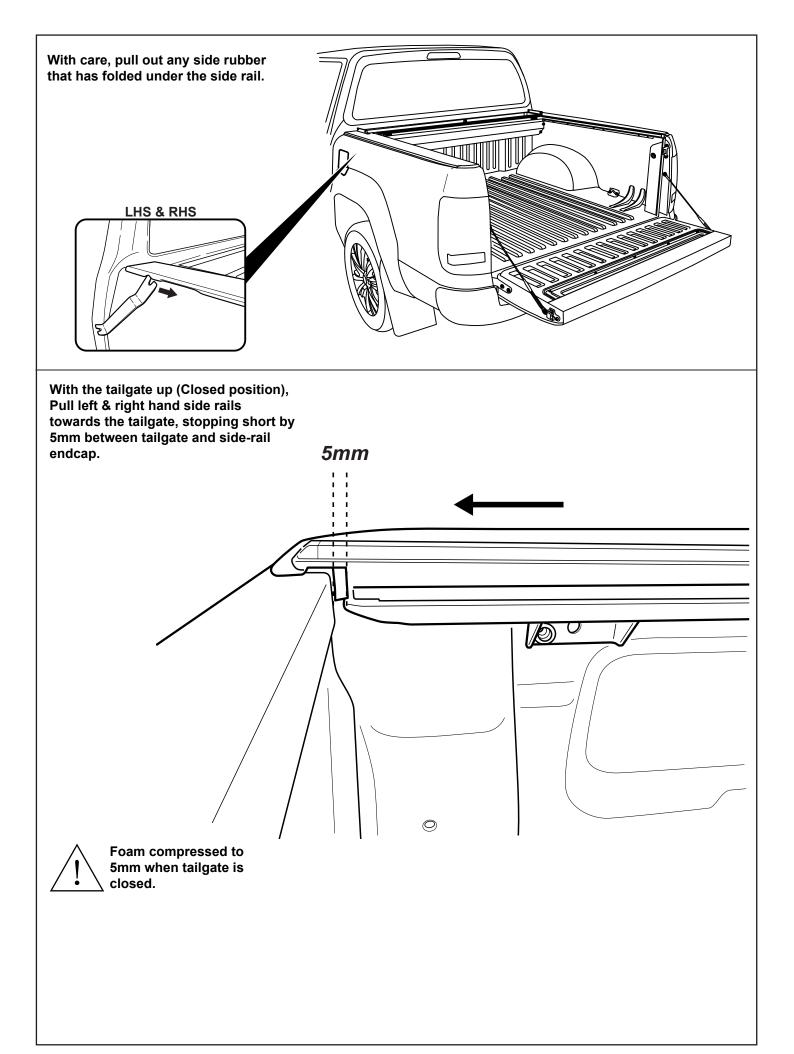


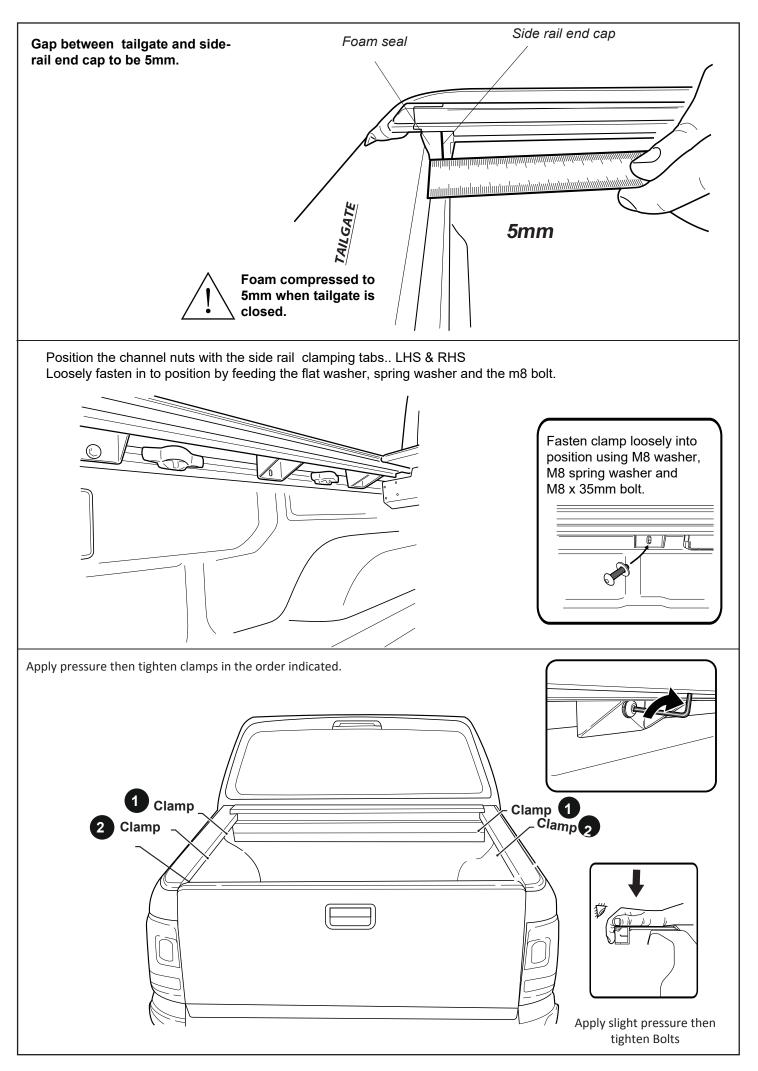

With the tailgate closed, hold the side rail up, to allow the side rail seal to clear the tailgate by 1mm.

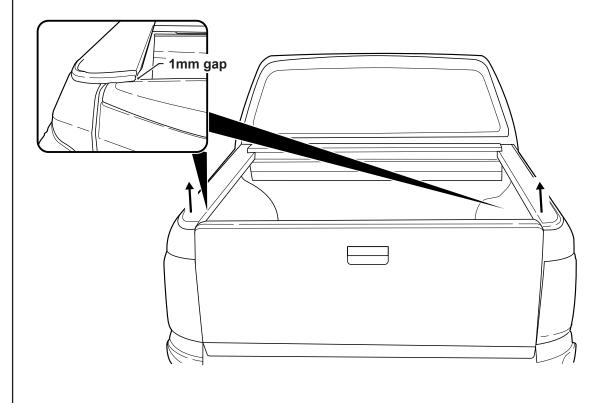

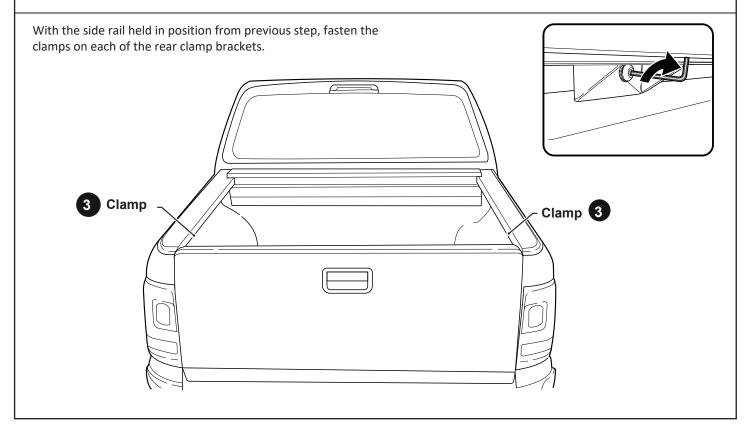

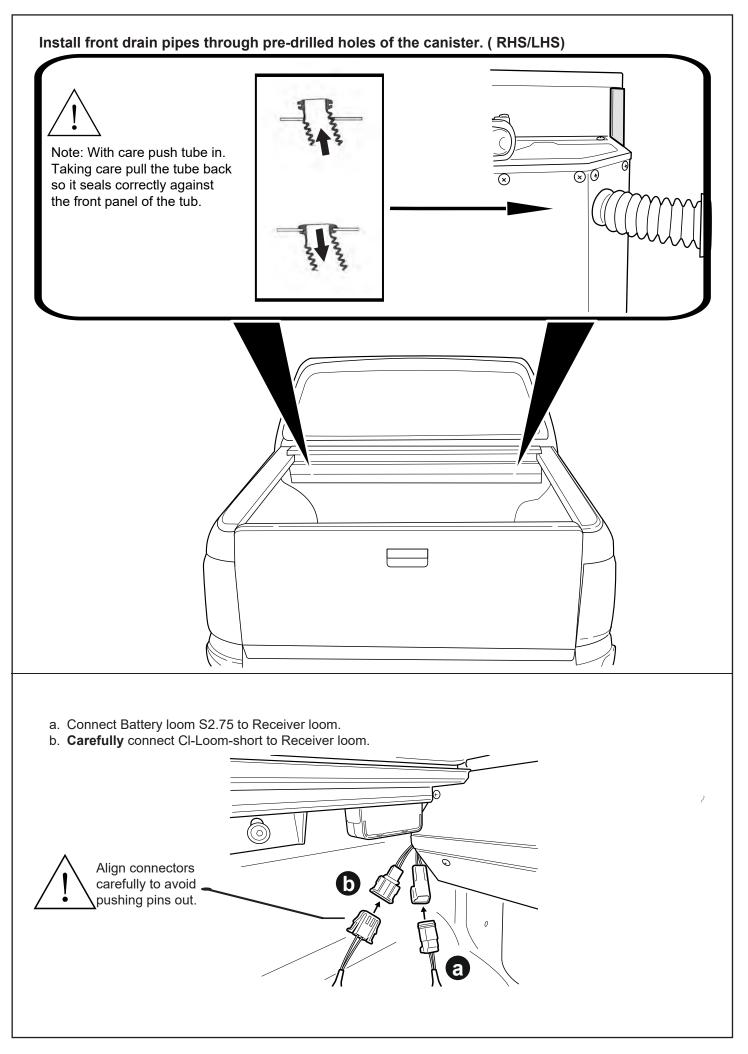



NOTE: 1. To wear in the Roll R Cover please fully open & close the cover approximately 15 times after install is complete.

2. Set your vehicle locking system to unlock all doors with one press of the factory remote unlock button. This setting can be found in your vehicle settings.

Operating instructions:

Press unlock on vehicle key fob to activate controller.

When vehicle is unlocked the side rail sensor buttons will be active to control.

When vehicle is locked the side rail sensor buttons will be inactive.

Using factory key fob to operate:

Pressing unlock twice on the factory key fob within 4 seconds, will activate the roll r cover to open. Pressing lock twice on the factory key fob within 4 seconds, will activate the roll r cover to close.



Vehicle proximity:

Tapping the proximity twice to open or lock the car door will act exactly the same way as the key fob being pressed twice.

