

WWW.HSPUTELIDS.COM

Part No: MBT4R-S3

INSTALLATION INSTRUCTIONS

MAZDA BT-50 Dual Cab MY21, 07/2020+





INSTALLATION TIME: 1 hours and 45 minutes (Approximately)

IMPORTANT	Do not stand/sit or rest heavy objects on Roll R Cover Humans or animals are not to be under the closed cover at any given time Tonneau Cover is not dust or water tight If contact with volatile chemicals occur, clean Cover with mild detergent and water solution		
Care Instructions	Read Instructions fully before commencing installation. Clean Cover with a mild detergent and water solution Do not use abrasive cleaners or solvents Refer to manufactures instructions applicable to power drill. Protect Tub floor against scratches during installation process.		
Maintenance	Refer to Maintenance instructions.		
Tools Required	Pen / Marker Centre Punch Drill & Drill bits Caulking Gun Silicon - Non Acetic	Scissors & KnifeSpanner & SocketTape measureHolesawFiling tool	 Soapy water solution Allen Key set Screw driver Rust Inhibitor Trim Removal Tool


PERSONAL PROTECTIVE EQUIPMENT:









Hearing Protection

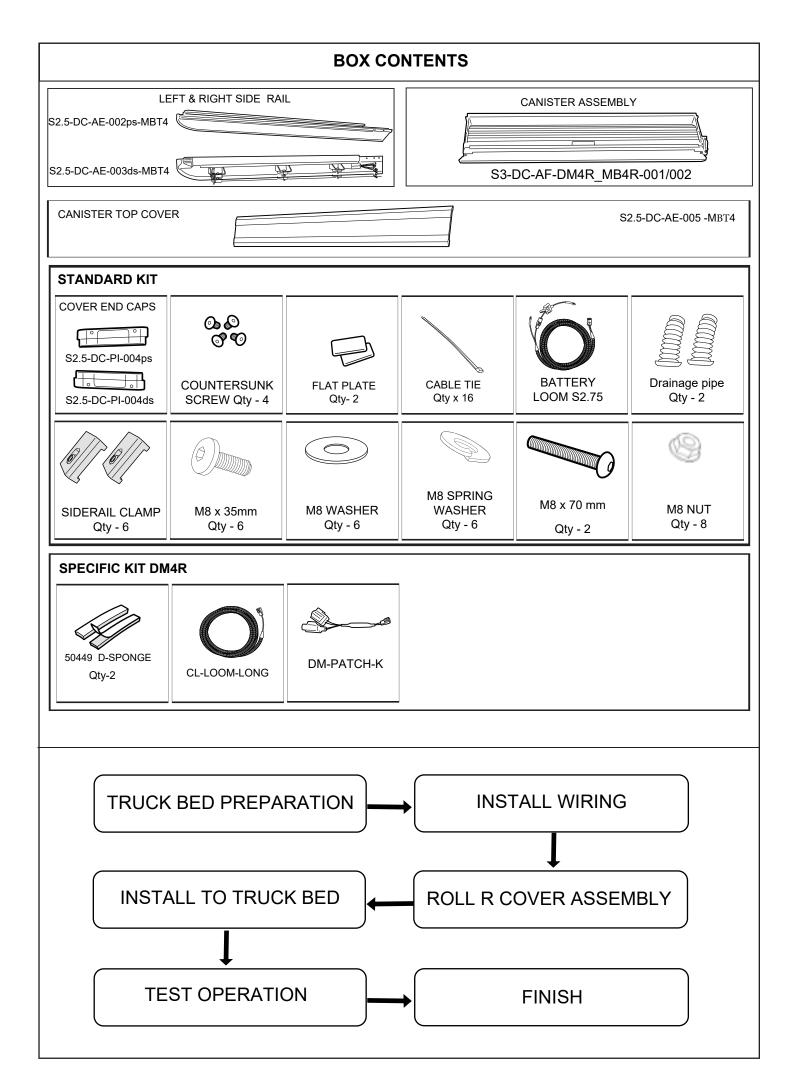

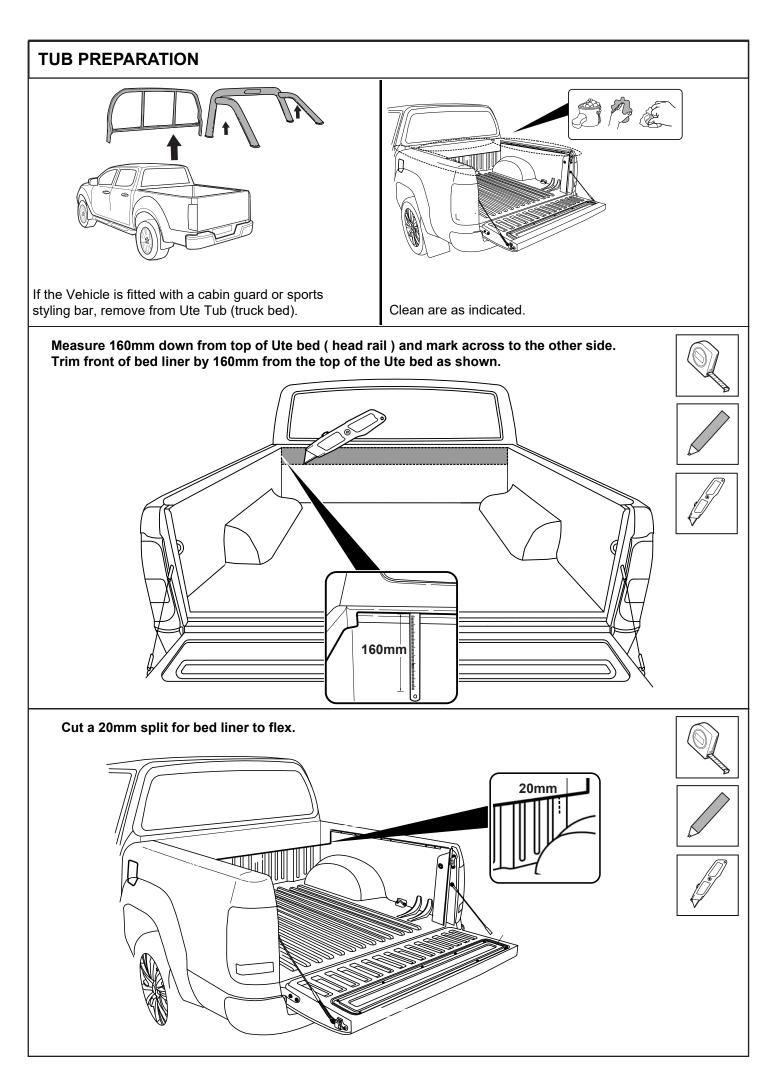

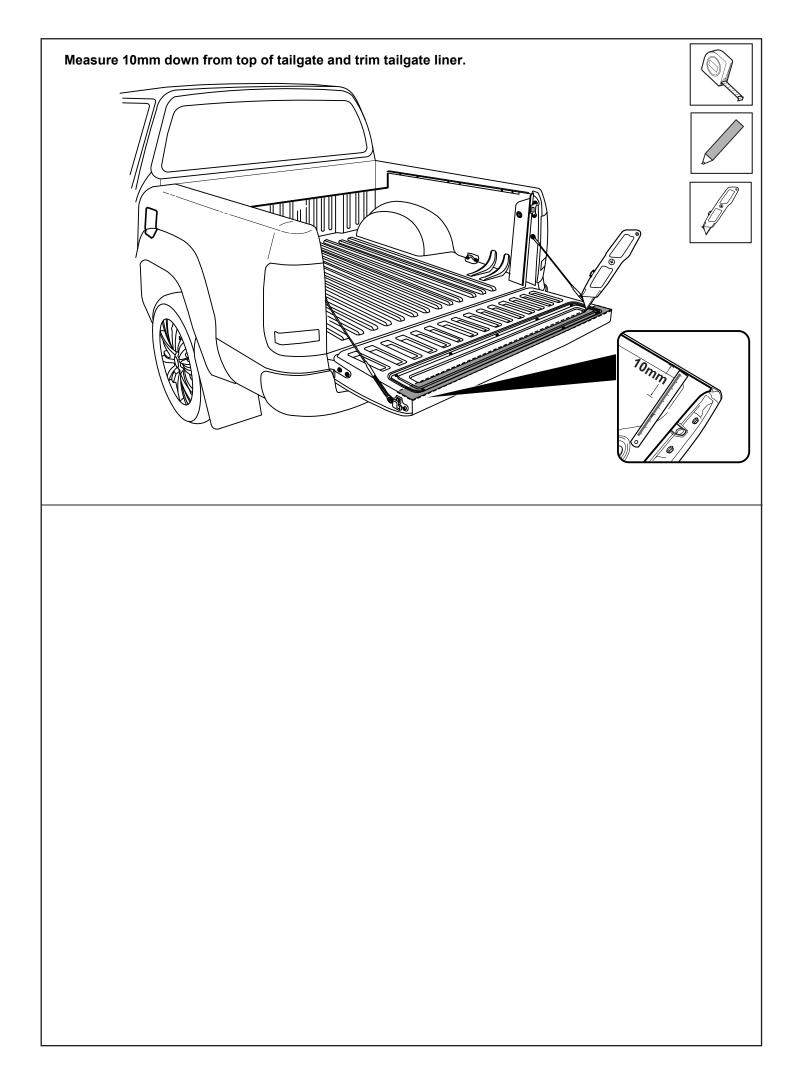


Measure down from top of headboard 215mm & 100mm from inside wall of bed liner as shown. Repeat to the other side. Using a 50mm hole-saw drill the liner only as indicated.










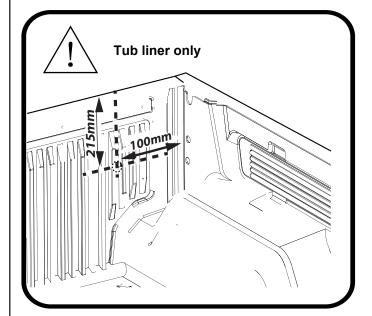

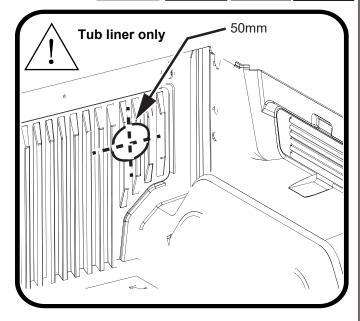

Measure down from top of headboard 215mm & 100mm from inside wall of bed as shown. Repeat to the other side.

Using a 30mm hole-saw drill through tub front panel, file away any sharp edges. Apply anti rust coating. Repeat to other side.




 










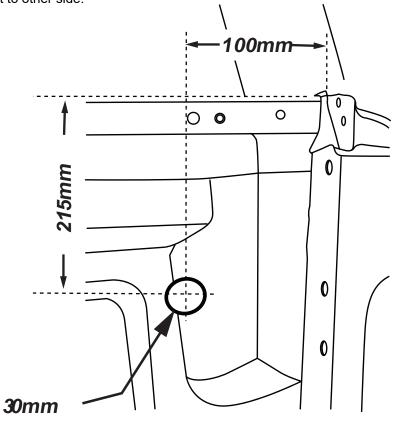





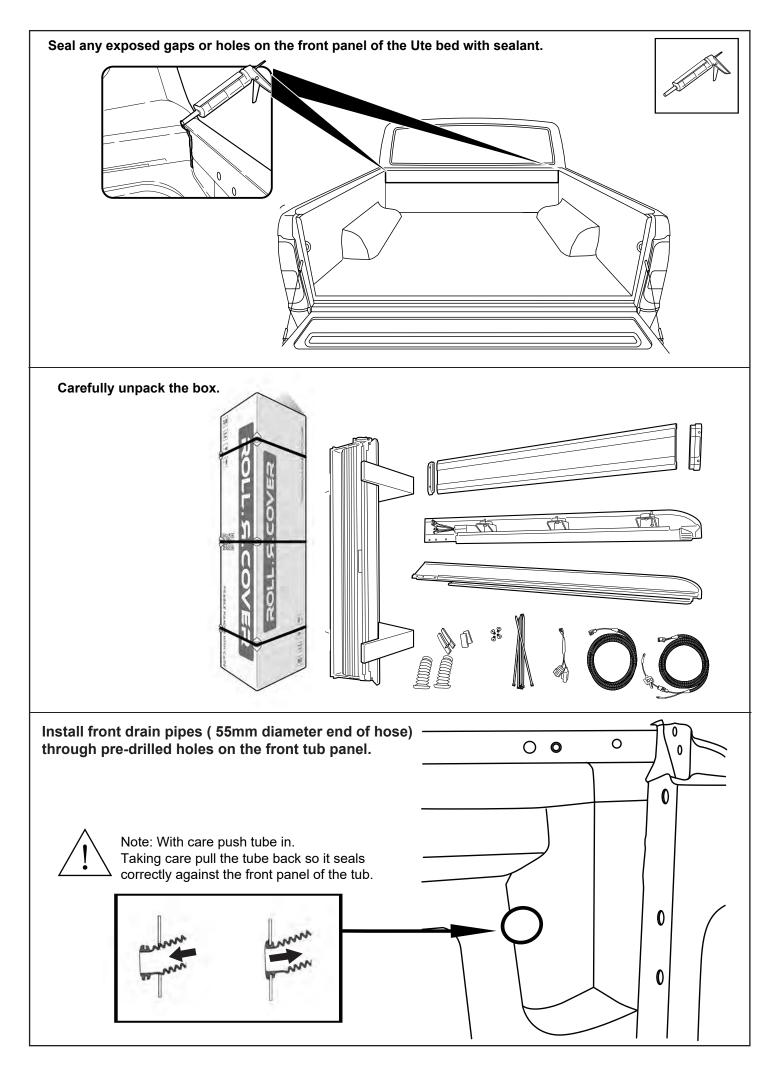


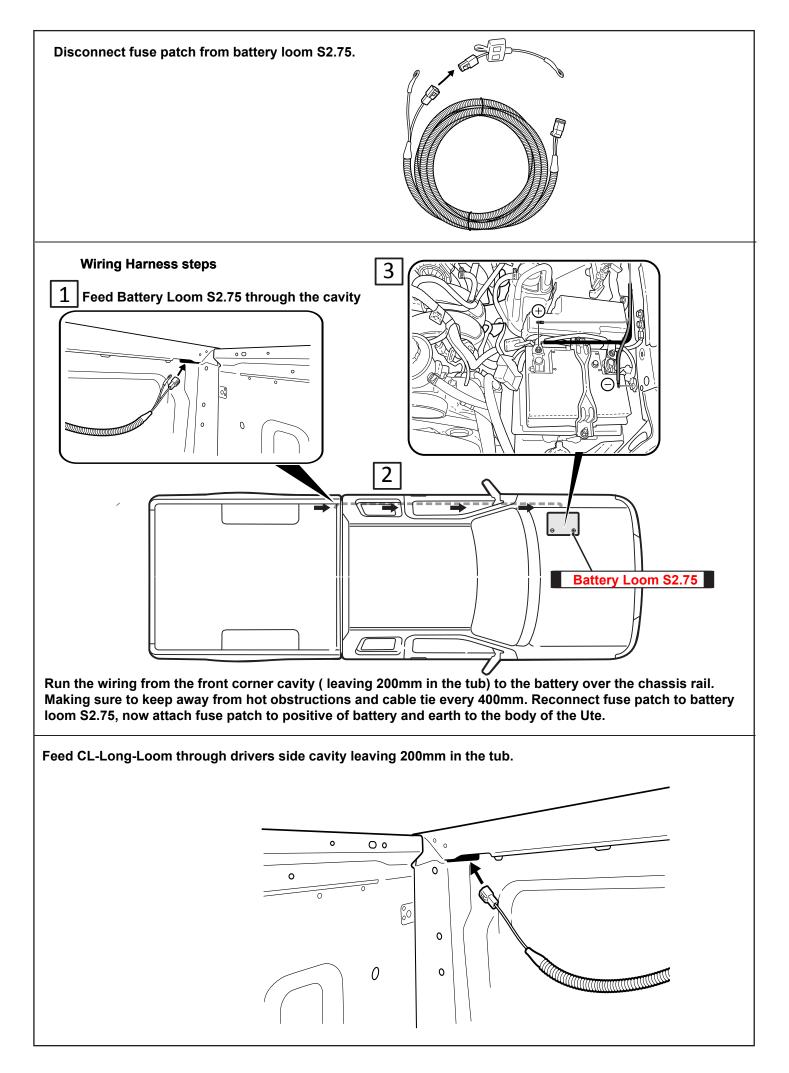

Run wiring from front tub corner cavity to drivers side kick panel. Cable tie wiring every 500mm over chassis rail. Find the large grommet on the firewall, make a small incision & run the loom through it to enter the cab and towards the kick panel. Seal accordingly.

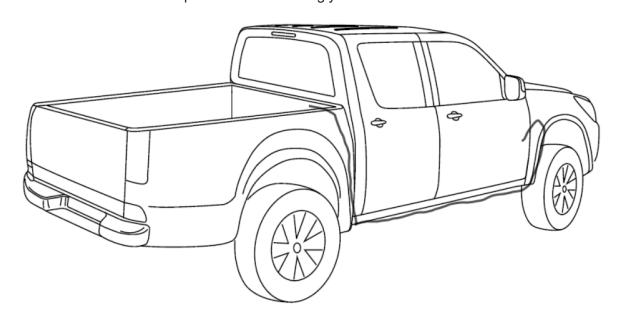

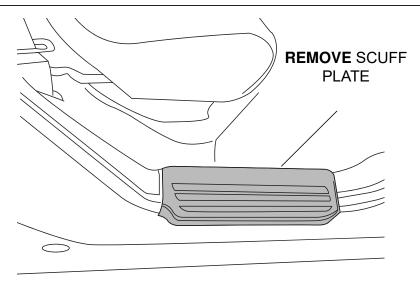

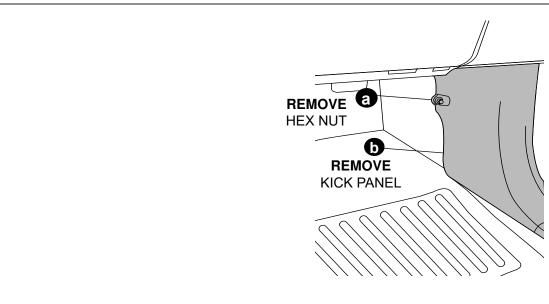


Disconnect the indicated plug.




NOTE: image used is for illustration purpose only. Locate the white plug that matches the DM-patch provided with the kit.

Connect DM-PATCH to the vehicle harness.

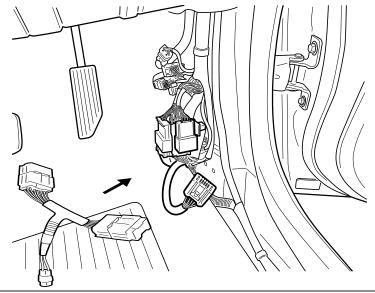


Plug CL-LOOM-LONG to DM-PATCH wiring.


Cable tie overhang of wires and assemble all panels removed earlier.

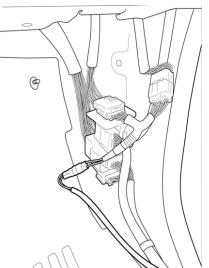






NOTE: image used is for illustration purpose only.

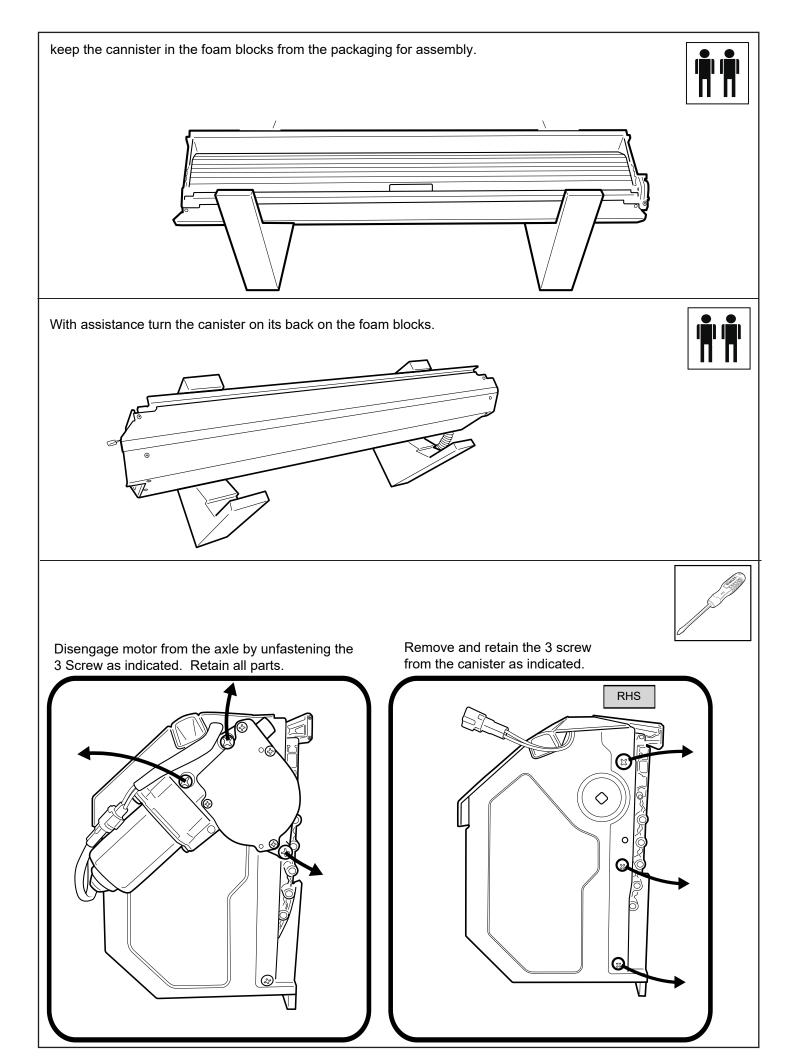


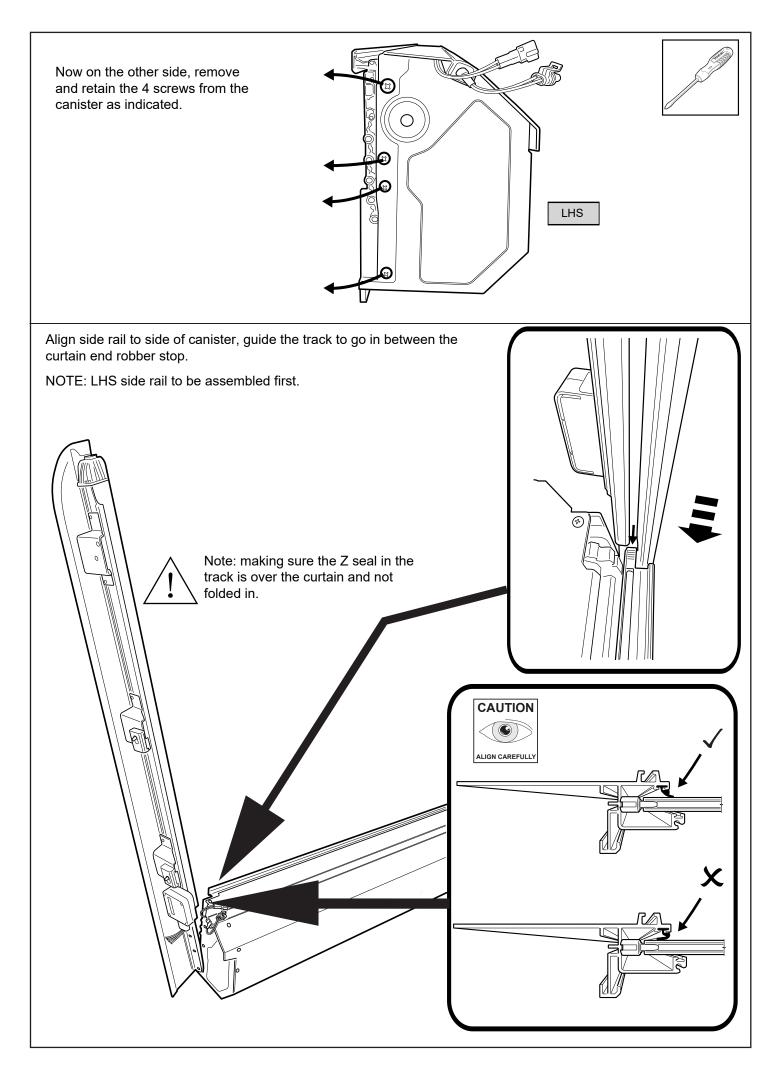


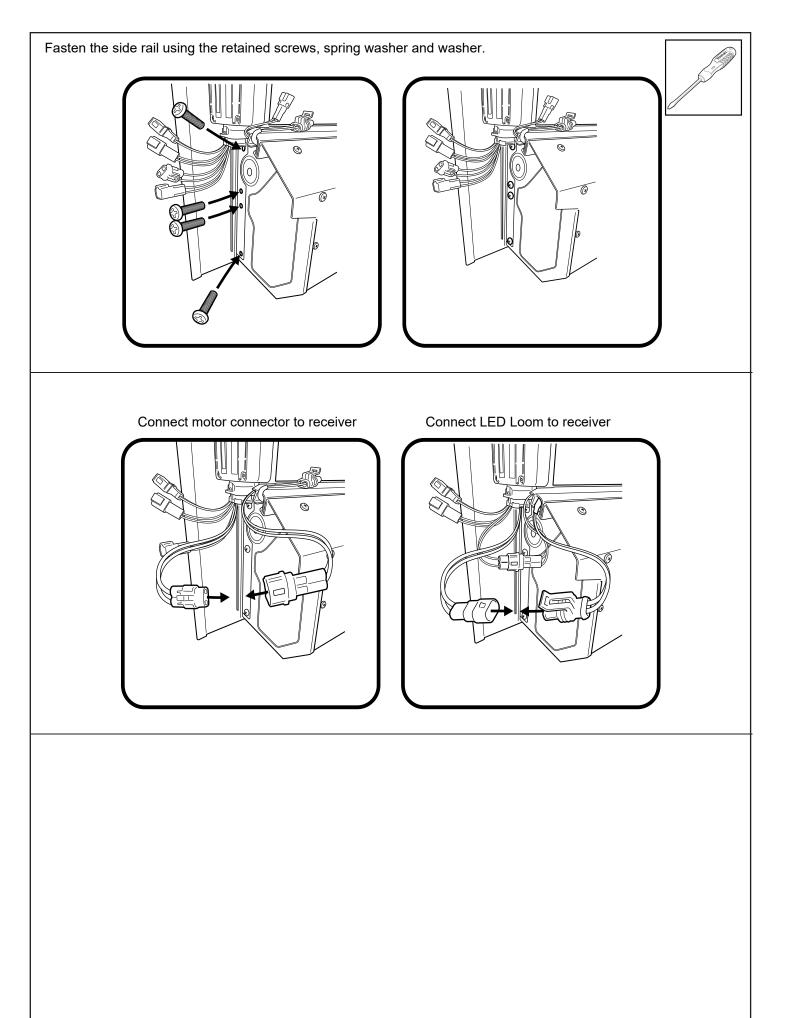

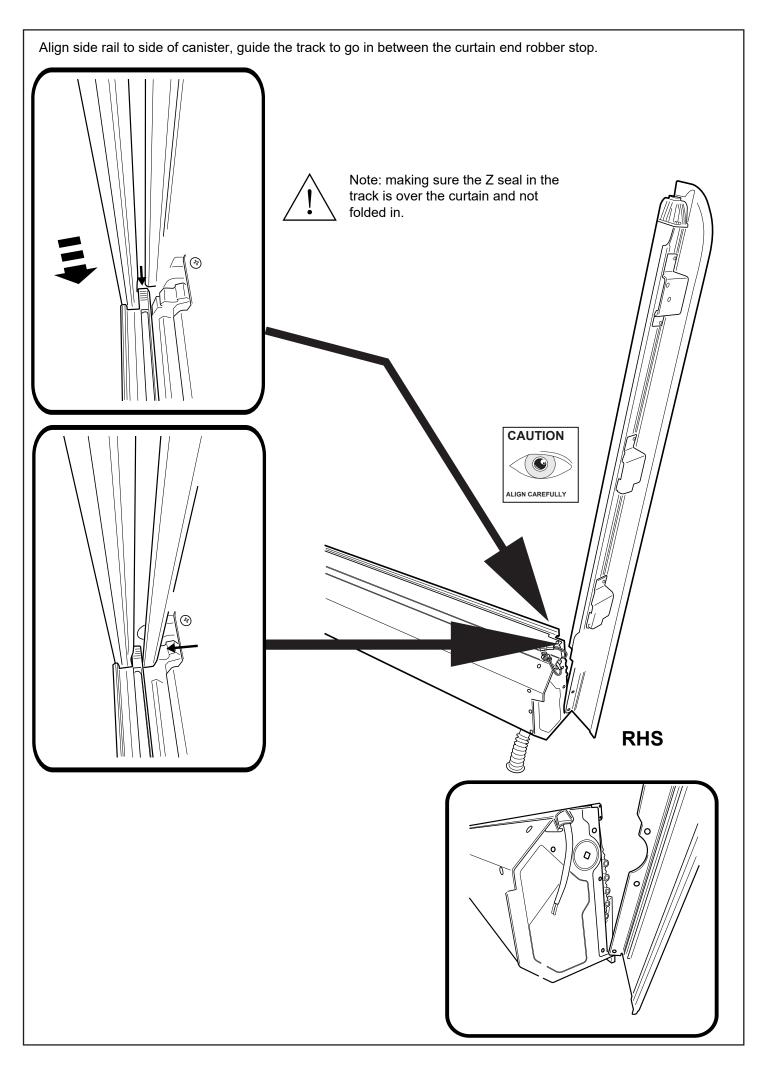


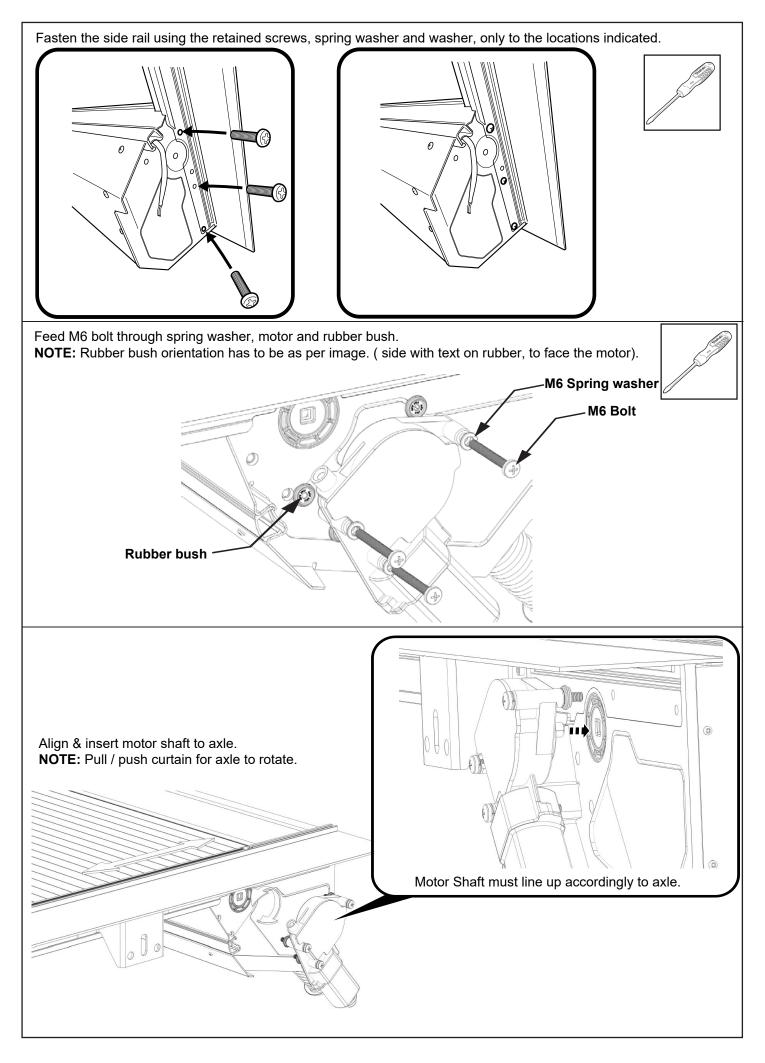

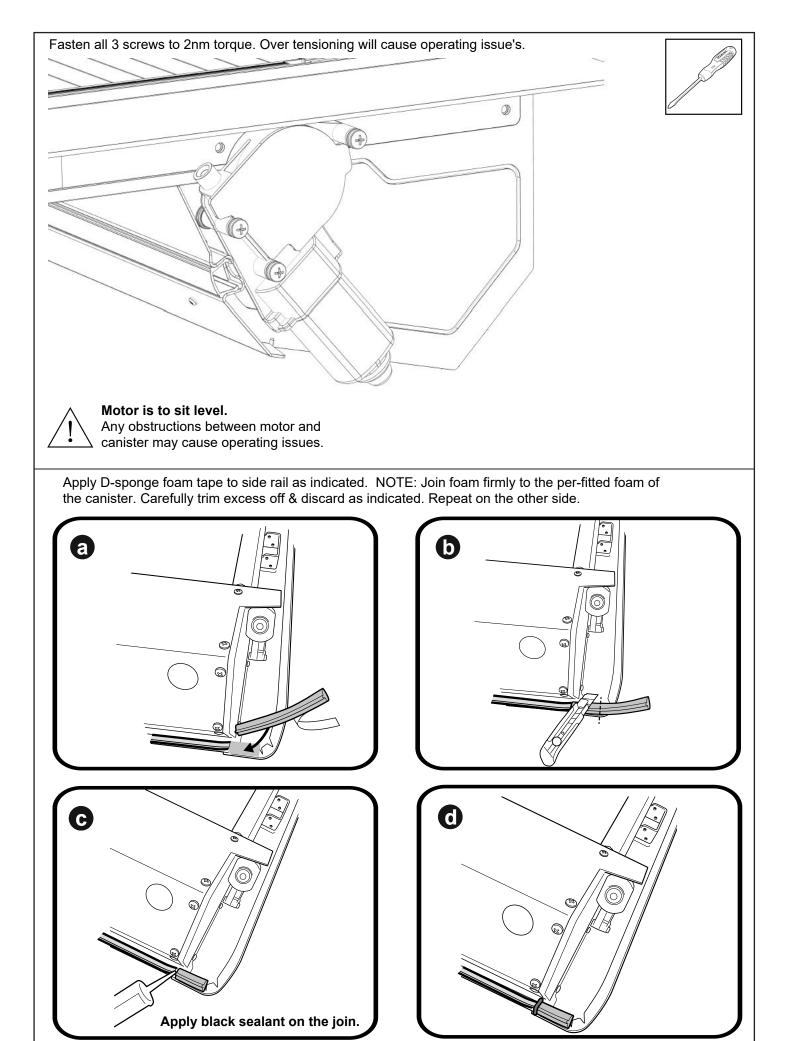


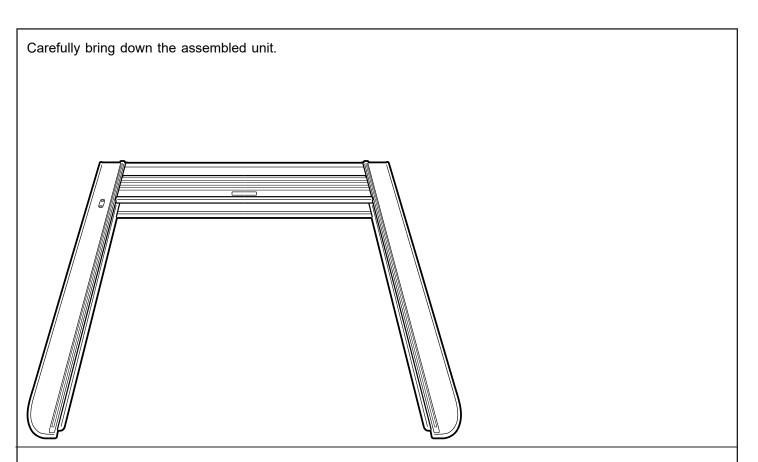

Insert side end caps to the top cover.

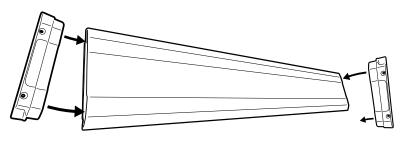



Place & Align top cover over the canister and side rails.

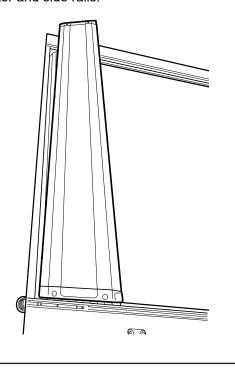


Using countersunk screws provided, line up end cap holes to the threads on the side rail.


Fasten to 3nm torque. Repeat to the other side.

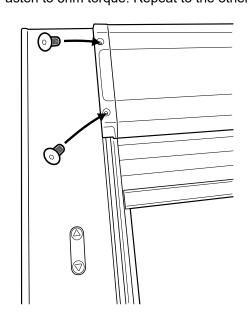

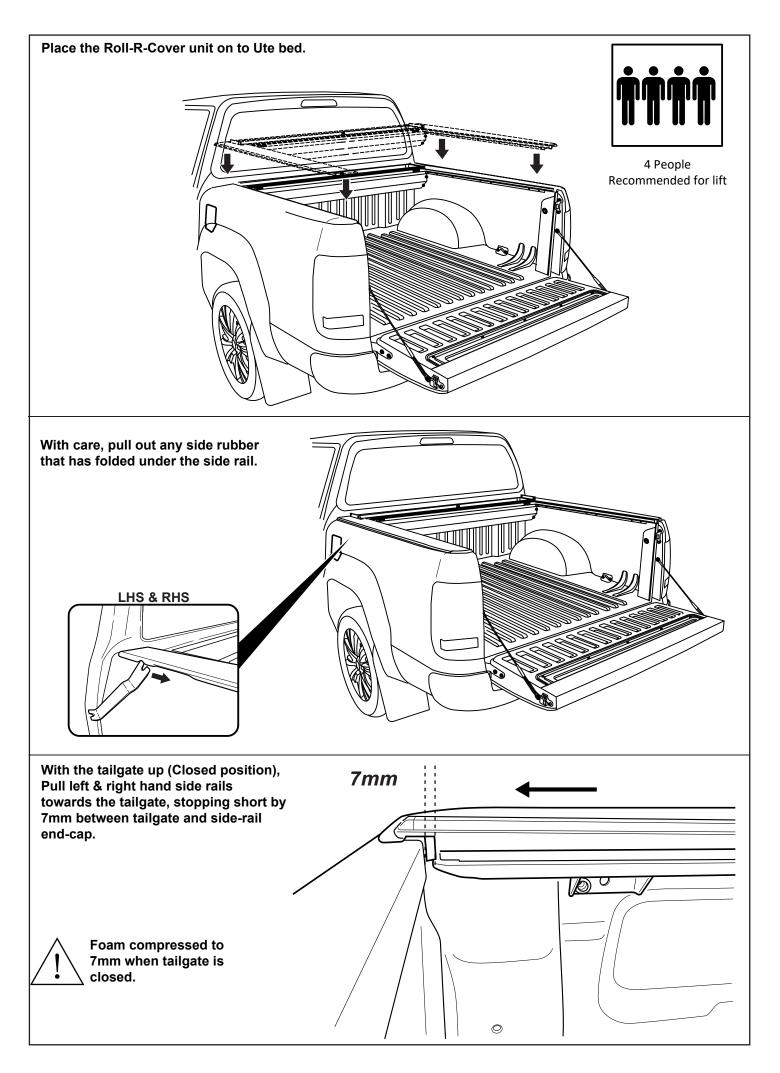

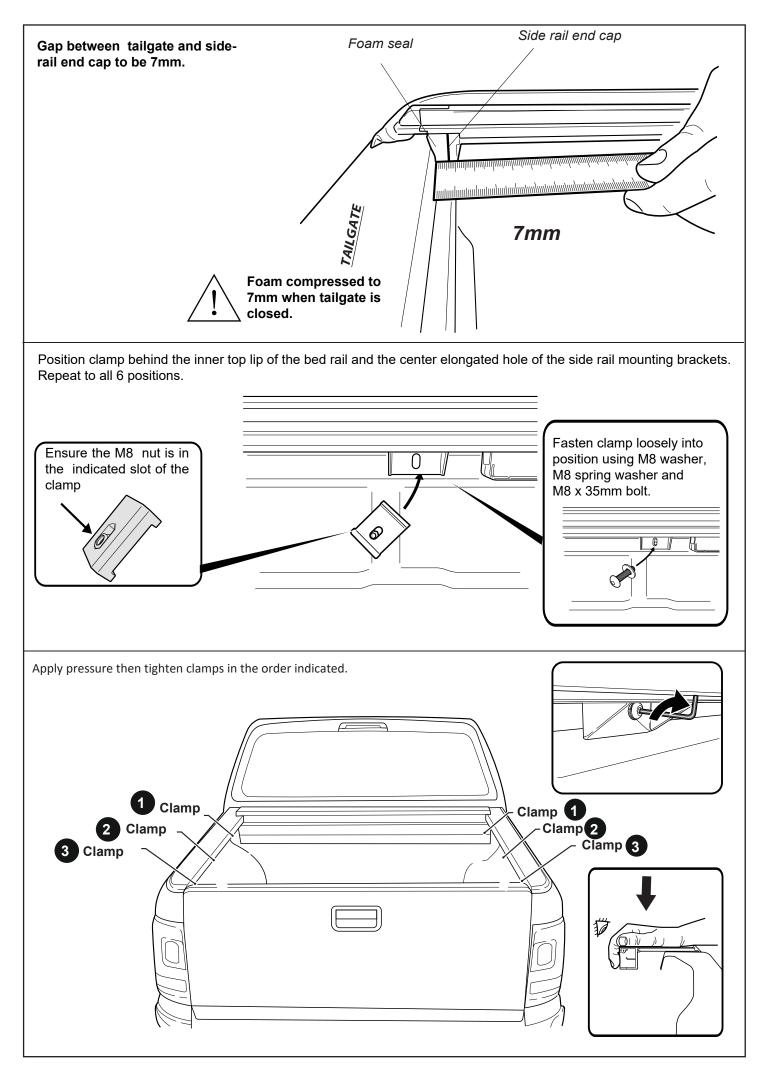


Apply flat plate behind adjusting bolt hole to the ute bed panel or to the liner if the Ute is equipped with a tub liner.

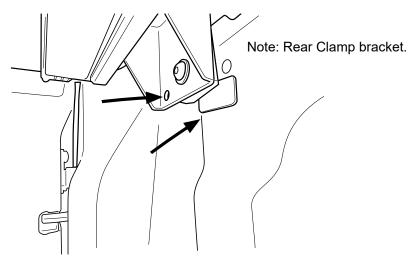





Note: Clean surface before applying flat plate.


Feed M8 nut into M8x70mm bolt and through clamp bracket's pre-installed nutsurt as indicated.

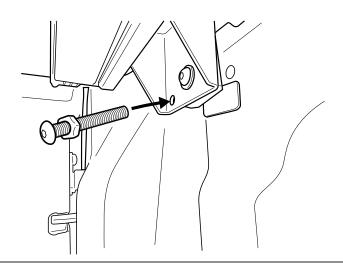


Side rail rubber must have a 1mm gap from the top of the tailgate in the closed position.

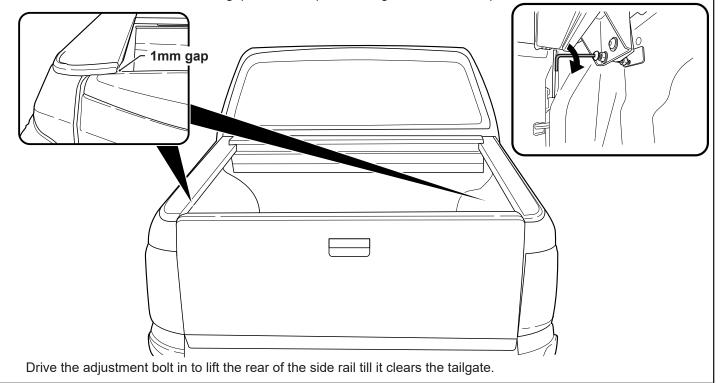

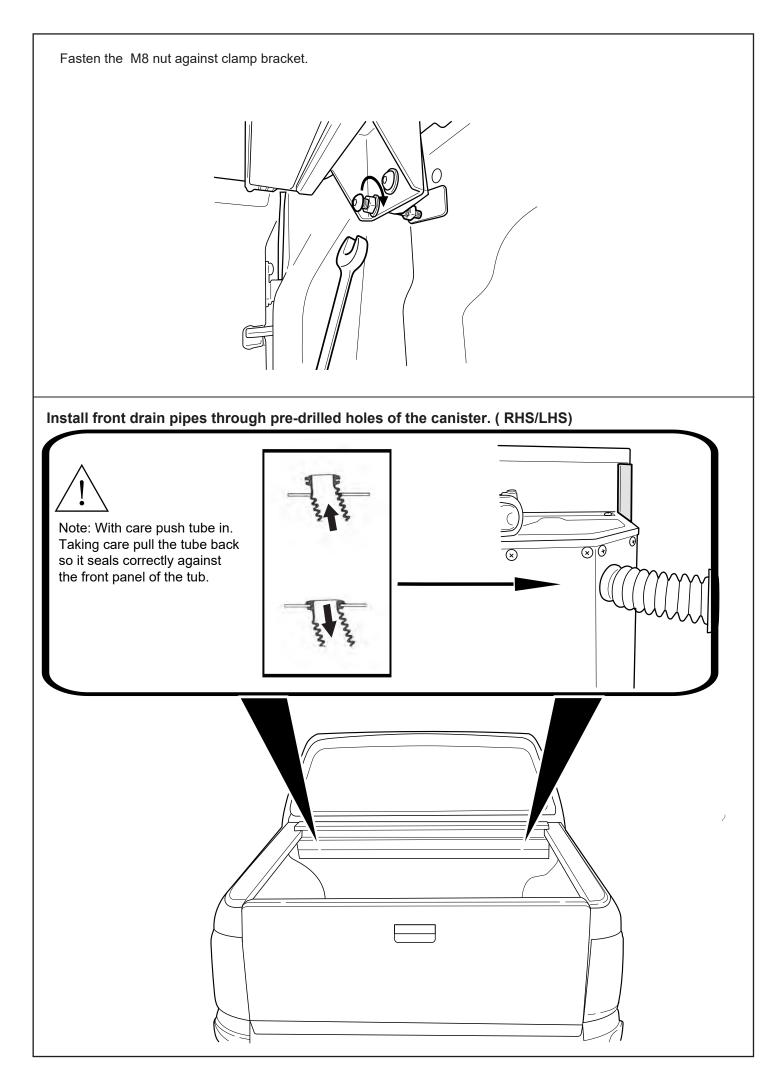

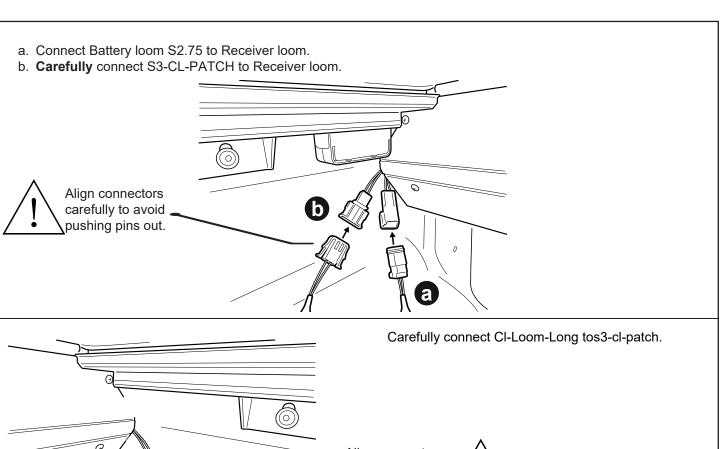

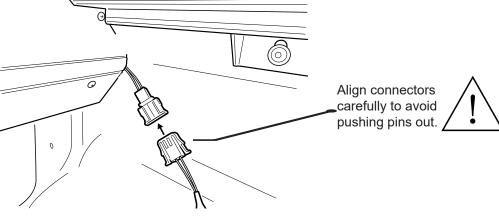

Operating instructions:

Press unlock on vehicle key fob to activate controller.

When vehicle is unlocked the side rail sensor buttons will be active to control.


When vehicle is locked the side rail sensor buttons will be inactive.

Using factory key fob to operate:

Pressing unlock twice on the factory key fob within 4 seconds, will activate the roll r cover to open. Pressing lock twice on the factory key fob within 4 seconds, will activate the roll r cover to close.

Vehicle proximity:

Tapping the proximity twice to open or lock the car door will act exactly the same way as the key fob being pressed twice.

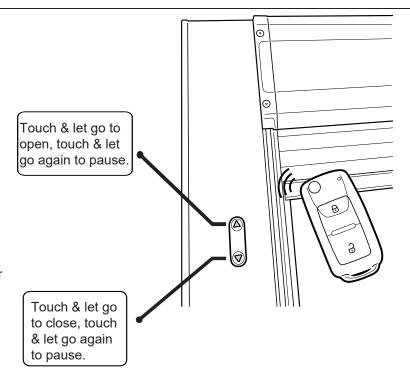



NOTE: 1. To wear in the Roll R Cover please fully open & close the cover approximately 15 times after install is complete.

2. Set your vehicle locking system to unlock all doors with one press of the factory remote unlock button. This setting can be found in your vehicle settings.