Roll R Cover Series 3



WWW.HSPUTELIDS.COM

Part No: NGR4RS3


INSTALLATION INSTRUCTIONS

Vehicle Model: FORD RANGER - NEW GENERATION 07-2022 +





INSTALLATION TIME: 1 hours and 50 minutes (Approximately)


IMPORTANT	 Do not stand/sit or rest heavy objects on Roll R Cover Humans or animals are not to be under the closed cover at any given time Tonneau Cover is not dust or water tight If contact with volatile chemicals occur, clean Cover with mild detergent and water solution Next Gen Ford Ranger Warranty Additional Information. If you are self installing: Please scan QR code to access important information. If you are fitting on behalf of someone: Advise them that they must scan QR code to access important information at hand over. 			
Care Instructions	 Read Instructions fully before Clean Cover with a mild deter Do not use abrasive cleaners Refer to manufactures instruc Protect Tub floor against scrate 	gent and water solution or solvents tions applicable to power dri		
Maintenance	Refer to Maintenance instructio	ns.		
Tools Required	 Pen / Marker Centre Punch Drill & Drill bits Caulking Gun Silicon - Non Acetic 	 Scissors & Knife Spanner & Socket Tape measure Holesaw Filing tool 		 Soapy water solution Allen Key set Screw driver Rust Inhibitor Trim Removal Tool
PERSONAL PROTECTIVE EQUI	PMENT:	Rubber Gloves	Goggles	Hearing Protection

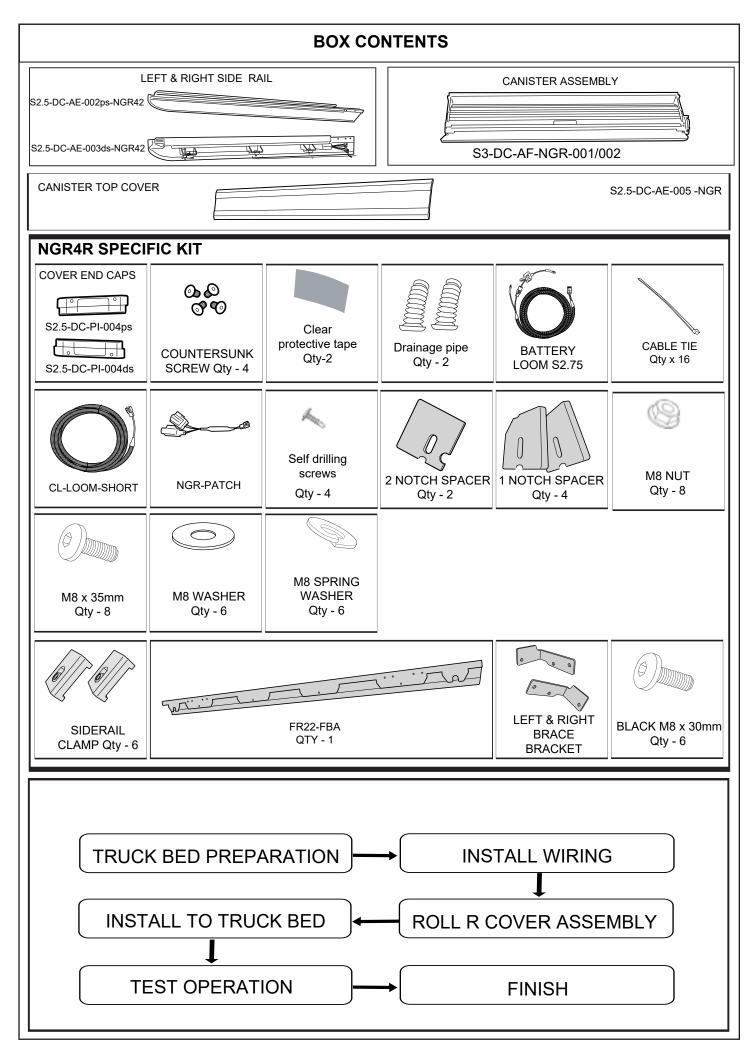



TUB PREPARATION

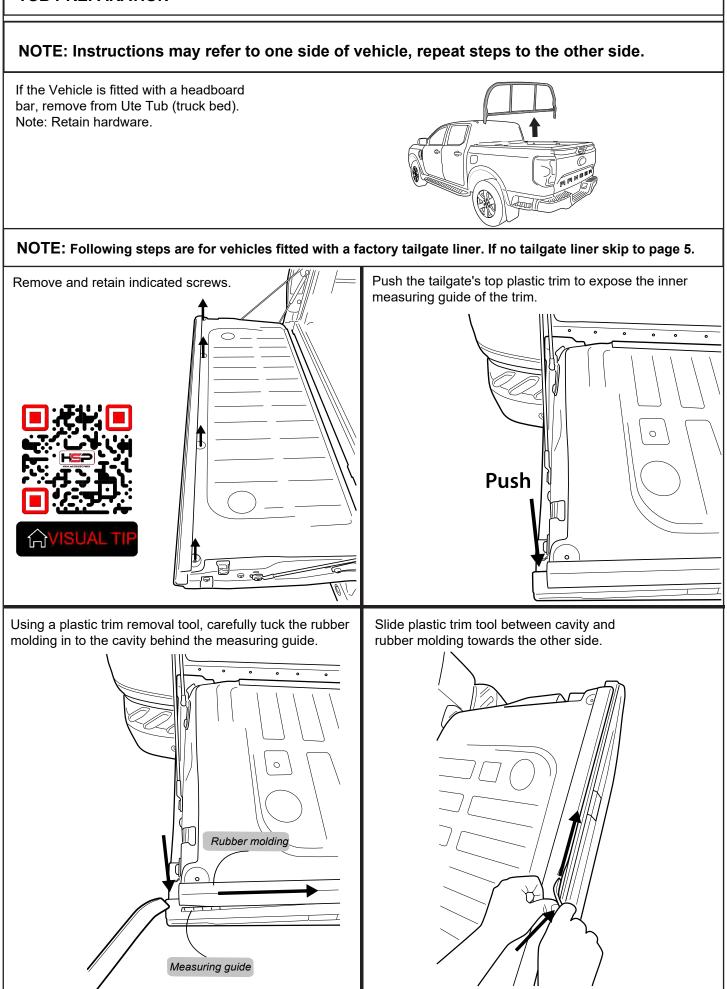


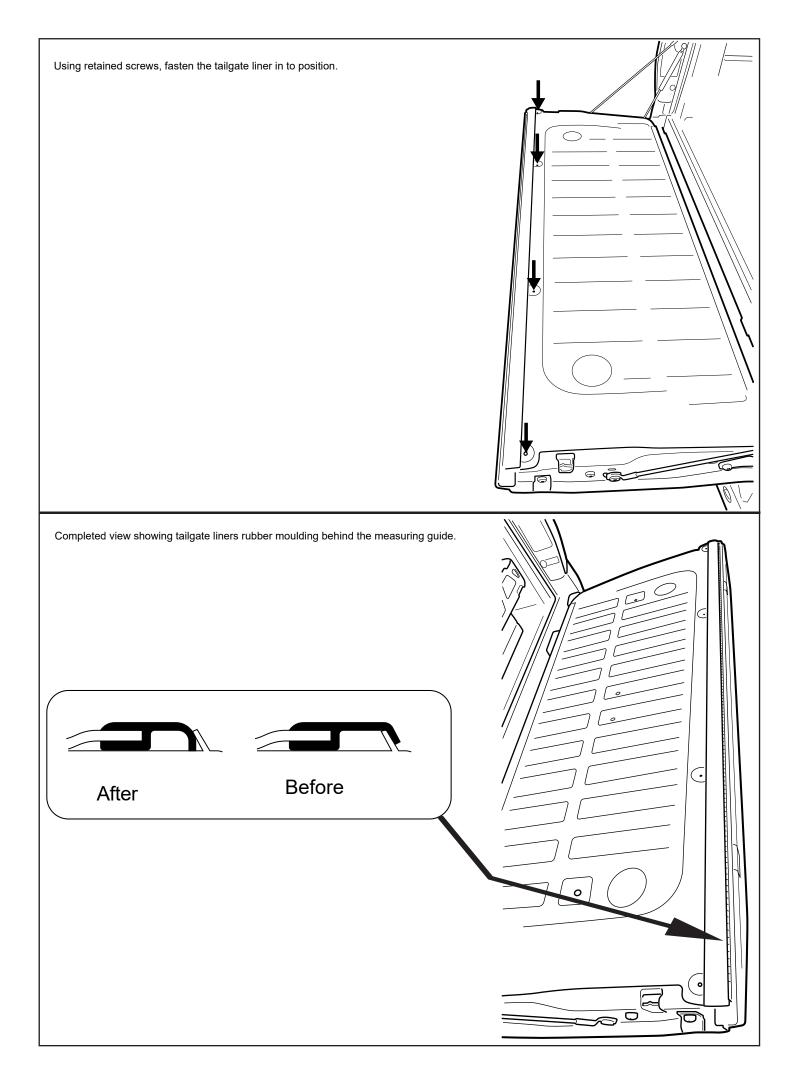


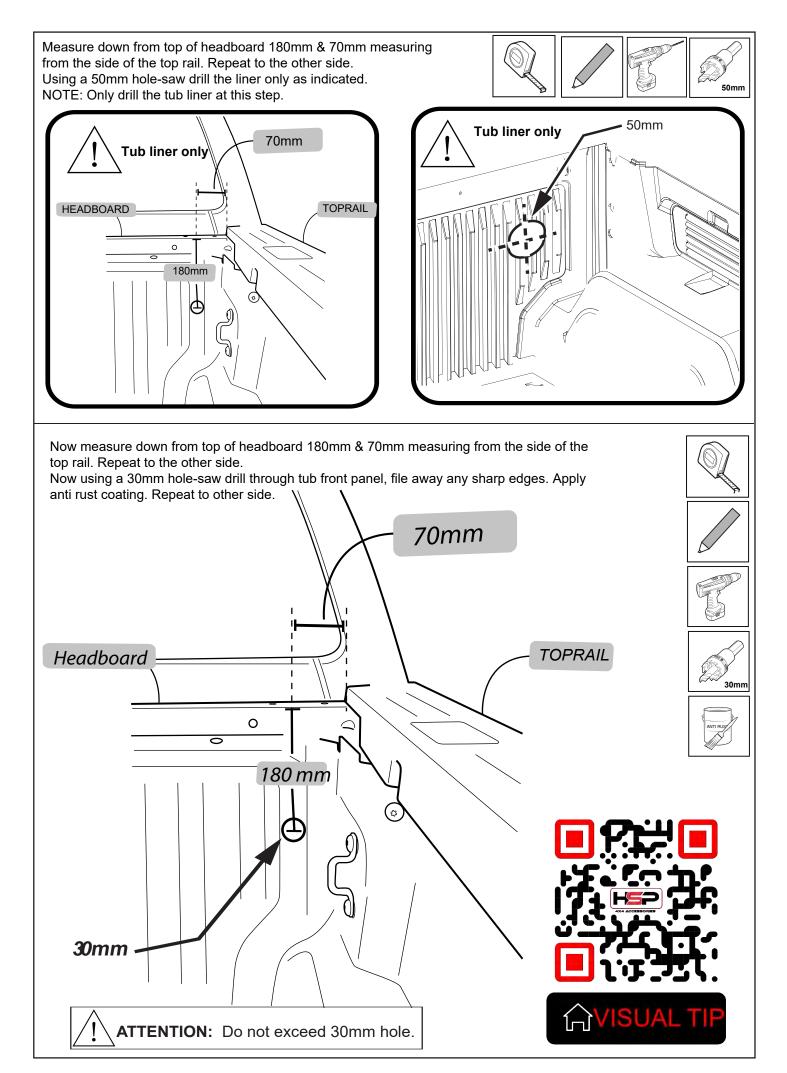

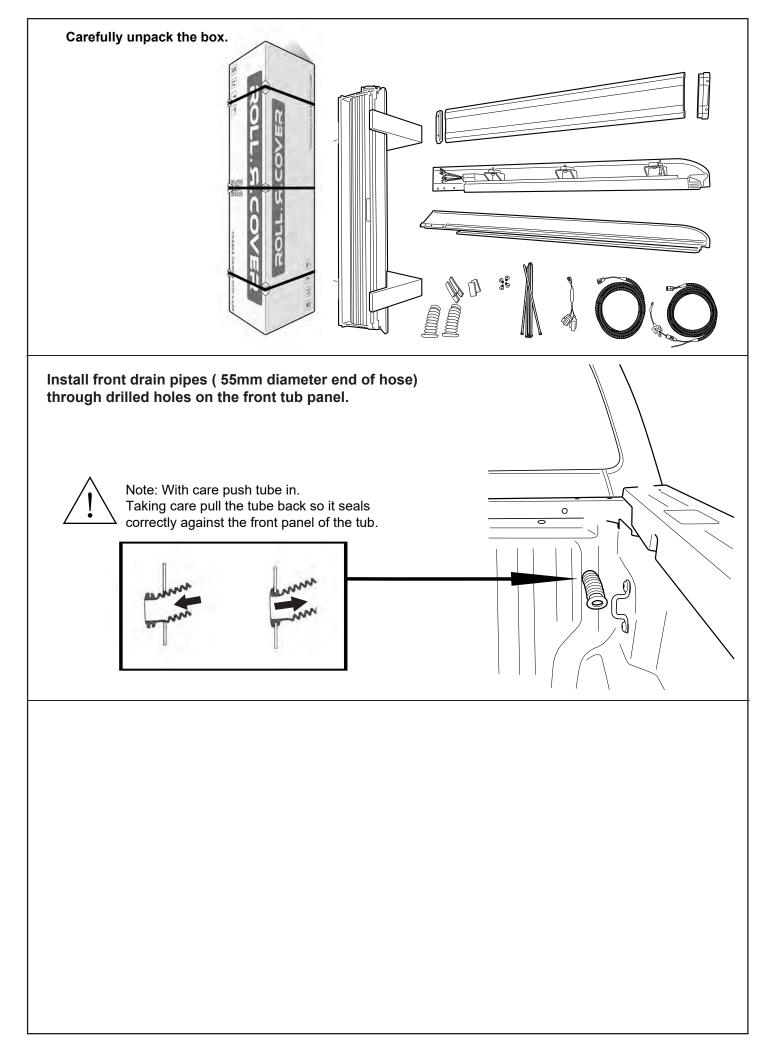

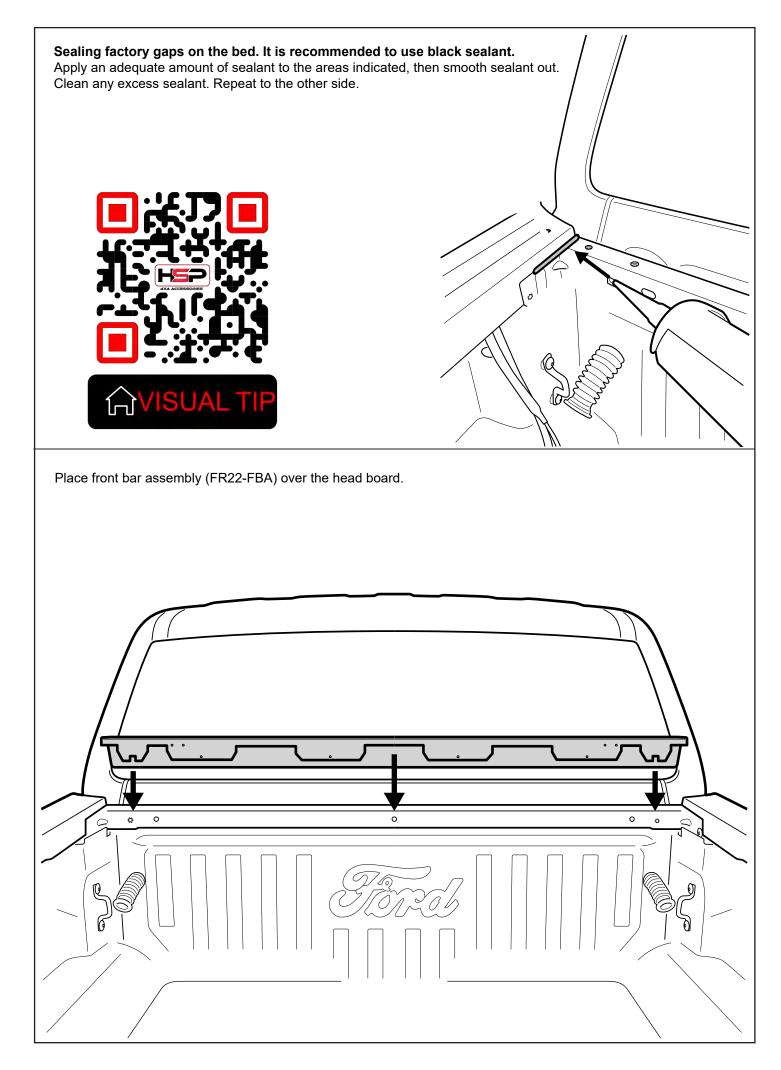

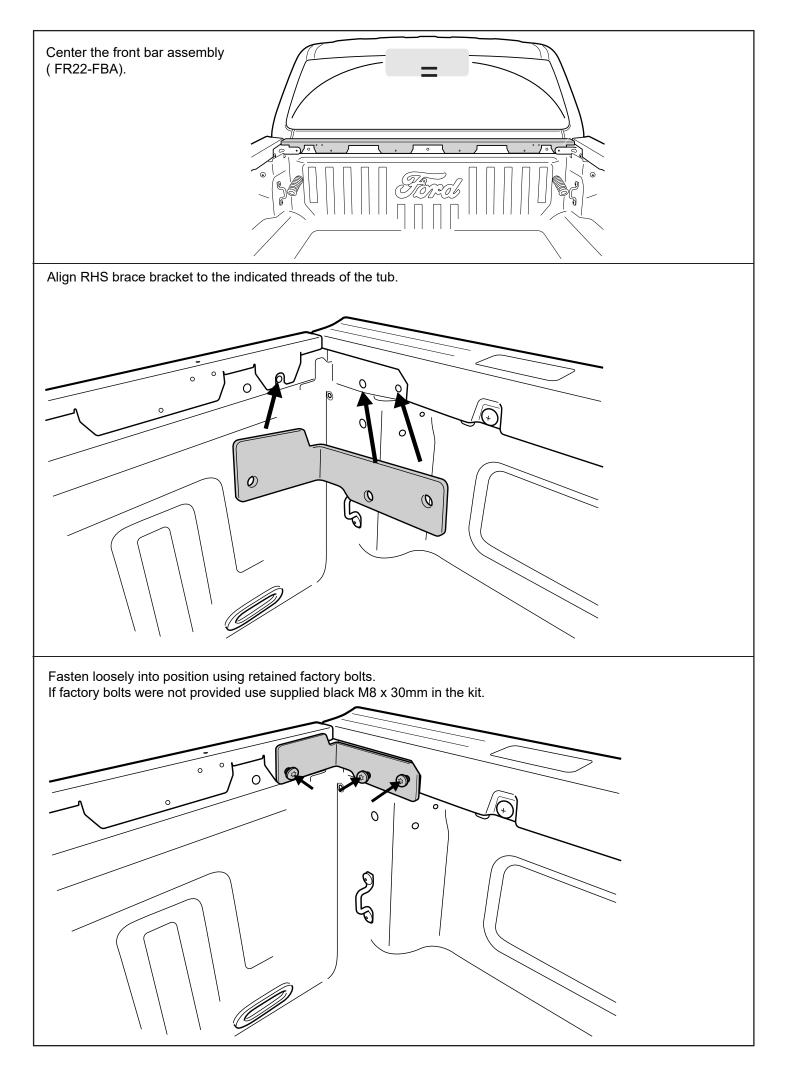

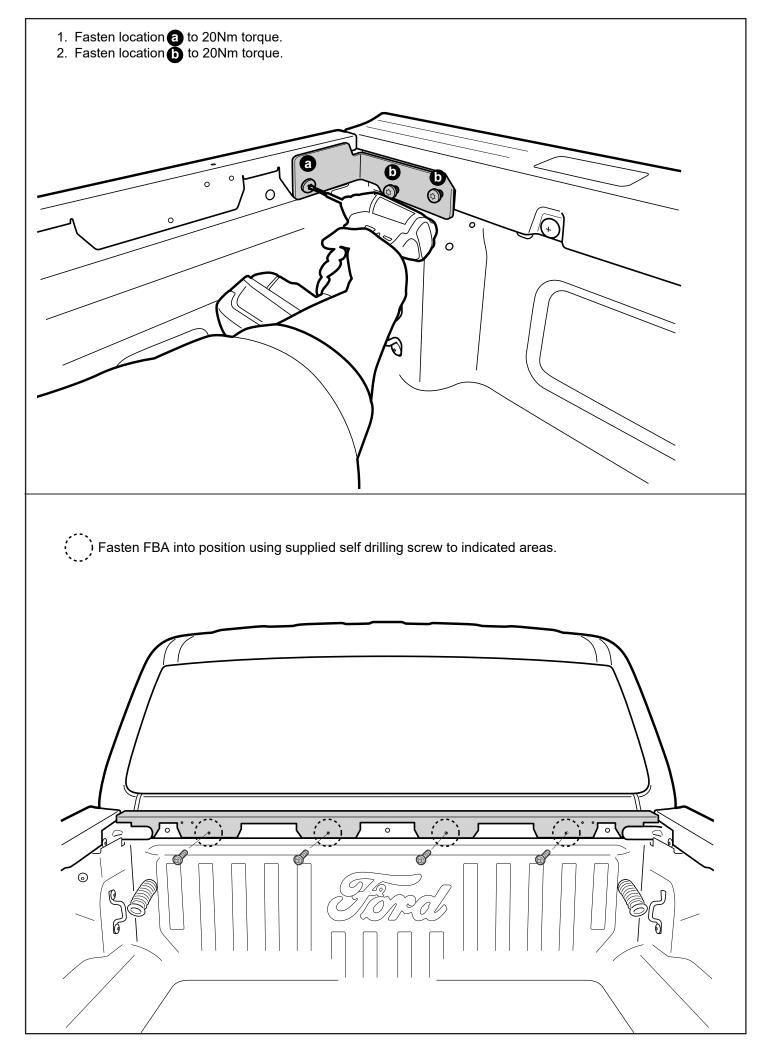

Sealing any gaps on the bed and FBA. It is recommended to use black sealant.


Apply an adequate amount of sealant to the areas indicated, then smooth sealant out.


Clean any excess sealant. Repeat to the other side.


Sealing any gaps on the bed and FBA. It is recommended to use black sealant.


Apply an adequate amount of sealant to the areas indicated, then smooth sealant out.


Clean any excess sealant. Repeat to the other side.

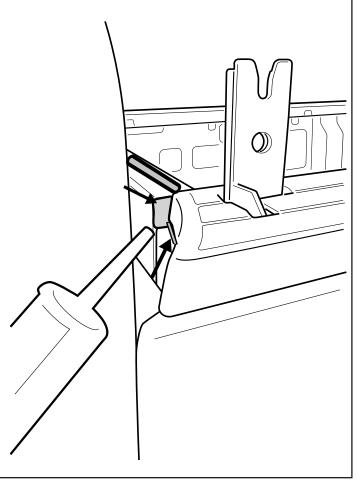


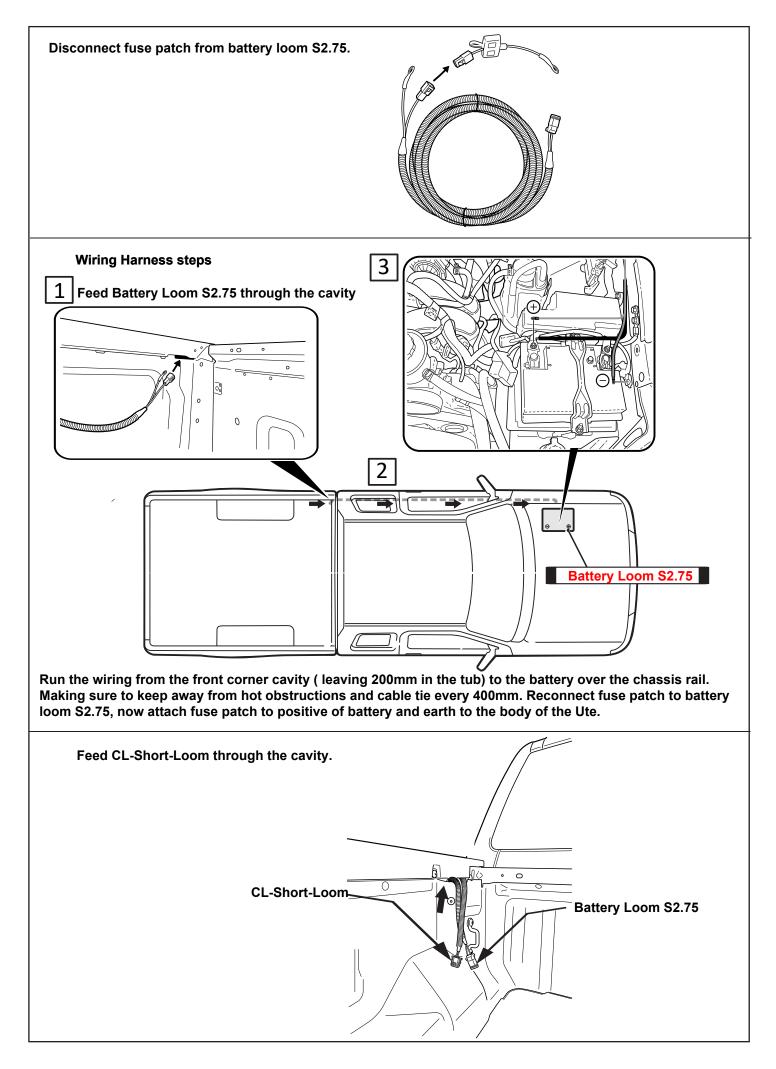


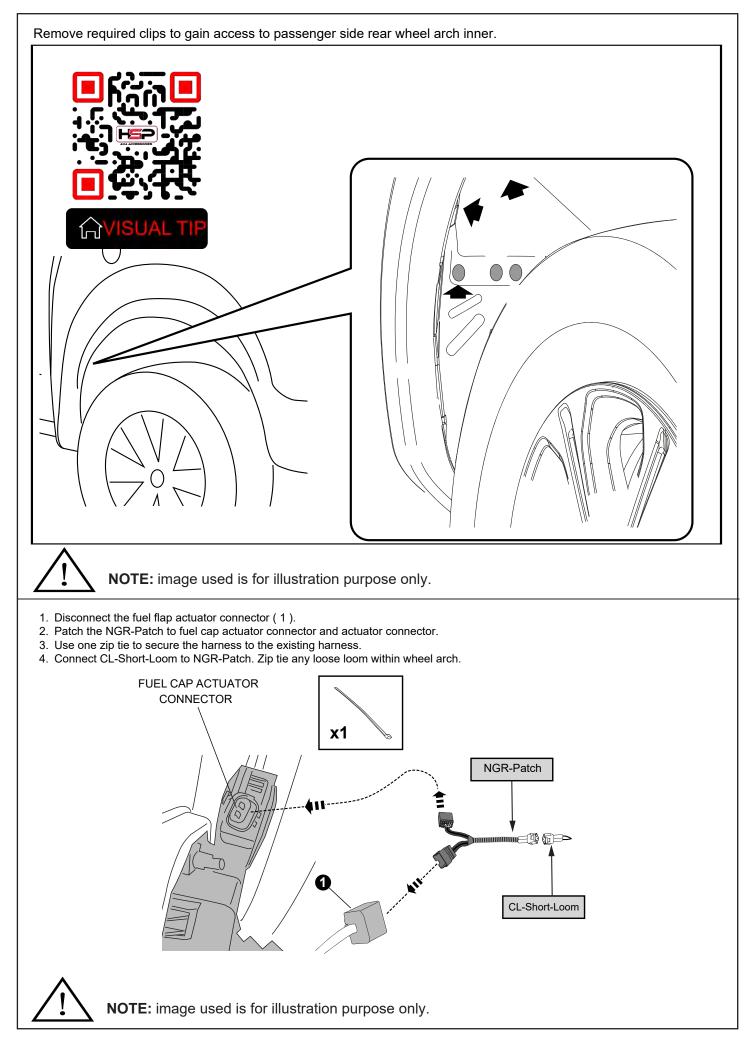


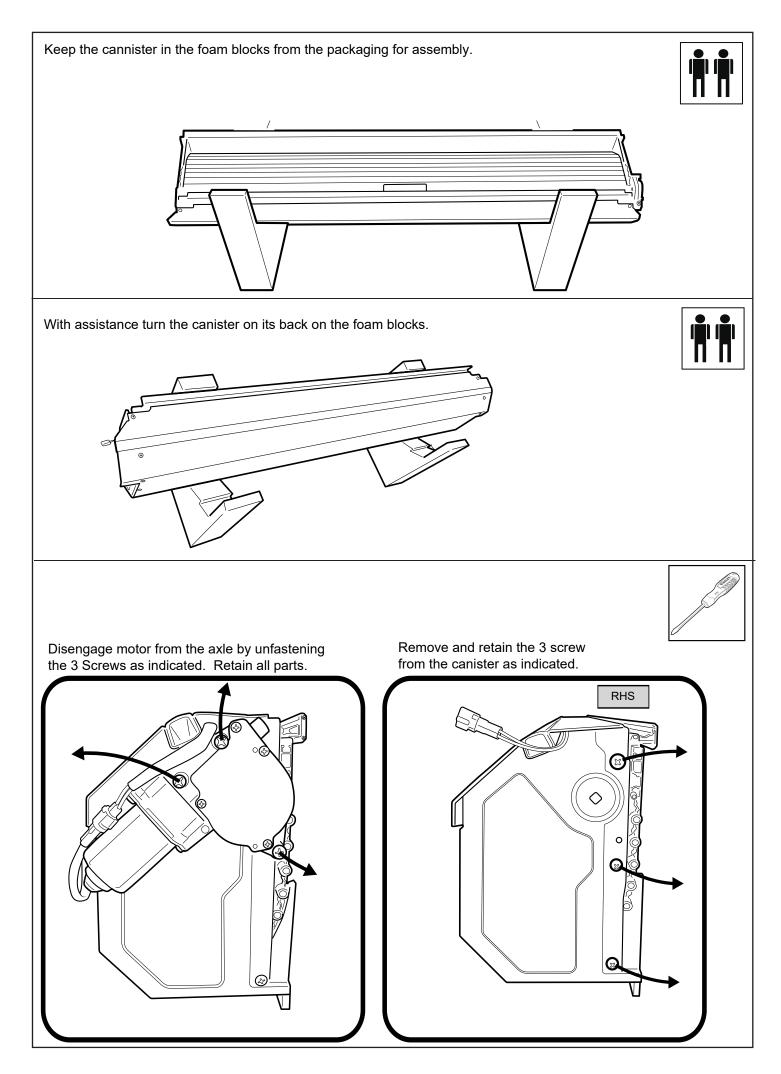


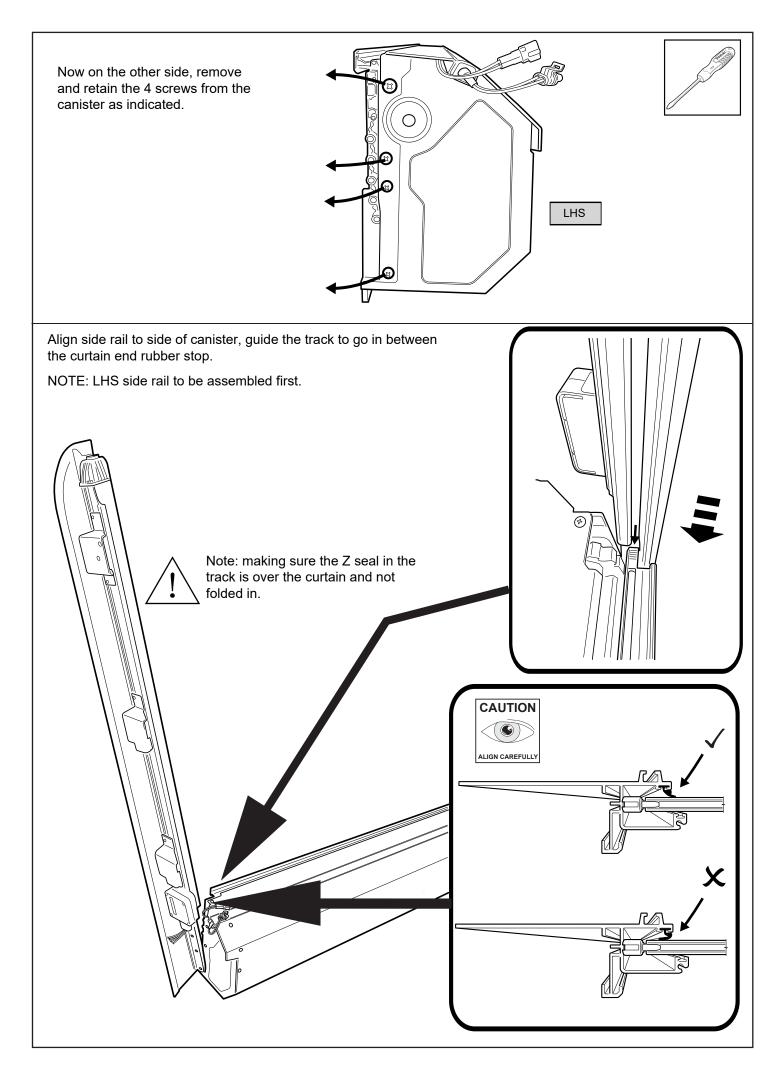


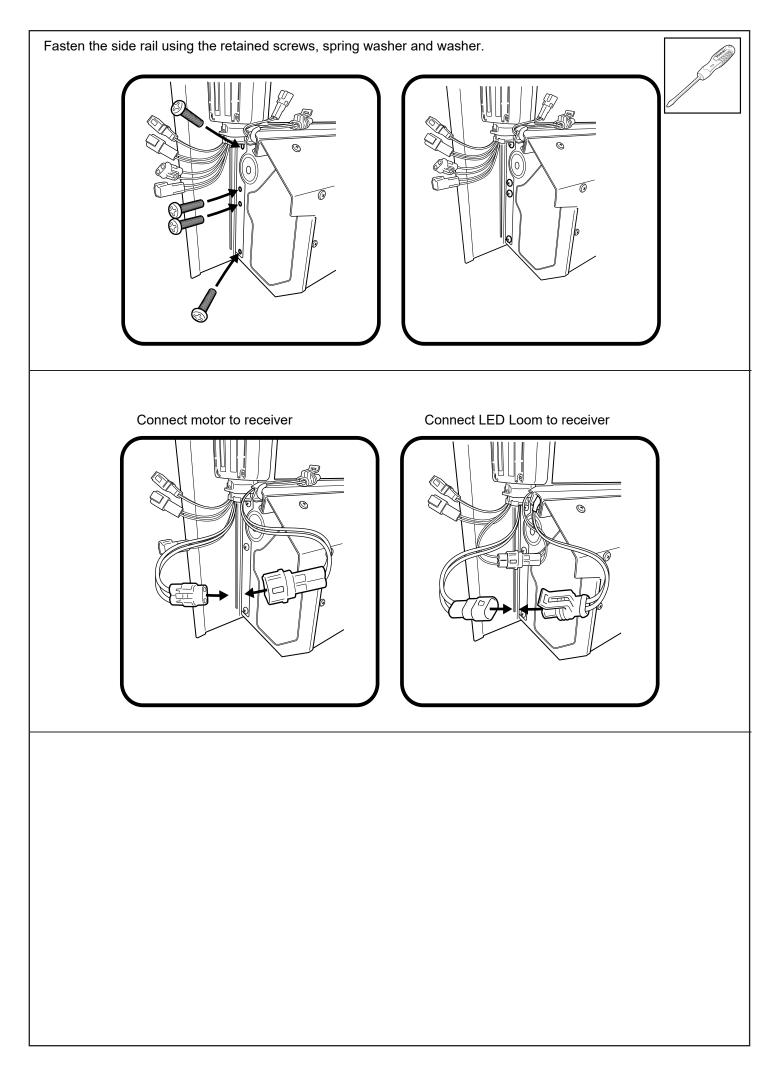


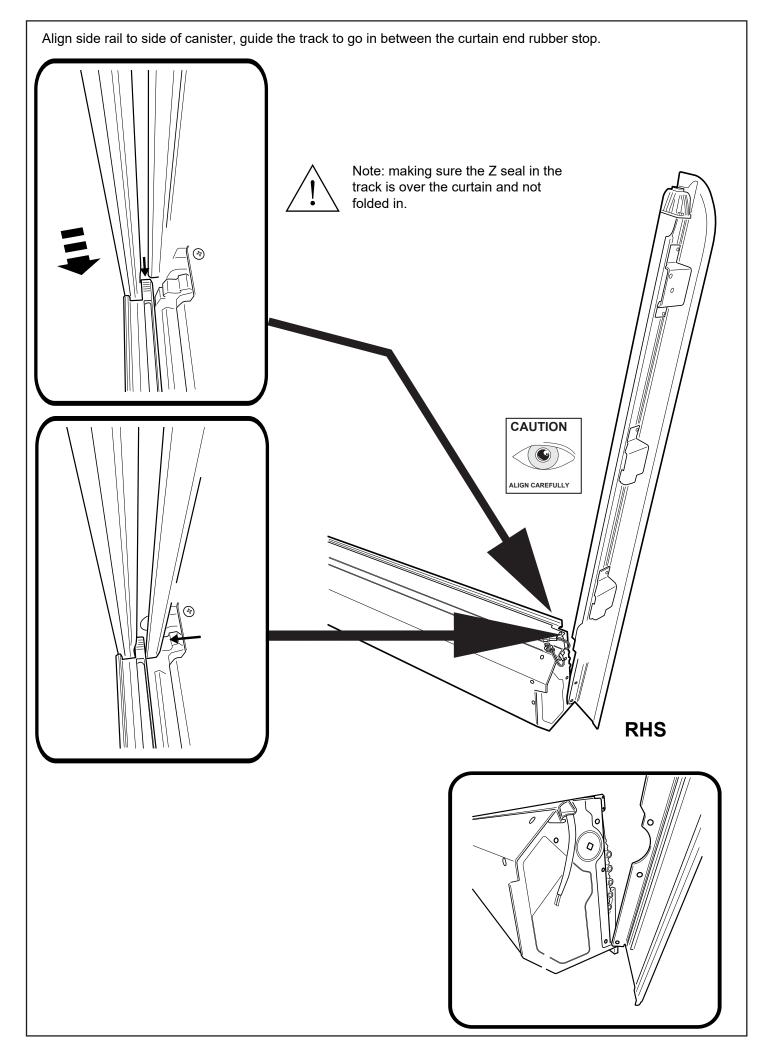


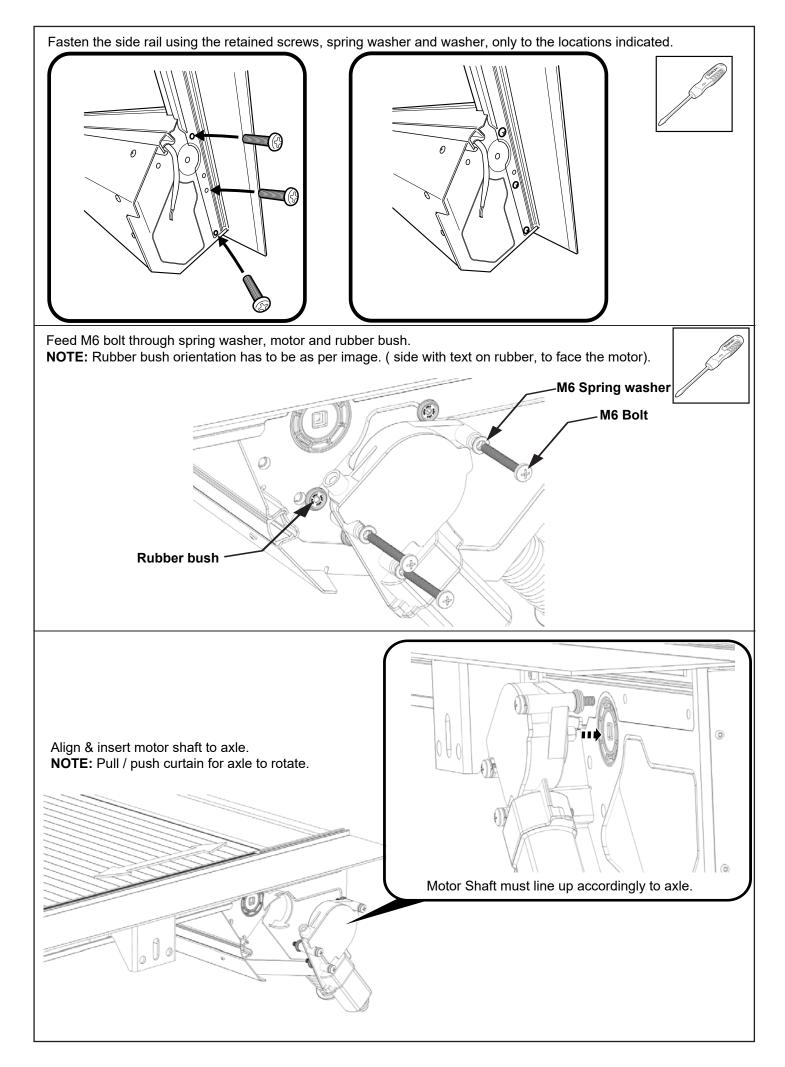


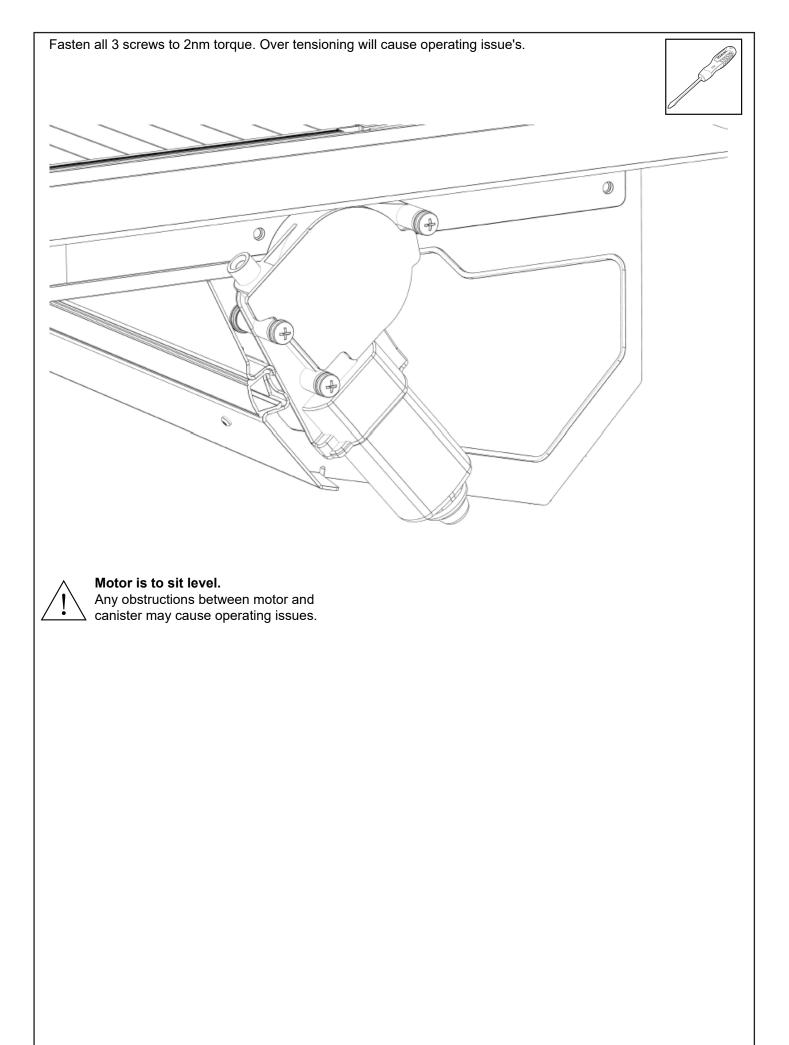

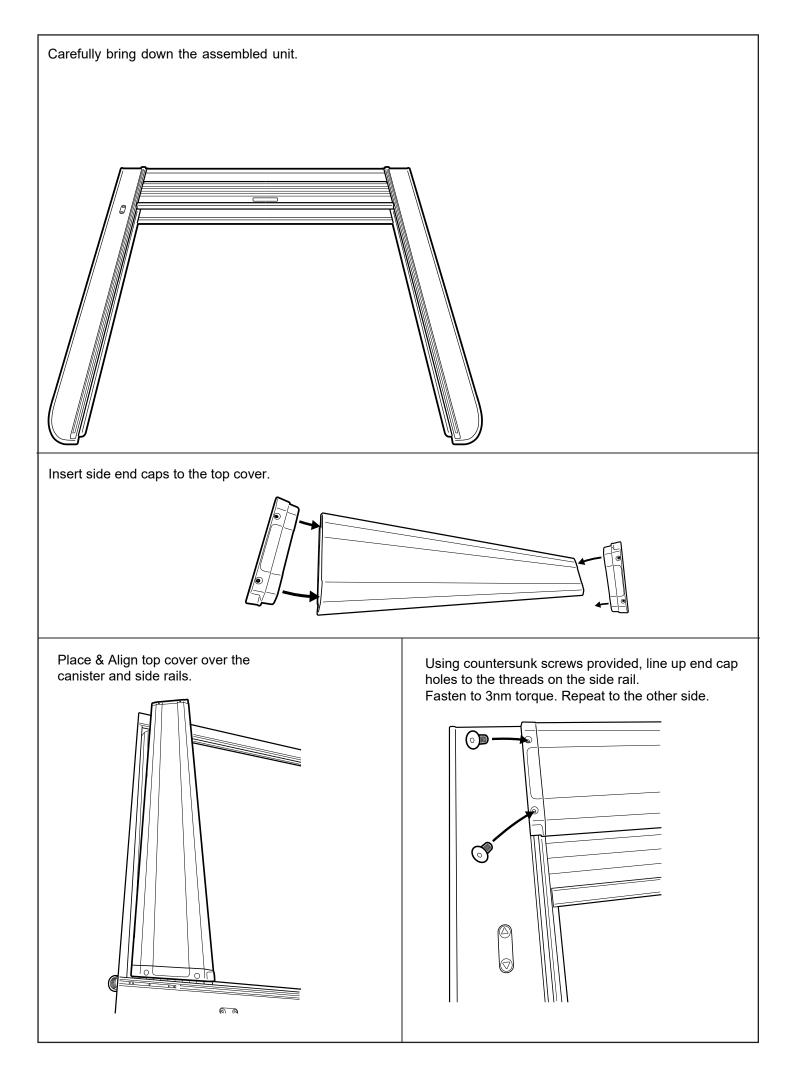


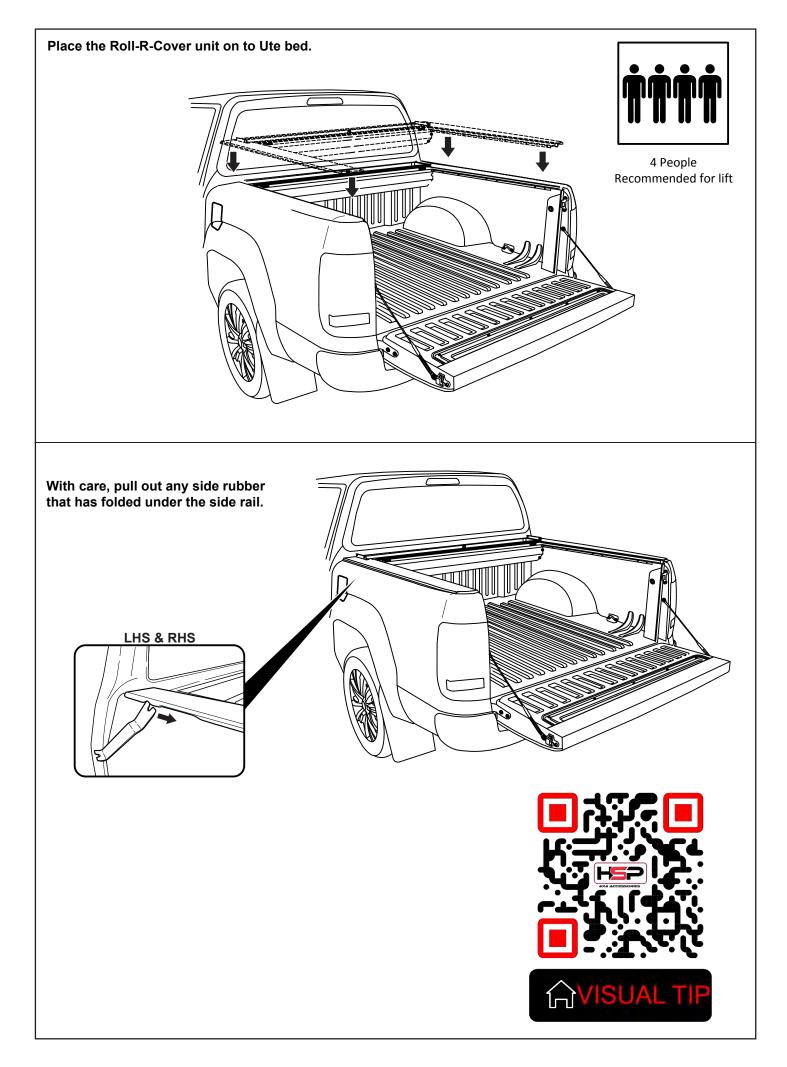


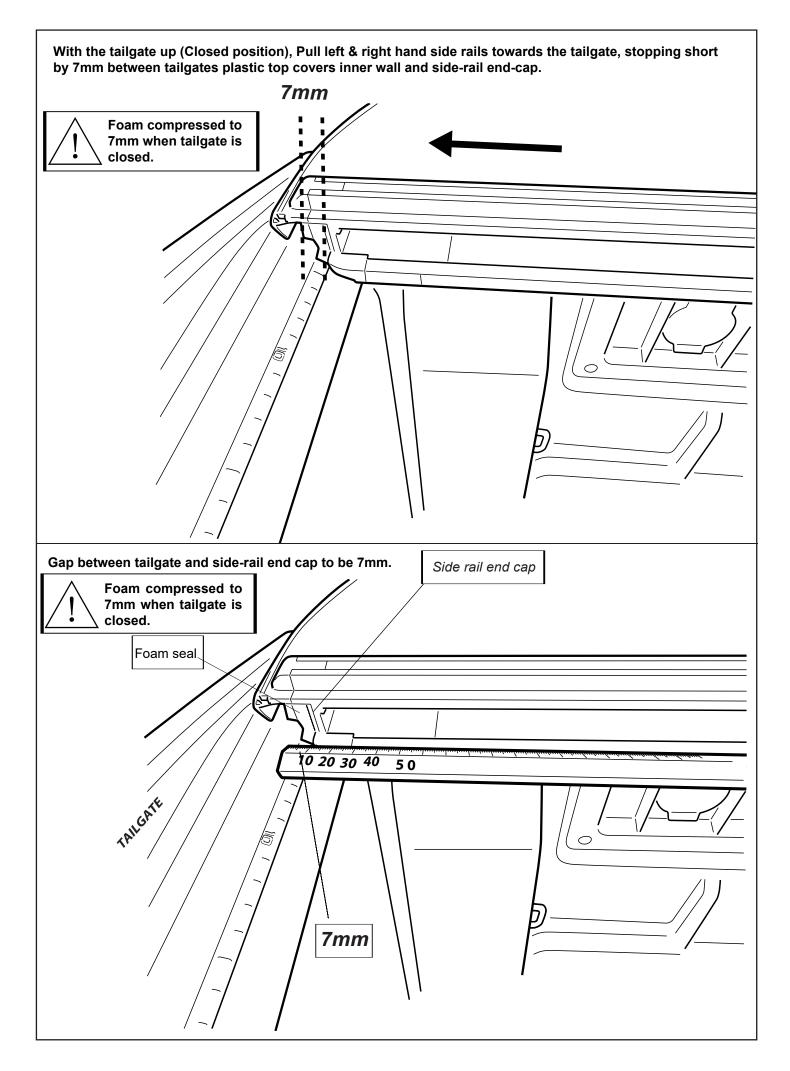


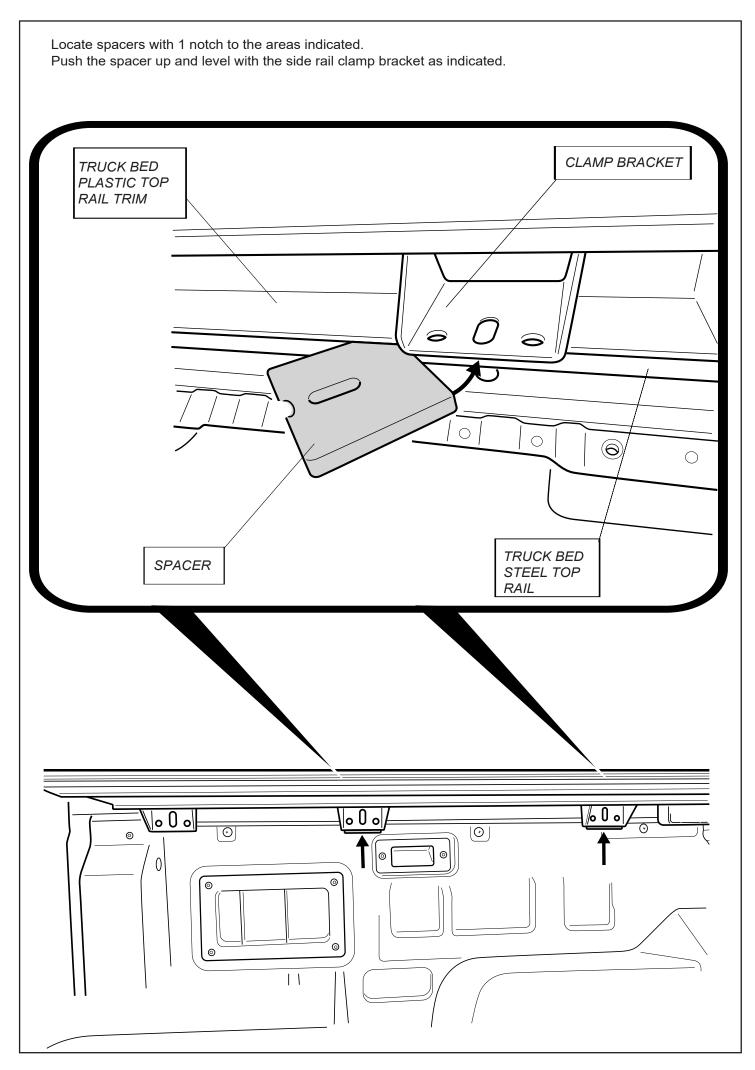


Locate spacers with 2 notches to the areas indicated. Note: refer to image for orientation of spacer. Push the spacer up and level with the side rail clamp bracket as indicated.

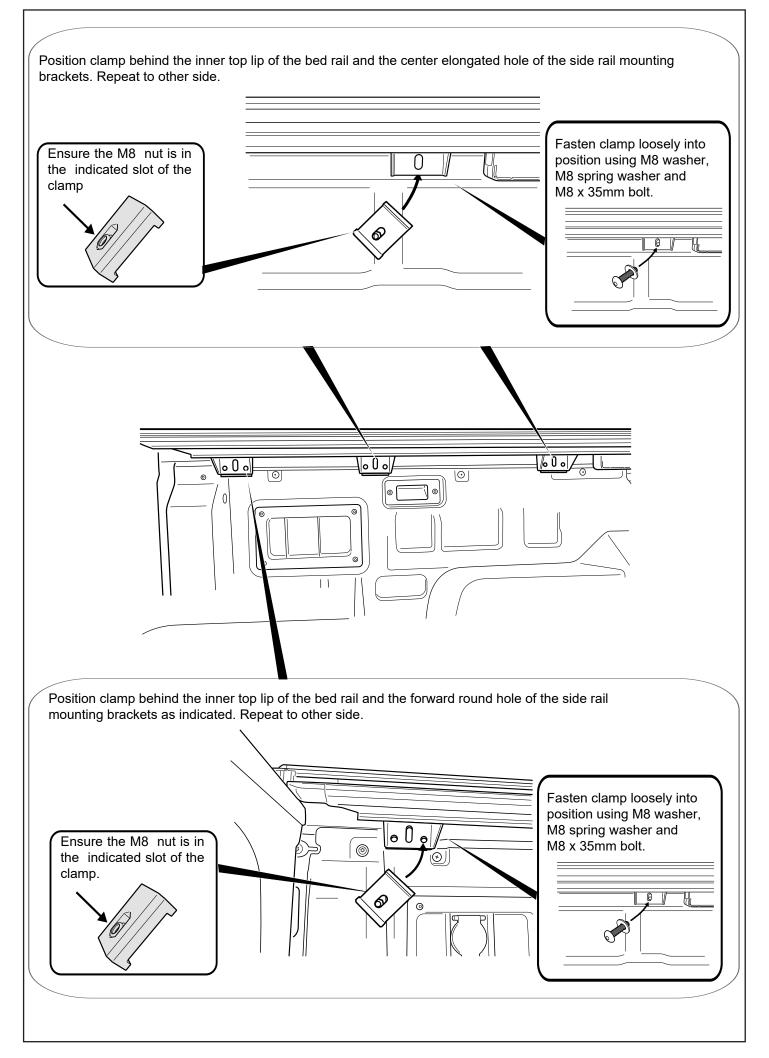


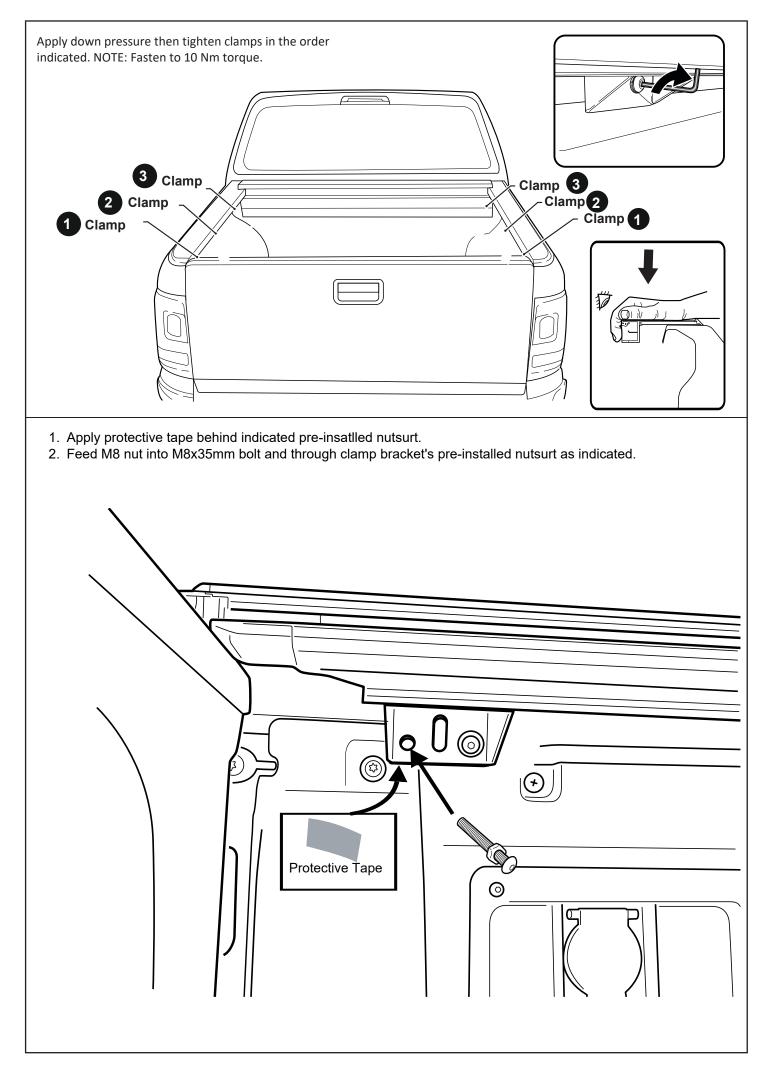

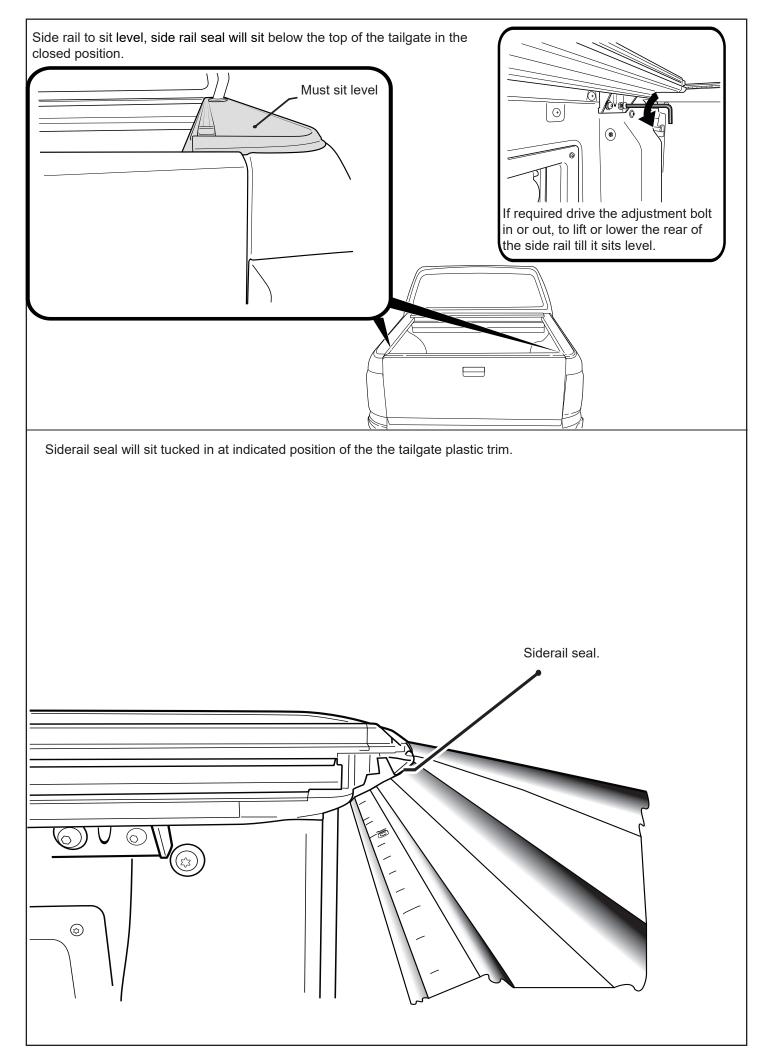

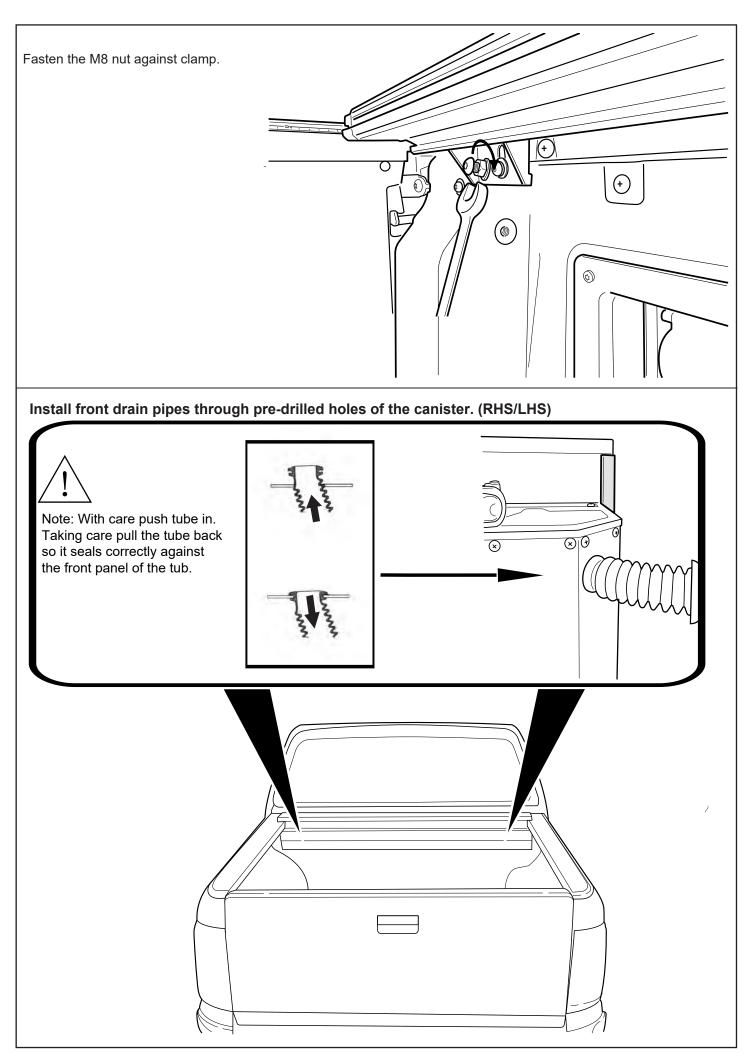

- a. Connect Battery loom S2.75 to Receiver loom.
- b. Carefully connect CI-Loom-short to Receiver loom.

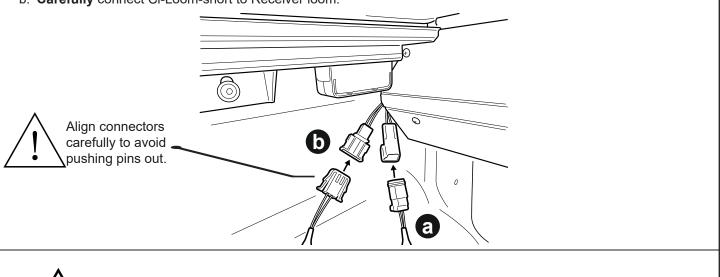



NOTE: 1. To wear in the Roll R Cover please fully open & close the cover approximately 15 times after install is complete.

2. Set your vehicle locking system to unlock all doors with one press of the factory remote unlock button. This setting can be found in your vehicle settings.

Operating instructions:

Press unlock on vehicle key fob to activate controller. When vehicle is unlocked the side rail sensor buttons will be active to control. When vehicle is locked the side rail sensor buttons will be inactive.

Using factory key fob to operate:

Pressing unlock twice on the factory key fob within 4 seconds, will activate the roll r cover to open. Pressing lock twice on the factory key fob within 4 seconds, will activate the roll r cover to close.

Vehicle proximity:

Tapping the proximity twice to open or lock the car door will act exactly the same way as the key fob being pressed twice.

