Roll R Cover Series 3



WWW.HSPUTELIDS.COM

Part No: NGR4RS3-AB


INSTALLATION INSTRUCTIONS

Vehicle Model: FORD RANGER - NEW GENERATION 07-2022 + Fitted with Armour bar





INSTALLATION TIME: 2 hours and 15 minutes (Approximately)


IMPORTANT	 Do not stand/sit or rest heavy ob Humans or animals are not to be Tonneau Cover is not dust or wa If contact with volatile chemicals Next Gen Ford Ranger Warranty 	under the closed cover ter tight occur, clean Cover with Additional Information. If you are self instal important information	ling: Please	
Care Instructions	 Read Instructions fully before commencing installation. Clean Cover with a mild detergent and water solution Do not use abrasive cleaners or solvents Refer to manufactures instructions applicable to power drill. Protect Tub floor against scratches during installation process. 			
Maintenance	Refer to Maintenance instructions.			
Tools Required	 Pen / Marker Centre Punch Drill & Drill bits Caulking Gun Silicon - Non Acetic 	 Scissors & Knife Spanner & Socket Tape measure Holesaw Filing tool 		 Soapy water solution Allen Key set Screw driver Rust Inhibitor Trim Removal Tool
PERSONAL PROTECTIVE EQUIP	PMENT:	Rubber Gloves	Goggles	Hearing Protection

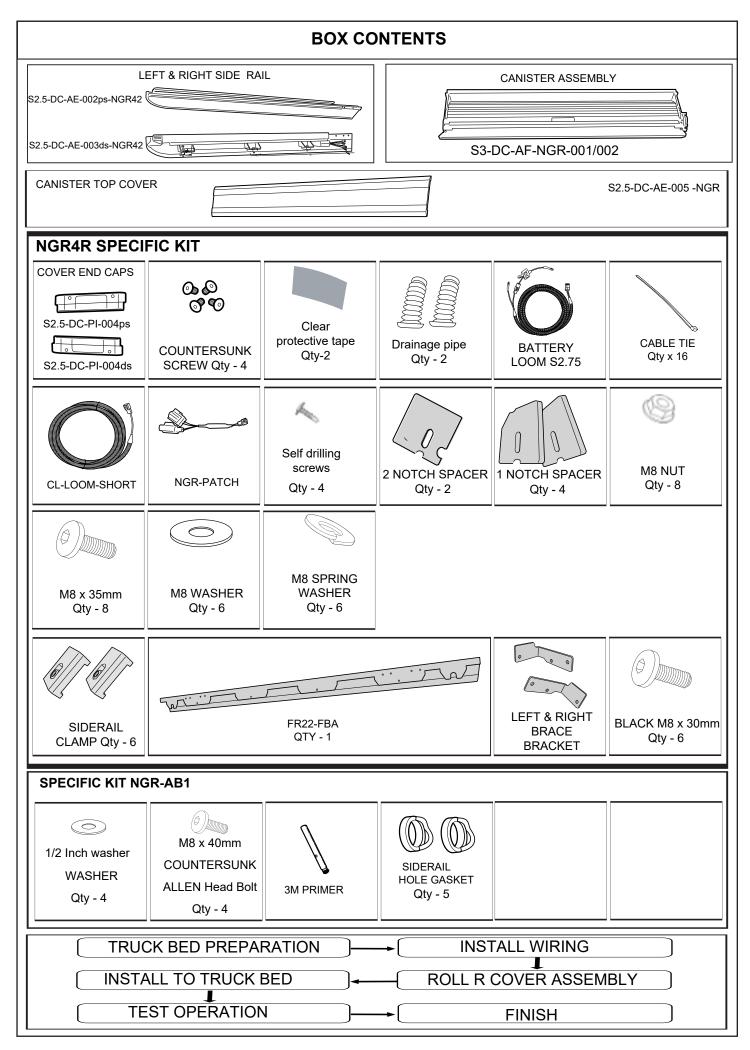



TUB PREPARATION

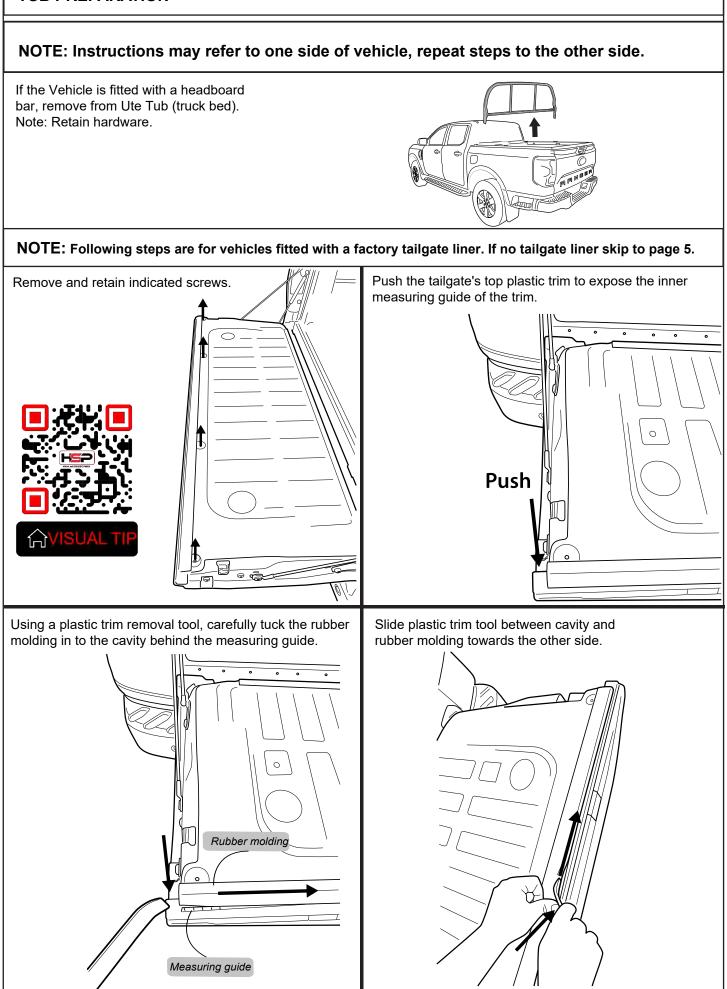


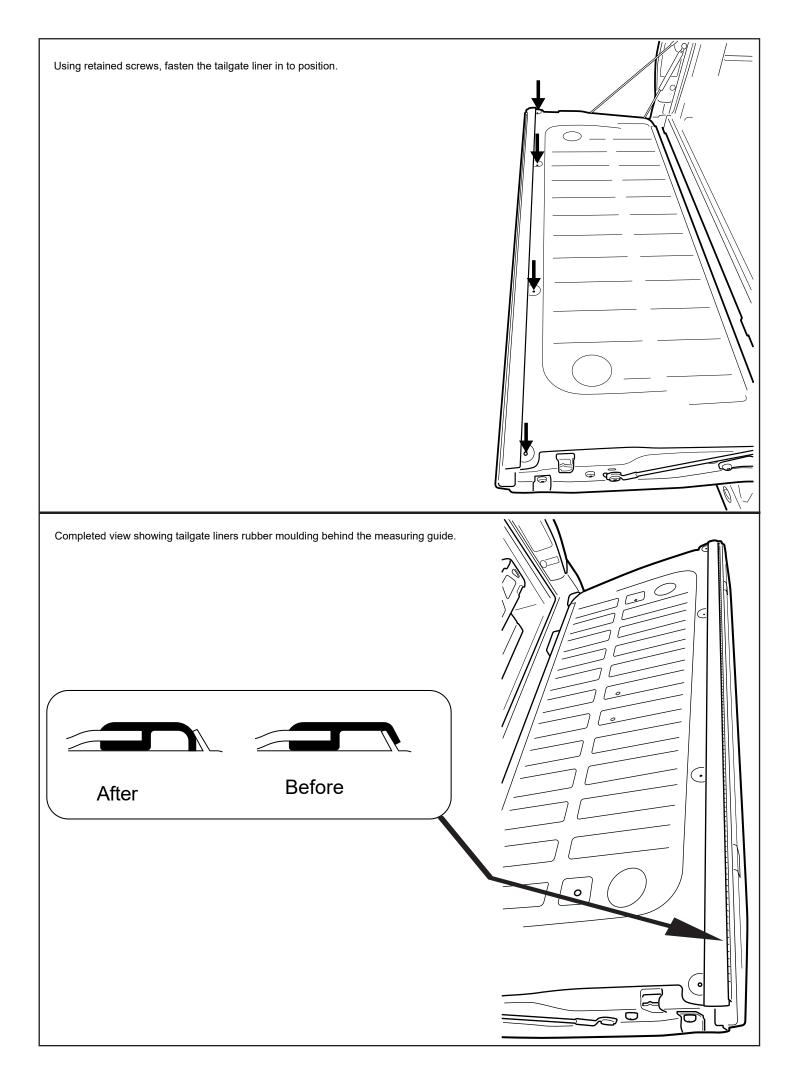


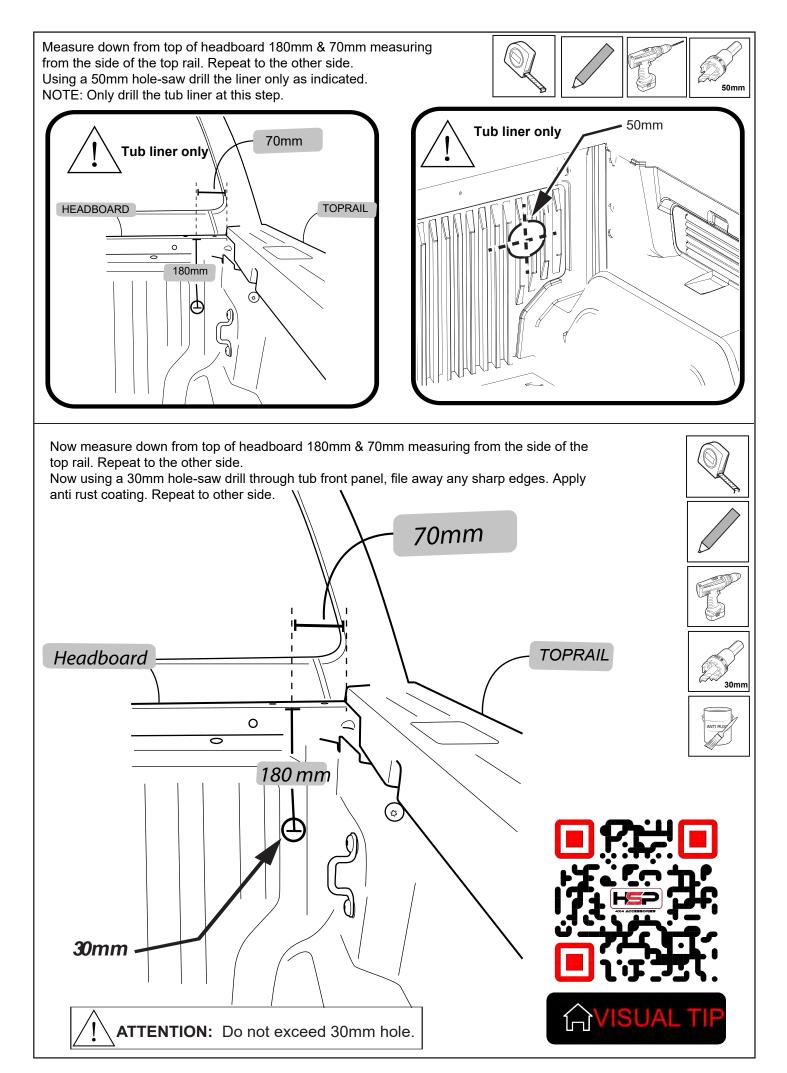

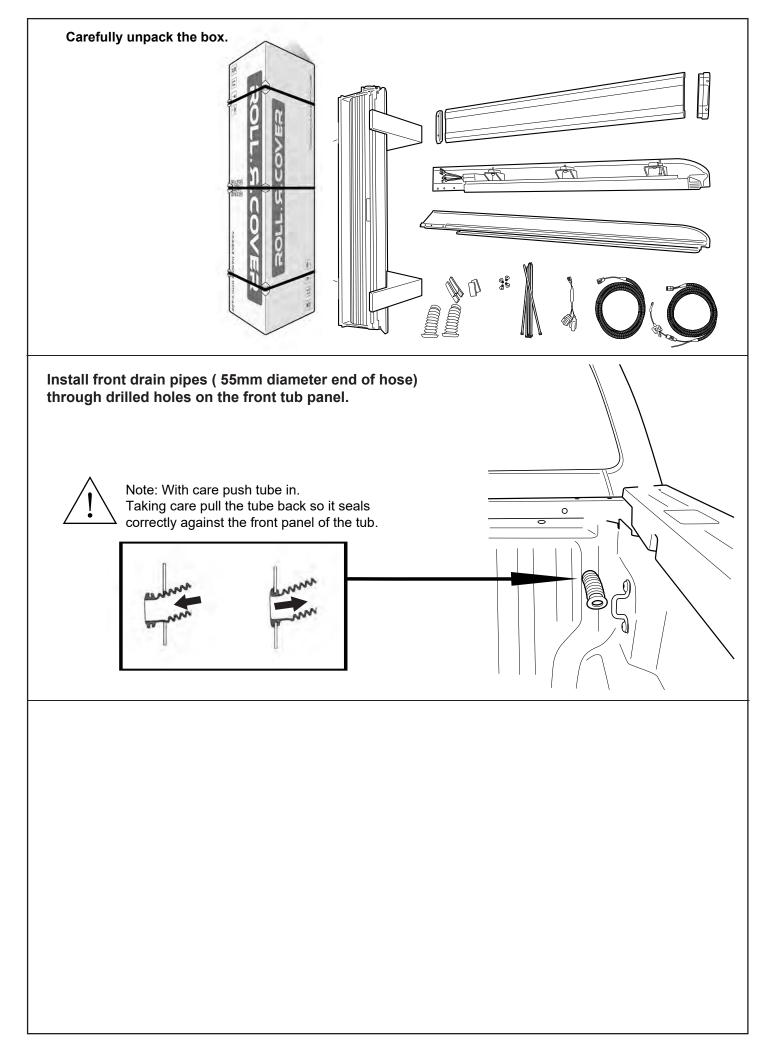

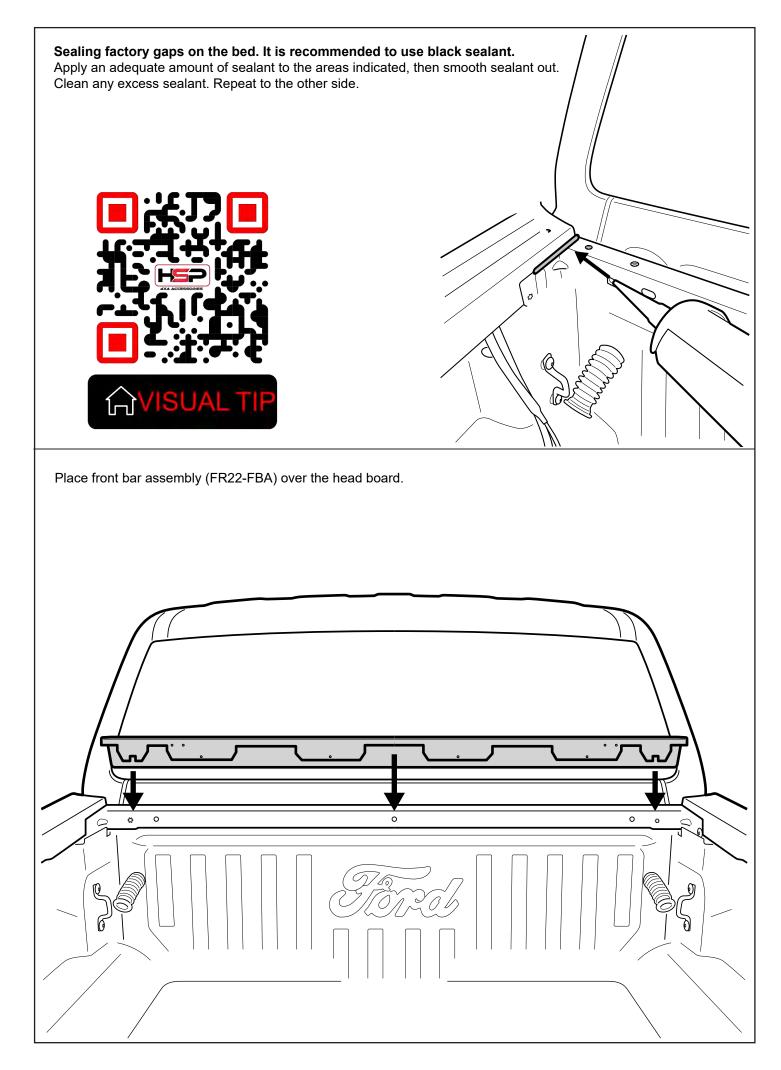

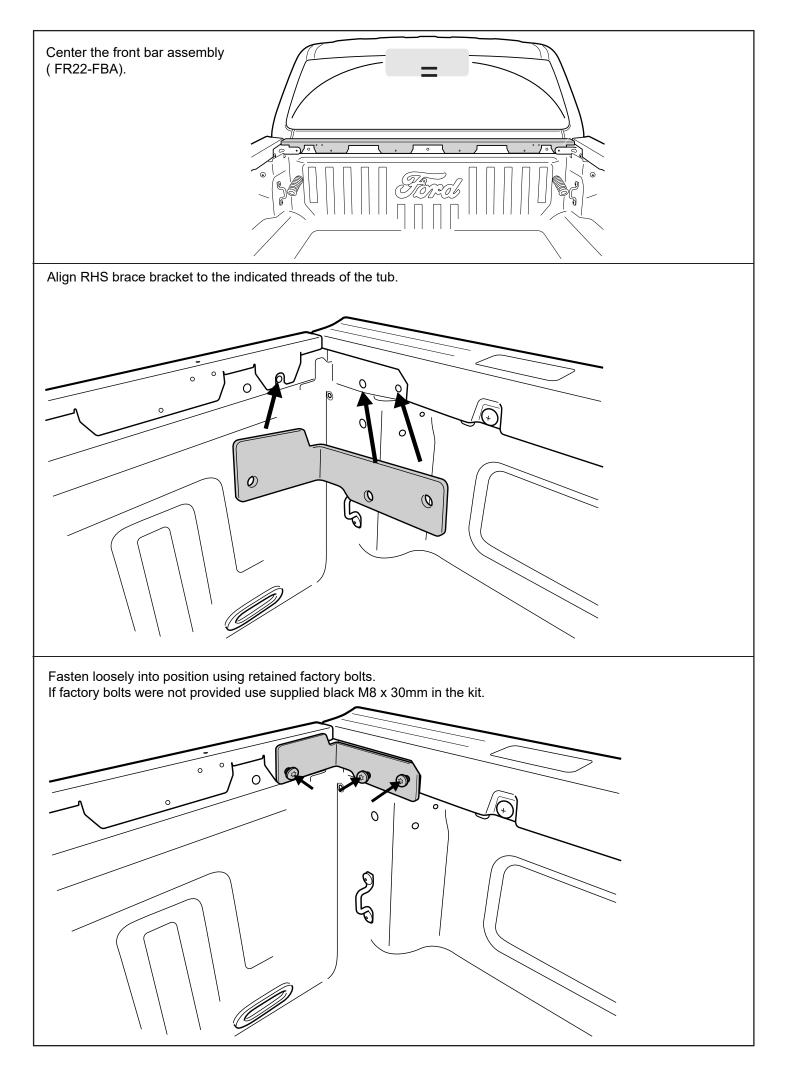

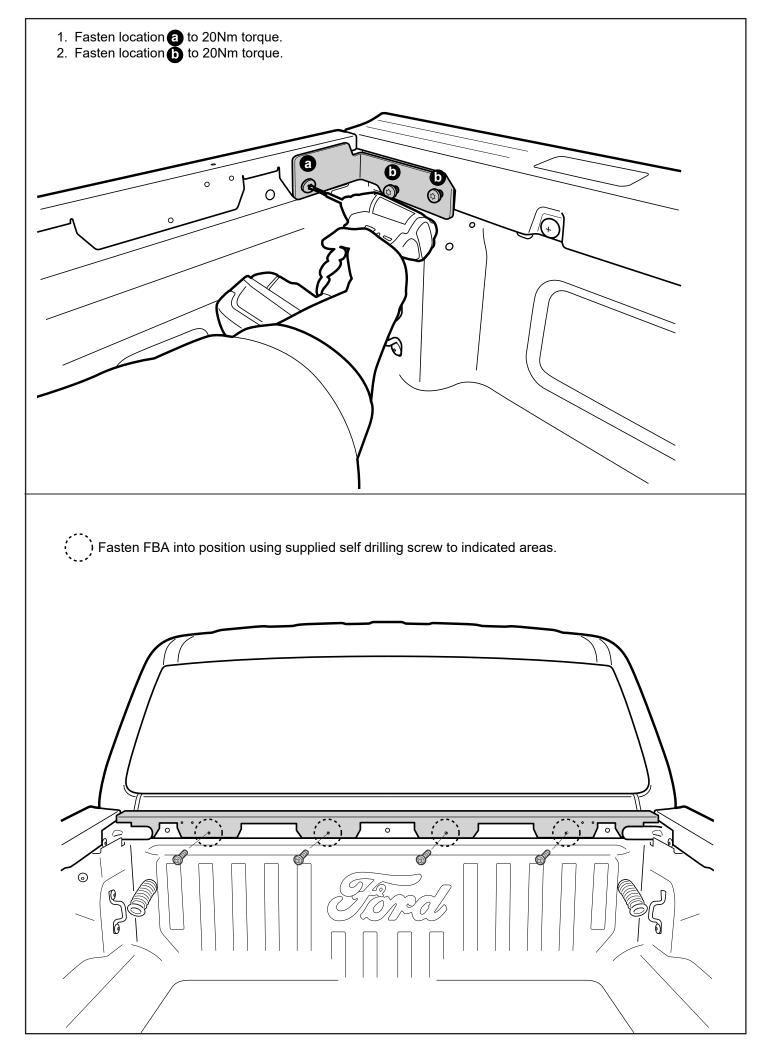

Sealing any gaps on the bed and FBA. It is recommended to use black sealant.


Apply an adequate amount of sealant to the areas indicated, then smooth sealant out.


Clean any excess sealant. Repeat to the other side.


Sealing any gaps on the bed and FBA. It is recommended to use black sealant.


Apply an adequate amount of sealant to the areas indicated, then smooth sealant out.


Clean any excess sealant. Repeat to the other side.

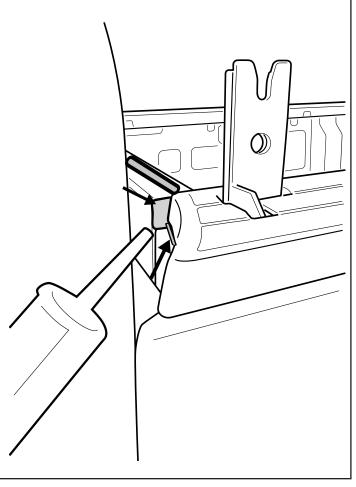


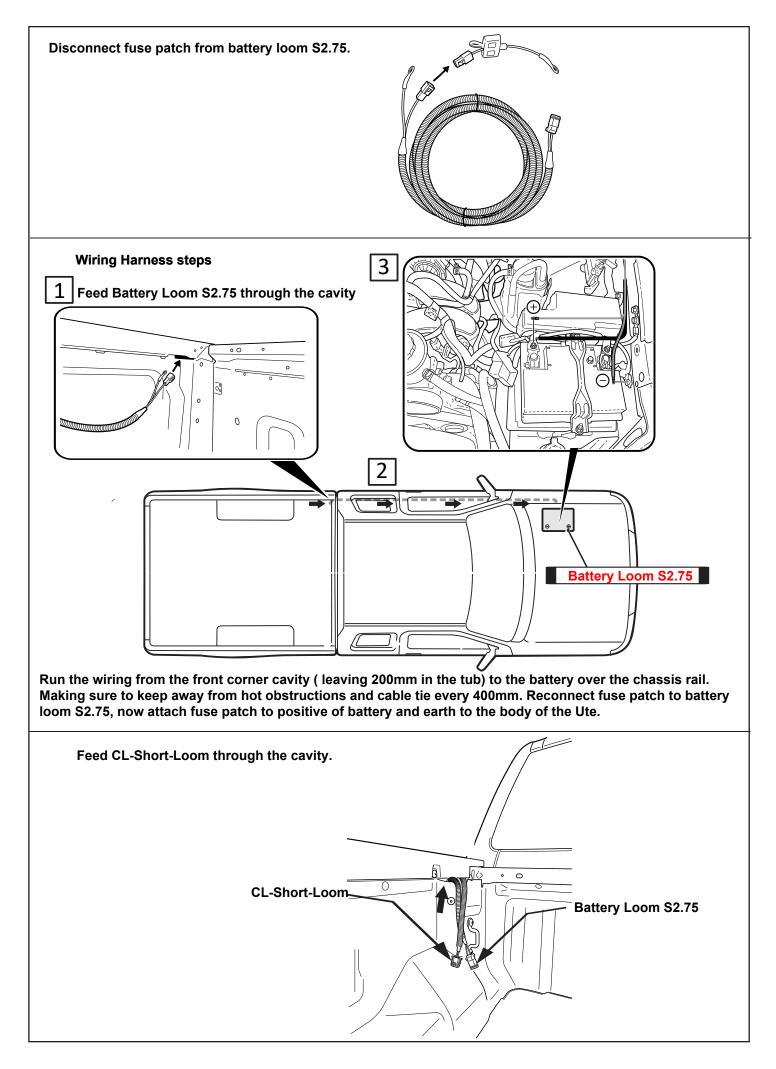


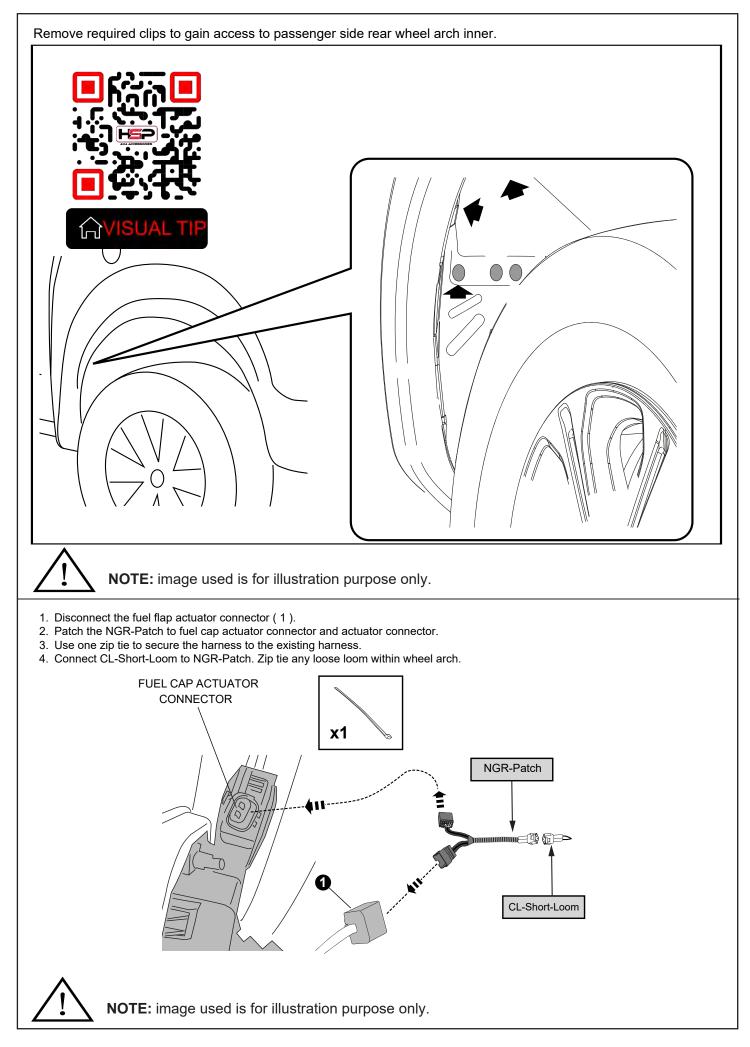


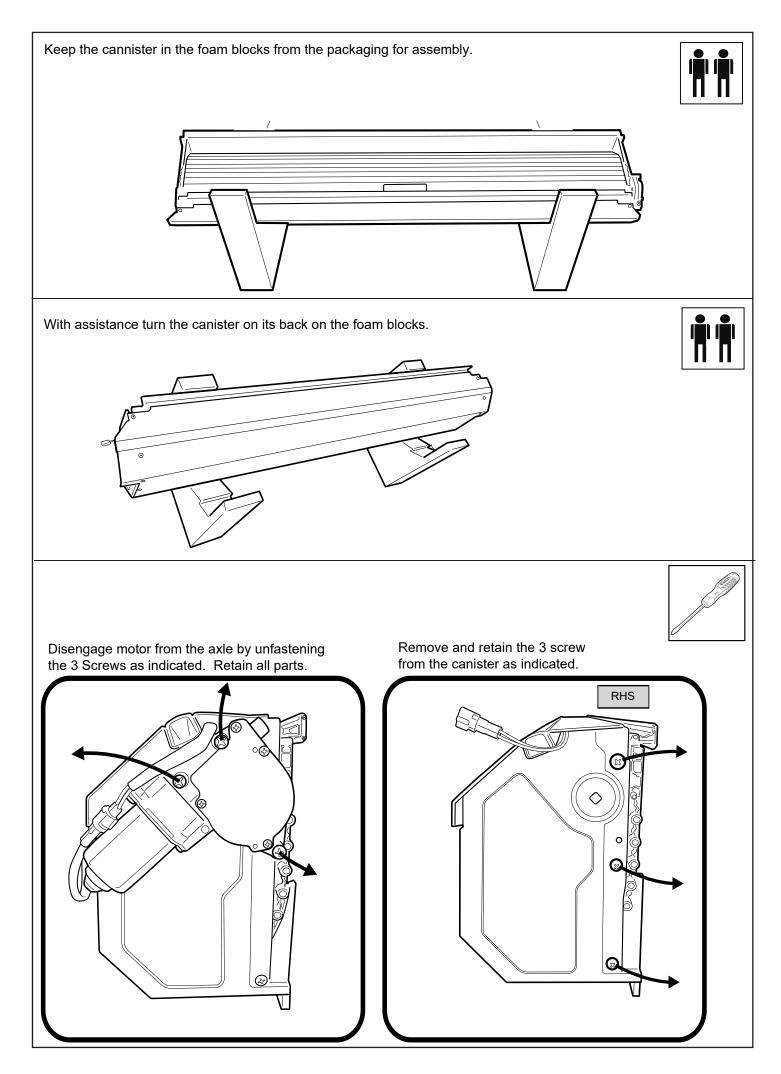


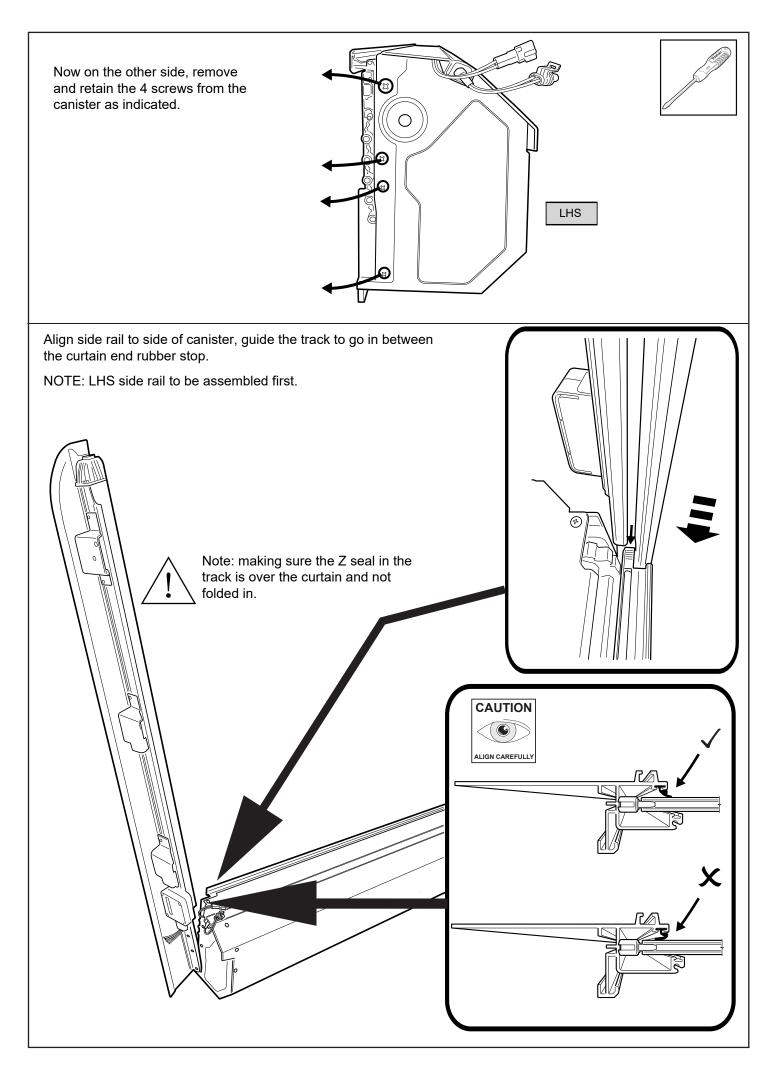


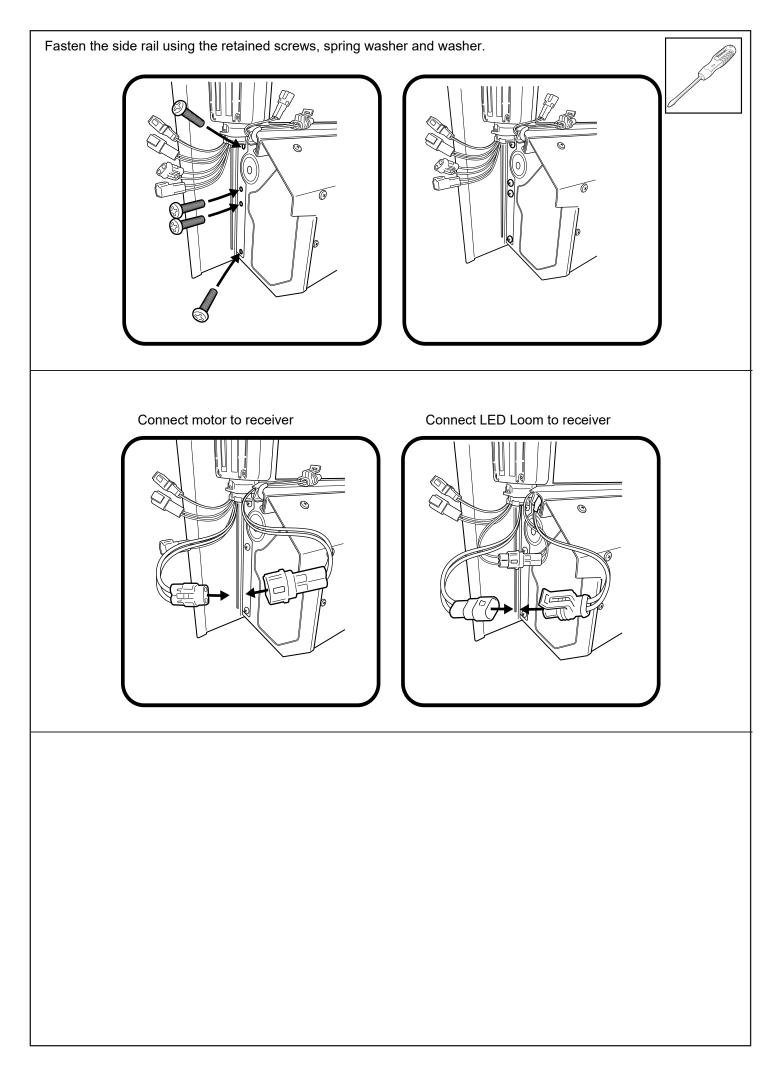

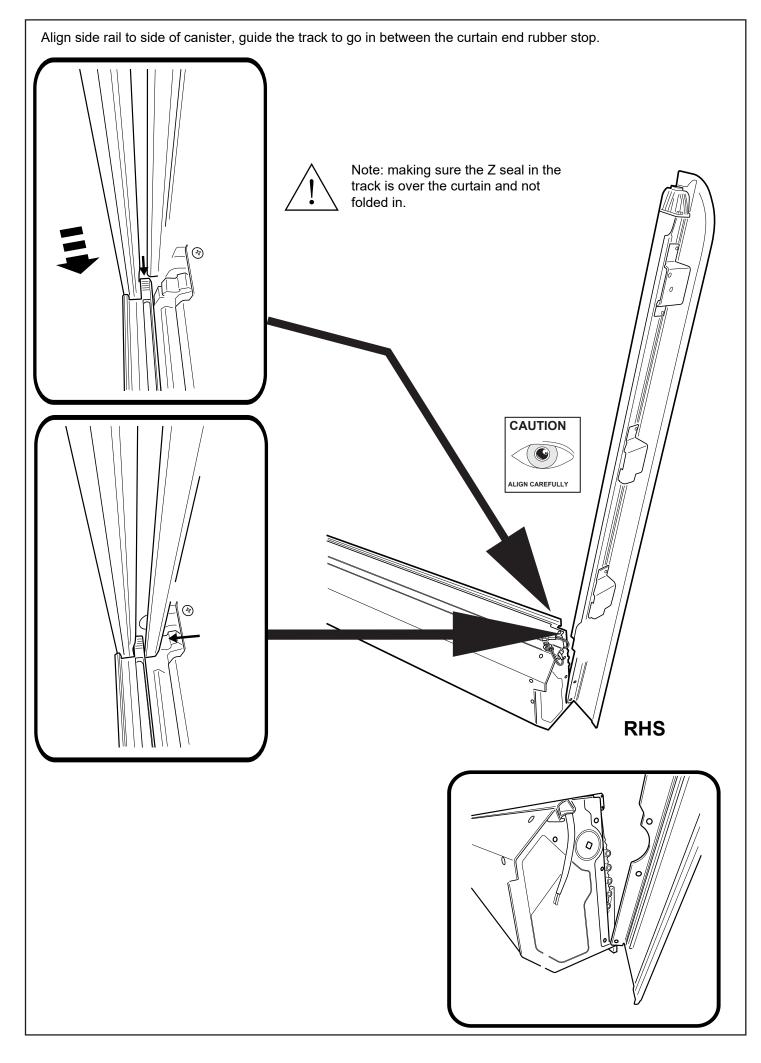


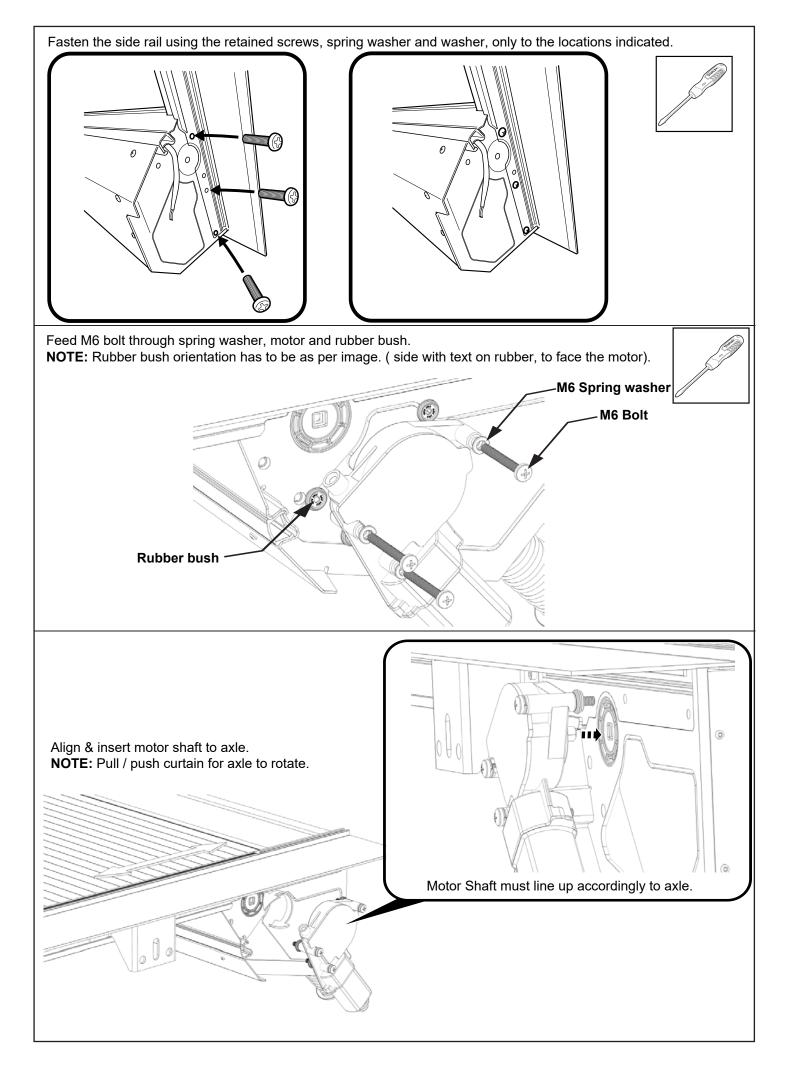


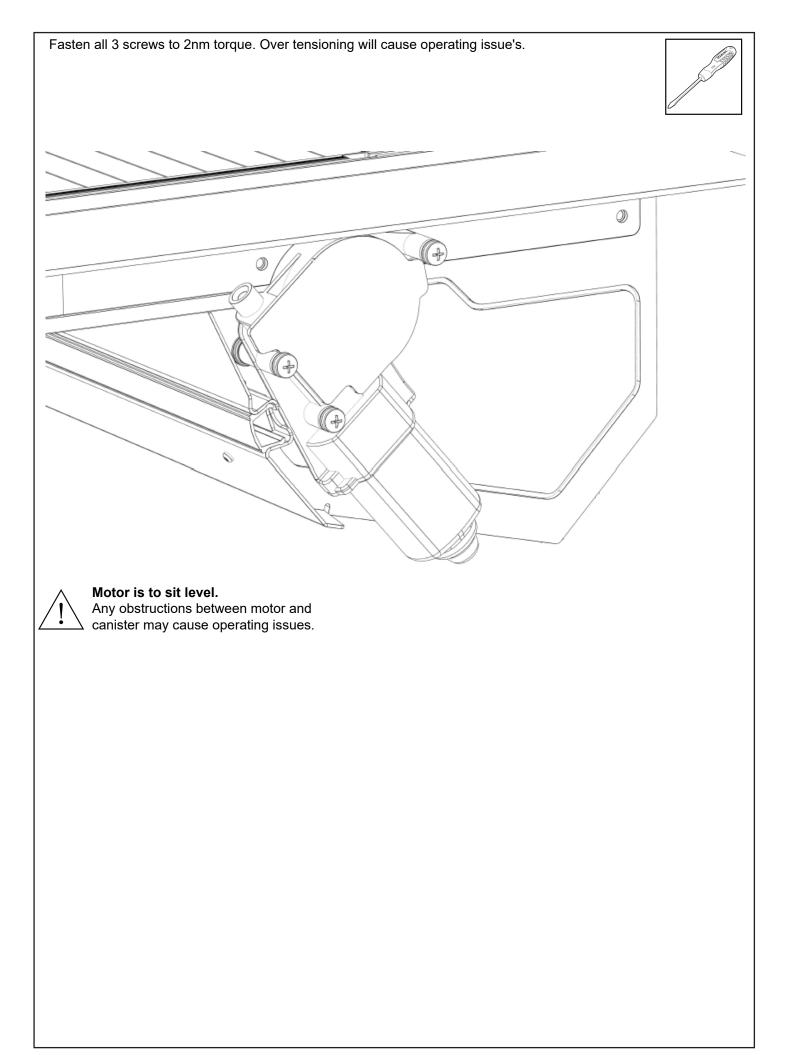

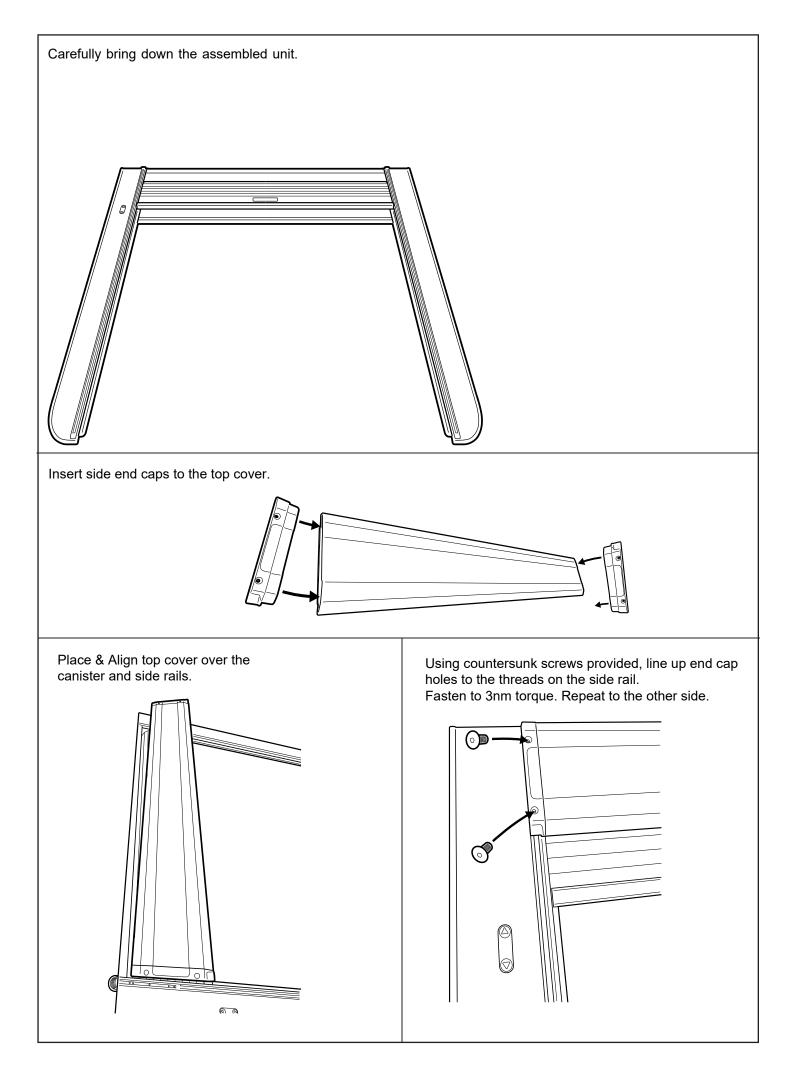



Apply 3M primer provided around all side rail holes.	
Peal away backing from foam sealant and stick to side rail. Repeat on all 5 holes.	

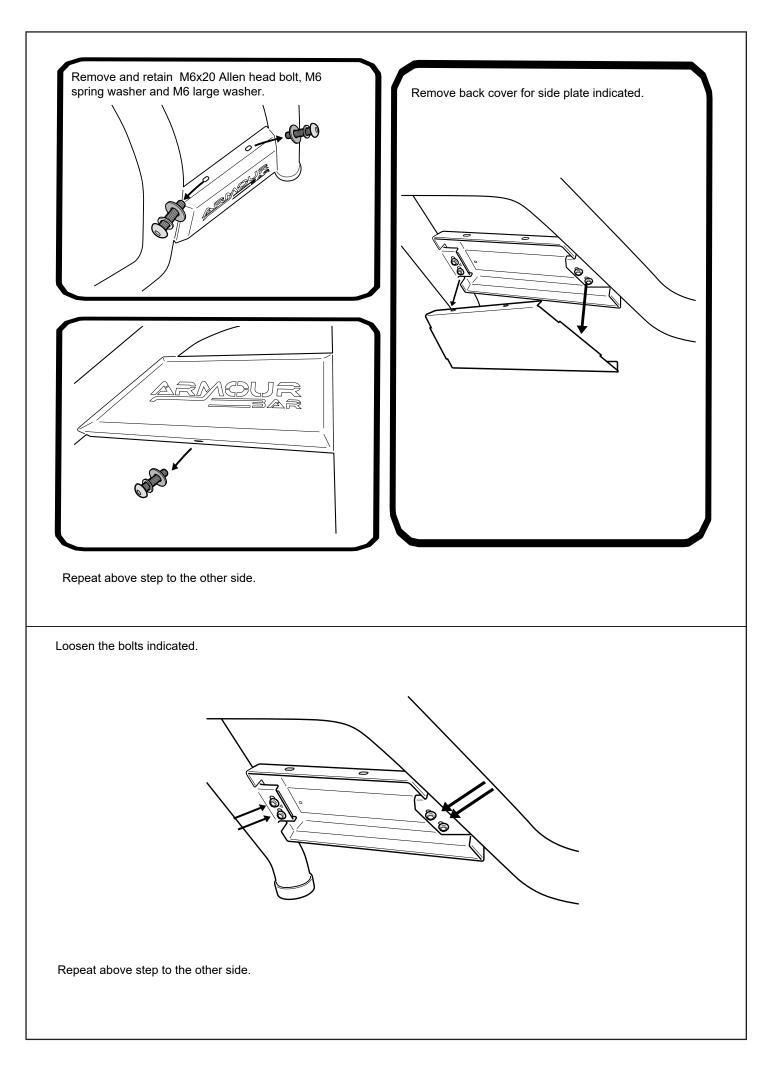

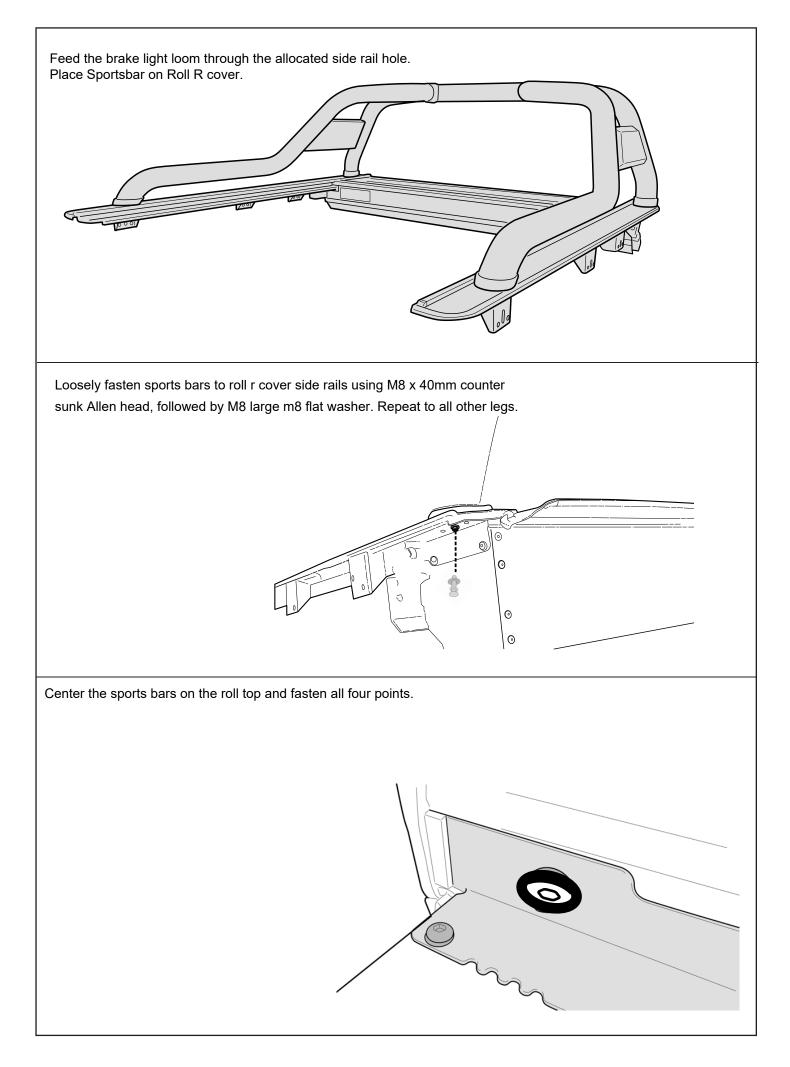


© Roll Я Cover

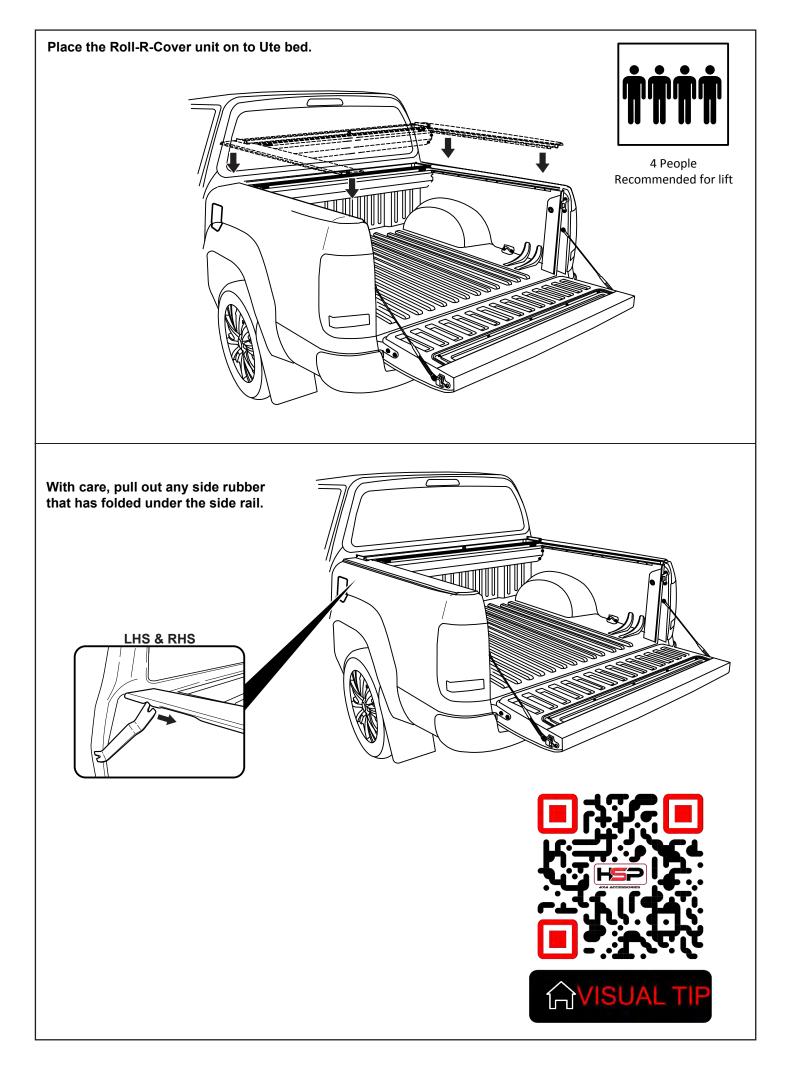


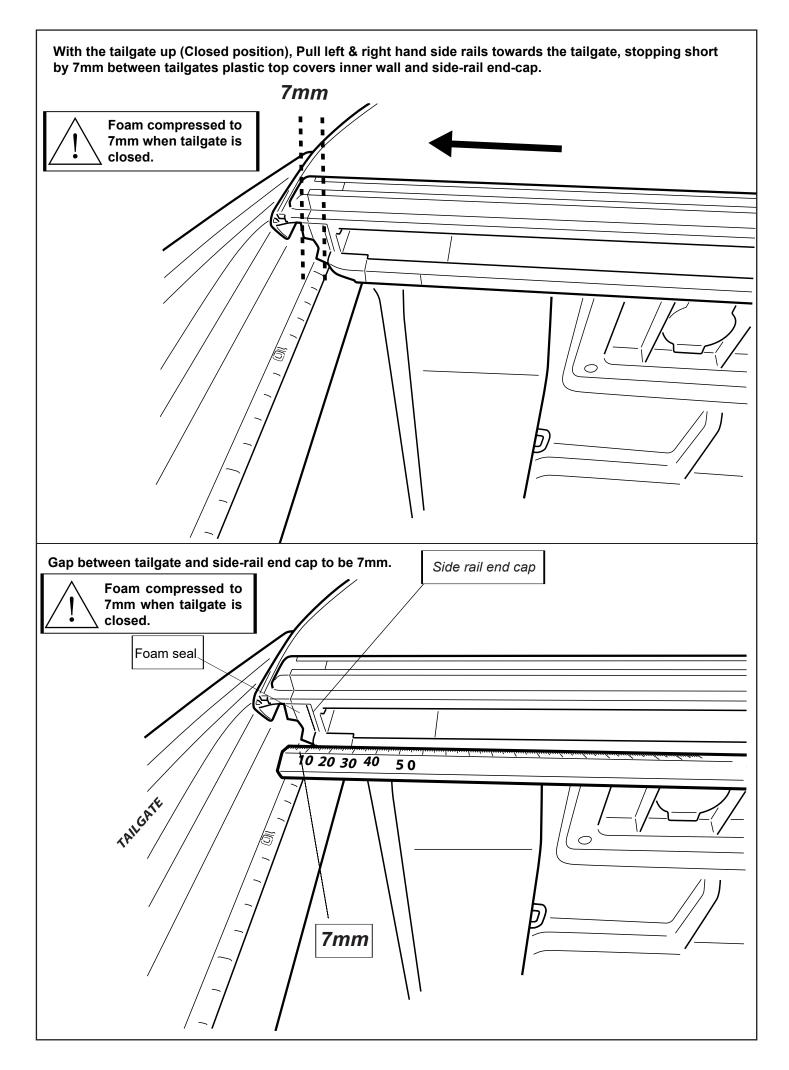



© Roll Я Cover

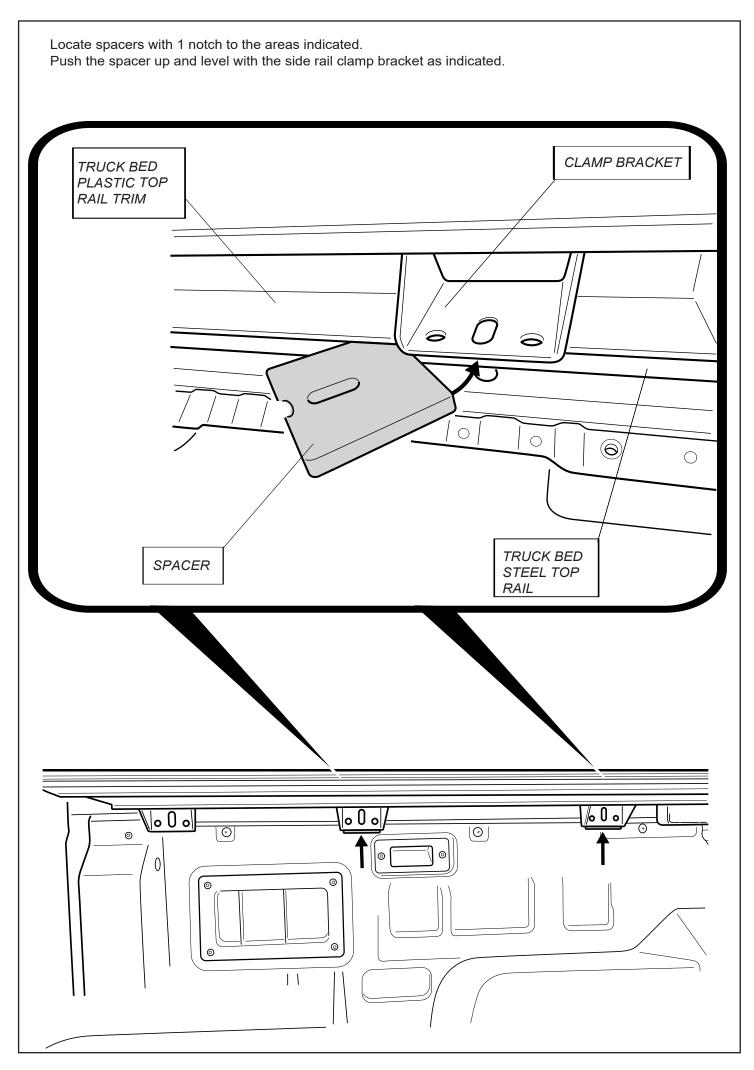



<text></text>

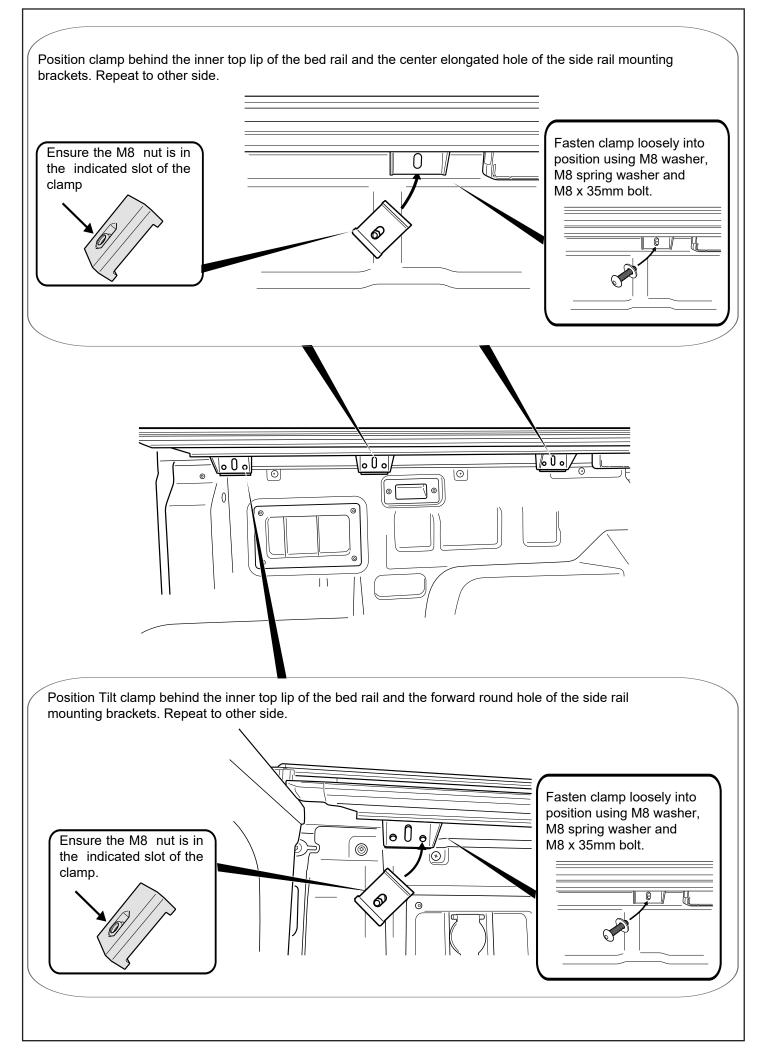

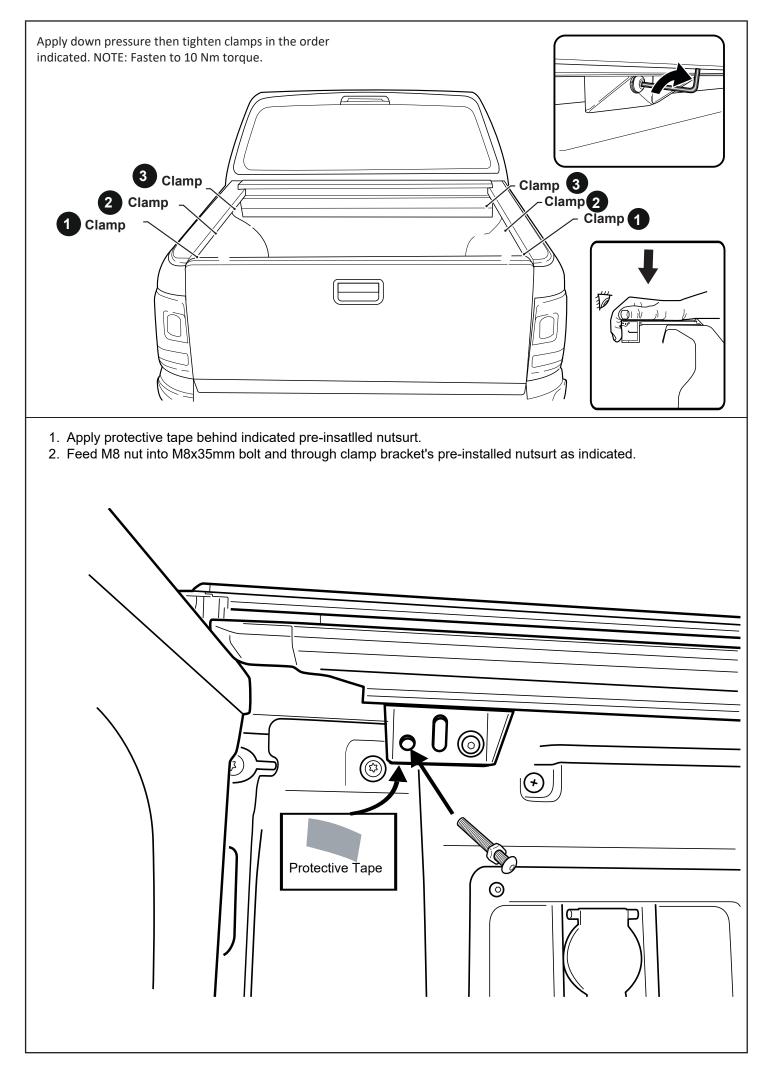


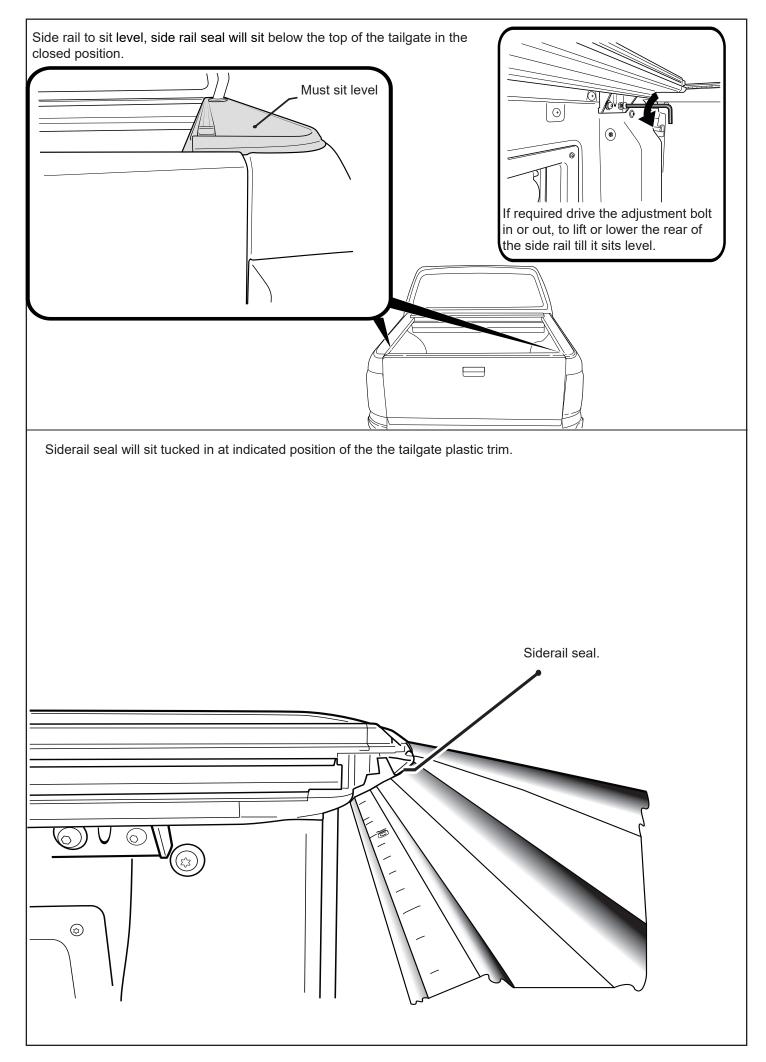

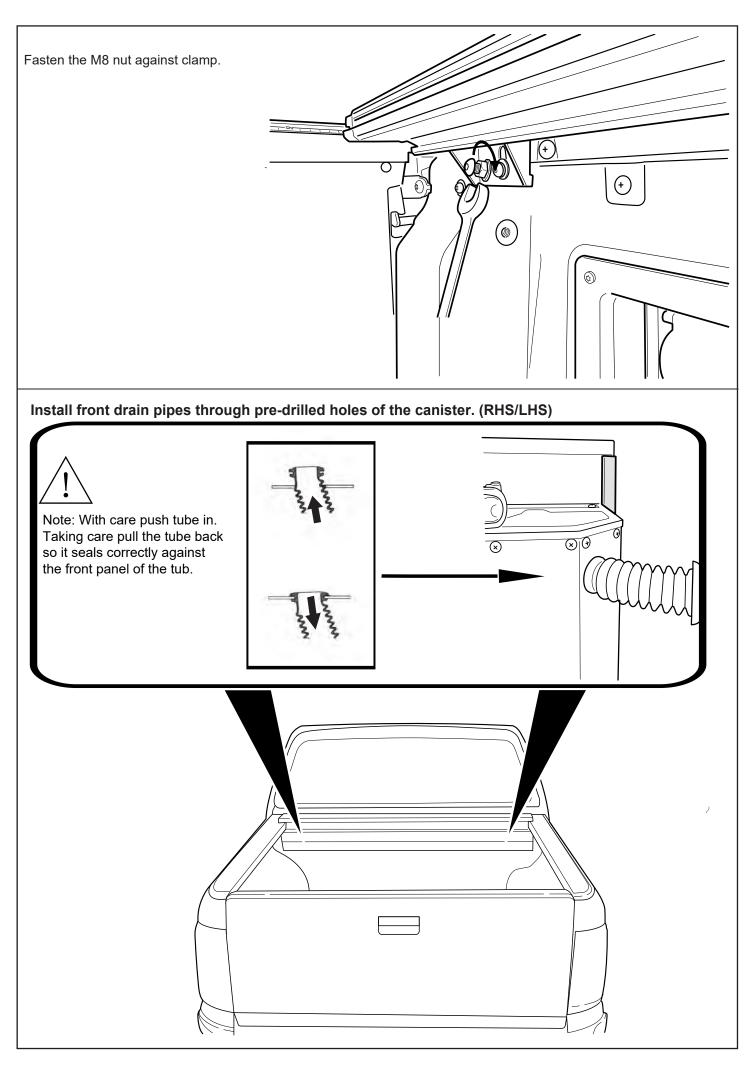

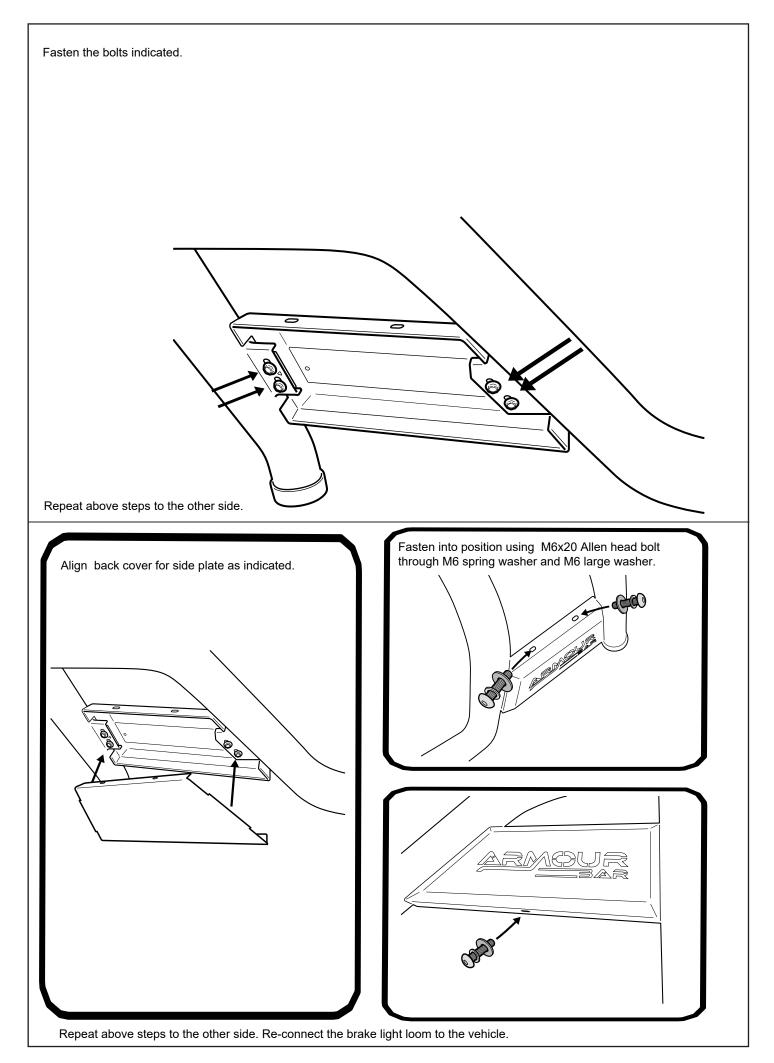

- a. Connect Battery loom S2.75 to Receiver loom.
- b. Carefully connect CI-Loom-short to Receiver loom.

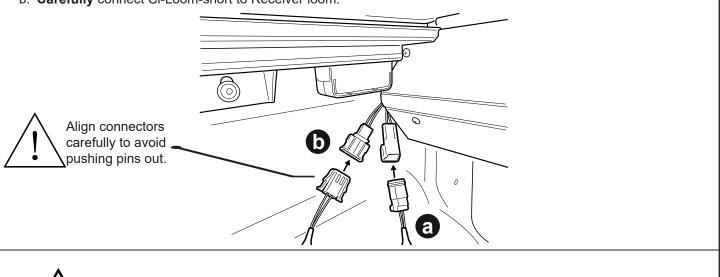



NOTE: 1. To wear in the Roll R Cover please fully open & close the cover approximately 15 times after install is complete.

2. Set your vehicle locking system to unlock all doors with one press of the factory remote unlock button. This setting can be found in your vehicle settings.

Operating instructions:

Press unlock on vehicle key fob to activate controller. When vehicle is unlocked the side rail sensor buttons will be active to control. When vehicle is locked the side rail sensor buttons will be inactive.

Using factory key fob to operate:

Pressing unlock twice on the factory key fob within 4 seconds, will activate the roll r cover to open. Pressing lock twice on the factory key fob within 4 seconds, will activate the roll r cover to close.

Vehicle proximity:

Tapping the proximity twice to open or lock the car door will act exactly the same way as the key fob being pressed twice.

