

Important Information!

Please note that with the box of the Roll R Cover, there is a service kit that includes:

- A User Guide
- Specific Lubrication
- A Servicing Guide
- A Warranty Guide

This must be handed over to the end user in order for them to register their warranty and understand the servicing requirements.



Roll R Cover Series 3



WWW.HSPUTELIDS.COM

Part No: VA4RS3-AB


INSTALLATION INSTRUCTIONS

Vehicle Model: VOLKSWAGEN AMAROK NEW GENERATION 2023+ Fitted with Armour bar





INSTALLATION TIME: 2 hours and 15 minutes (Approximately)


IMPORTANT	 Tonneau Cover is not dust or If contact with volatile chemic 	o be under the closed cover at an water tight cals occur, clean Cover with mild MAROK Warranty Additional Info If you are self installing: important information. If you are fitting on beha	detergent and water solution
Care Instructions	 Read Instructions fully before commencing installation. Clean Cover with a mild detergent and water solution Do not use abrasive cleaners or solvents Refer to manufactures instructions applicable to power drill. Protect Tub floor against scratches during installation process. 		
Maintenance	Refer to Maintenance instructions.		
Tools Required	 Pen / Marker Centre Punch Drill & Drill bits Caulking Gun Silicon - Non Acetic 	 Scissors & Knife Spanner & Socket Tape measure Holesaw Filing tool 	 Soapy water solution Allen Key set Screw driver Rust Inhibitor Trim Removal Tool
PERSONAL PROTECTIVE EQUIPMENT:		Rubber Gloves G	boggles Hearing Protection

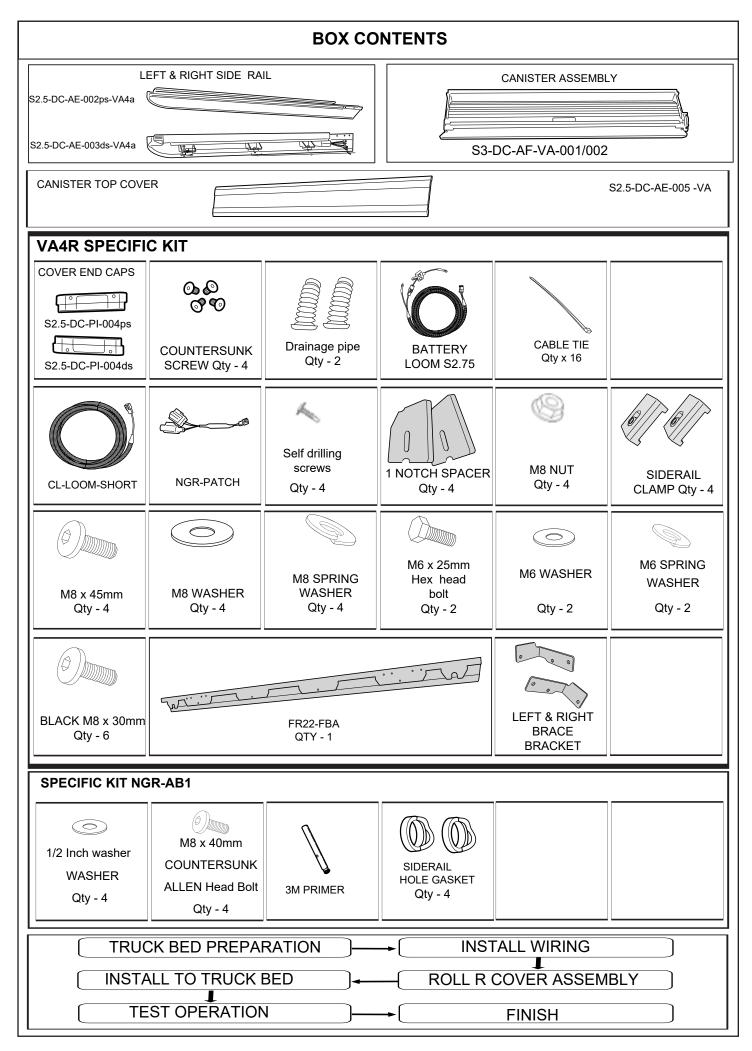



TUB PREPARATION

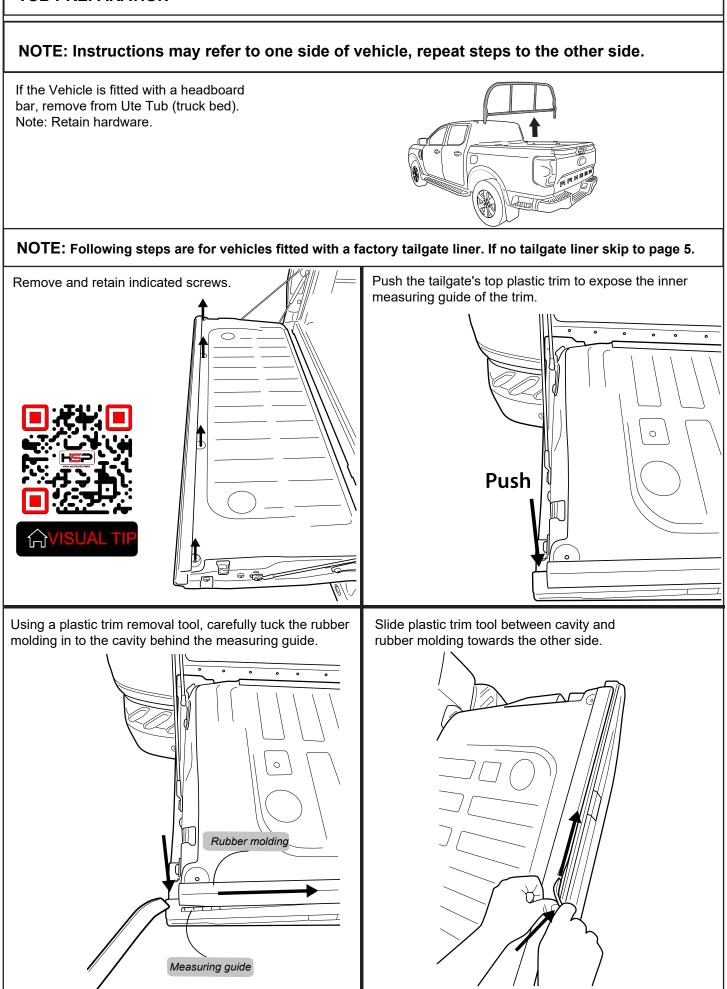


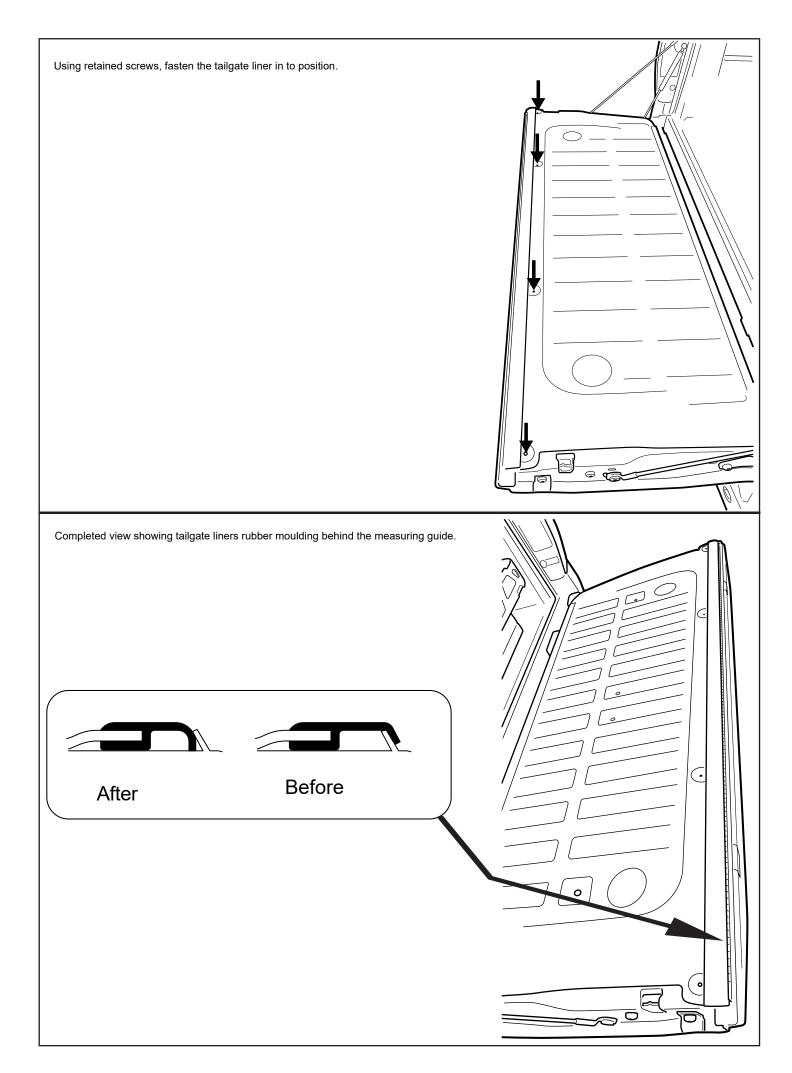


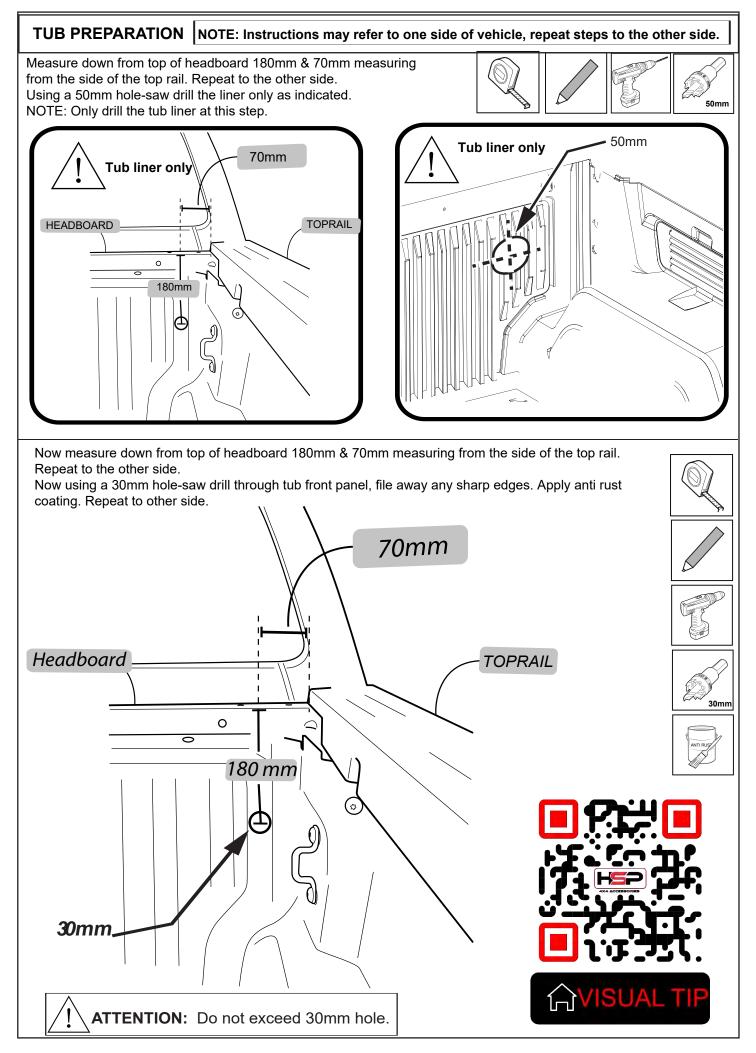


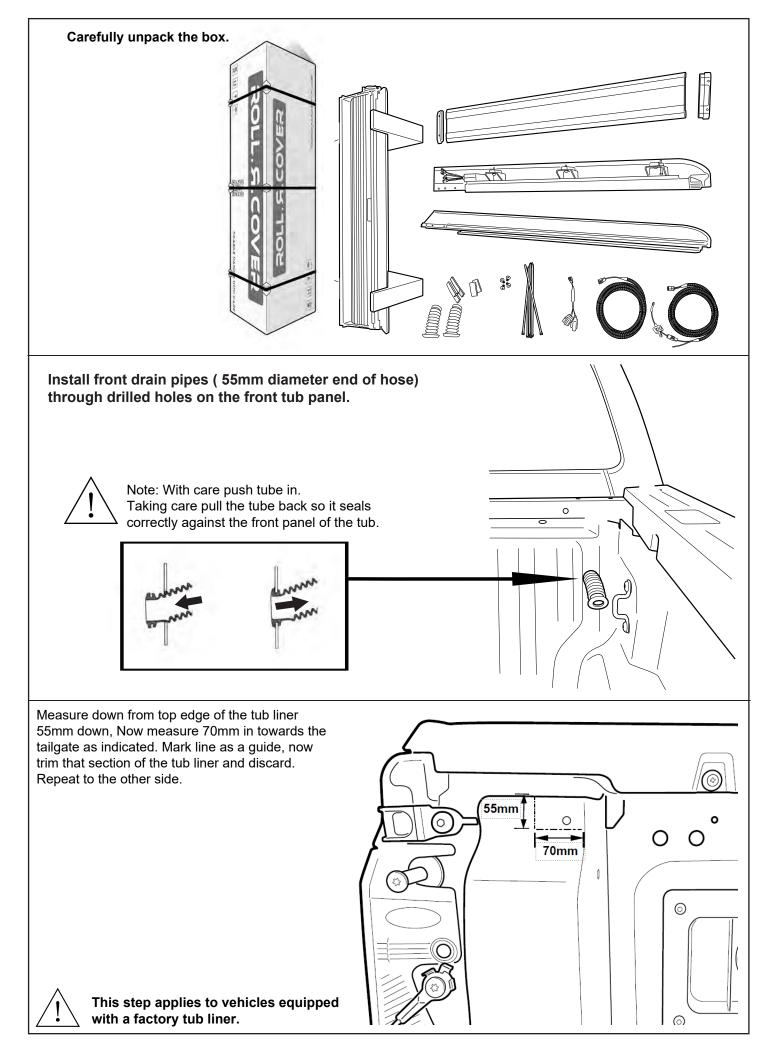


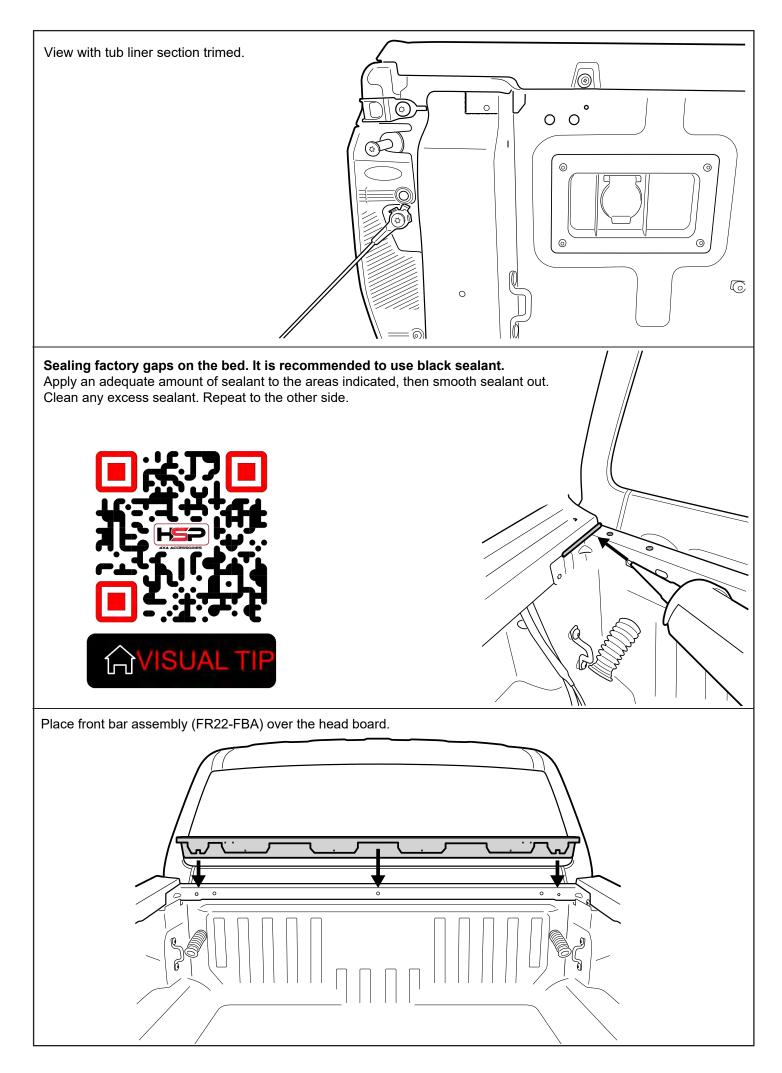


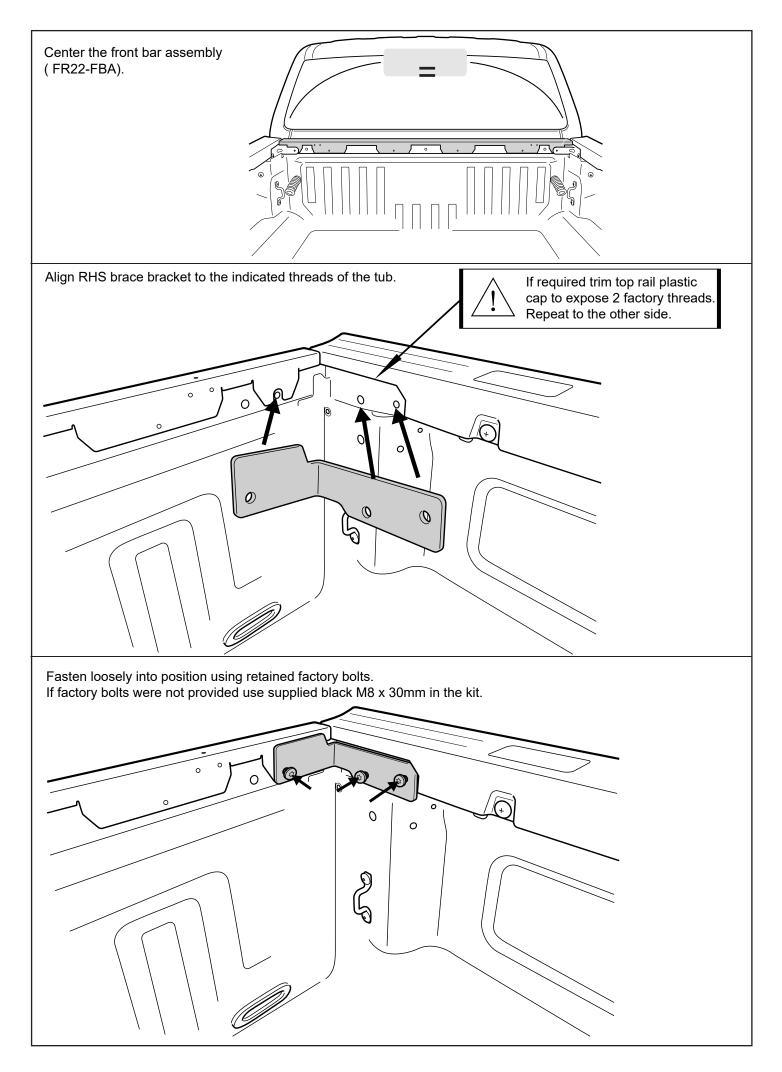


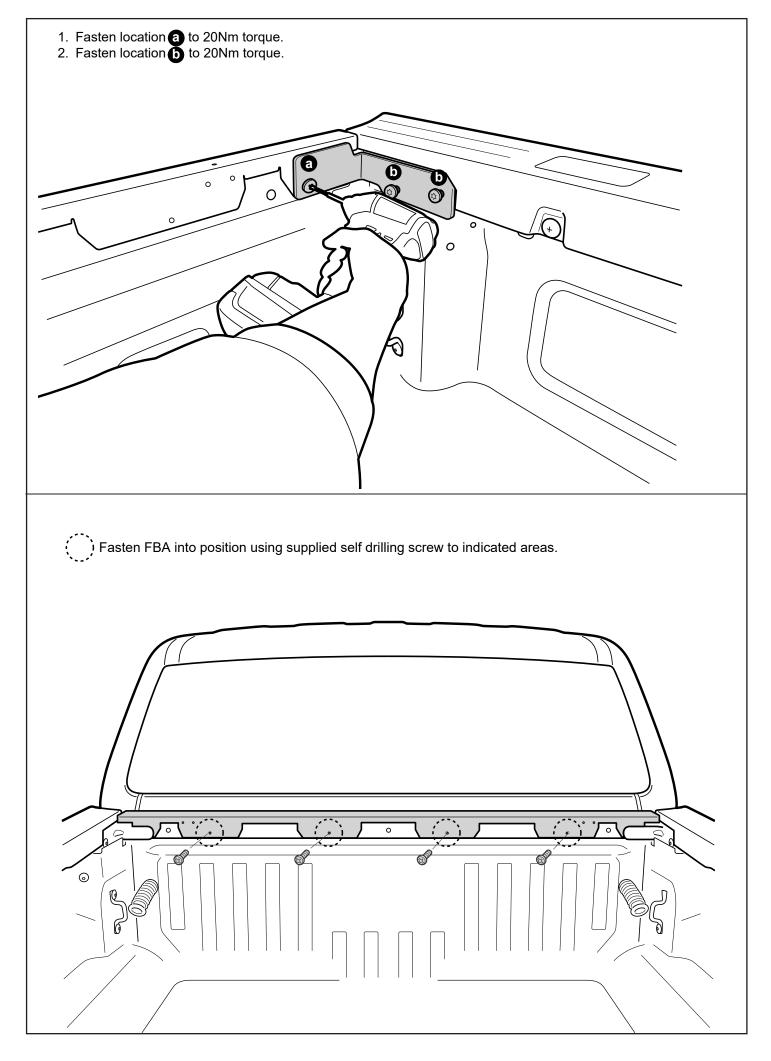


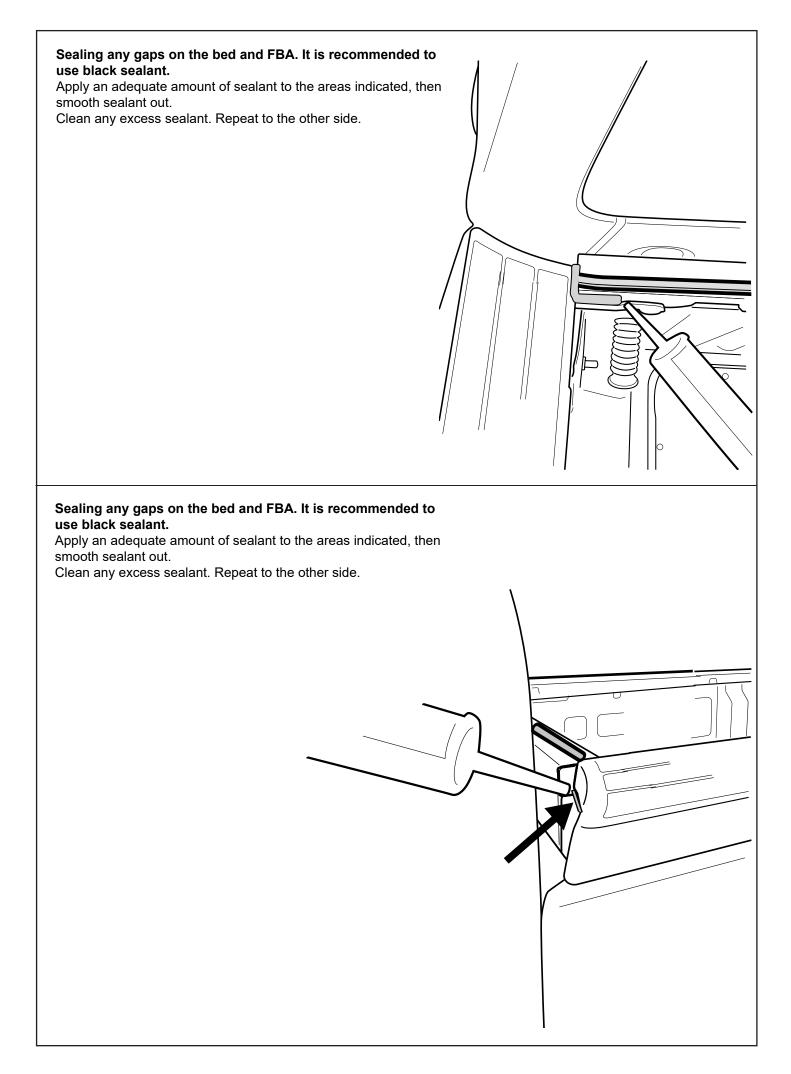

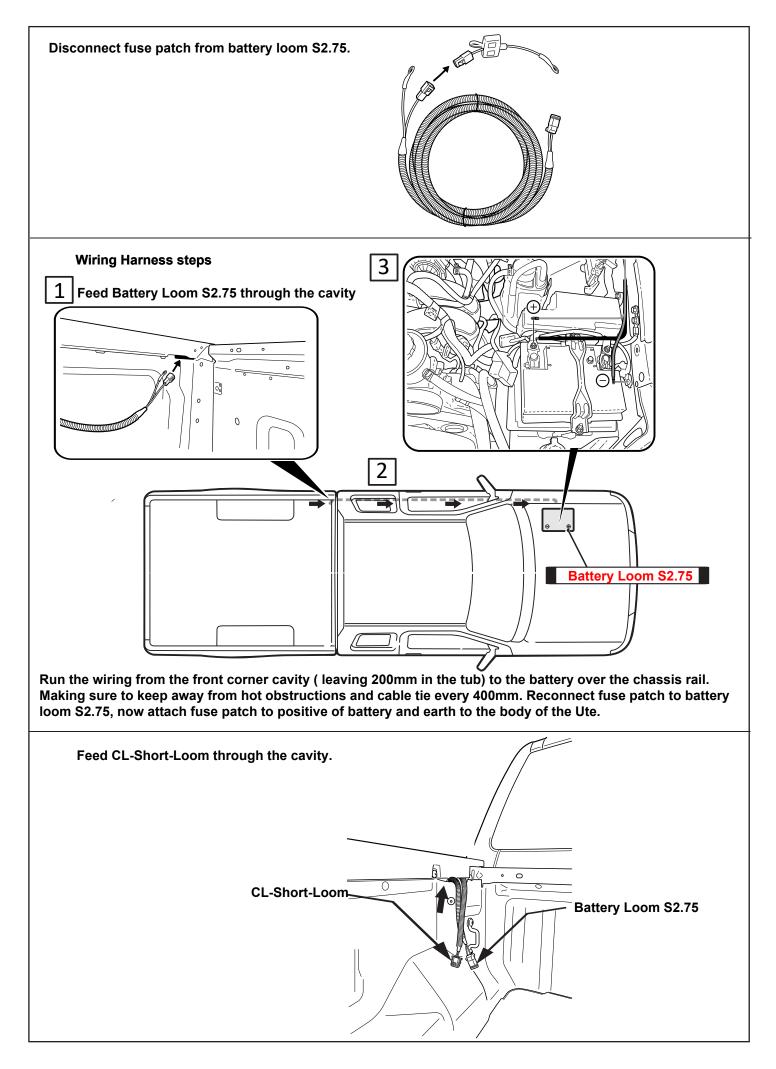


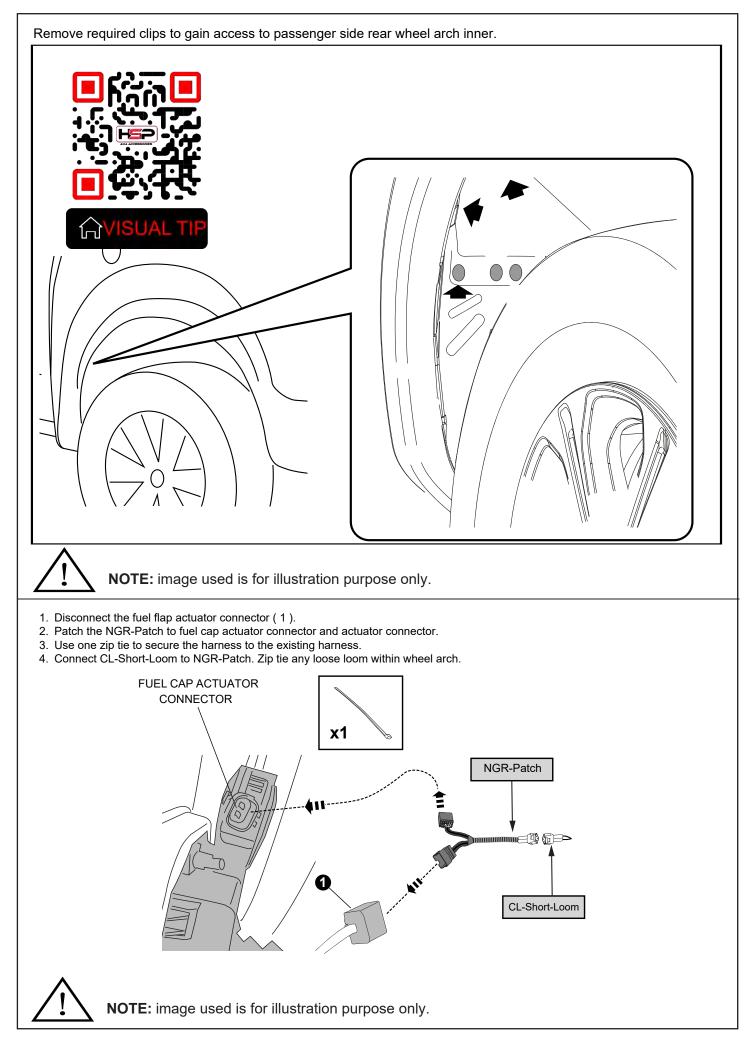


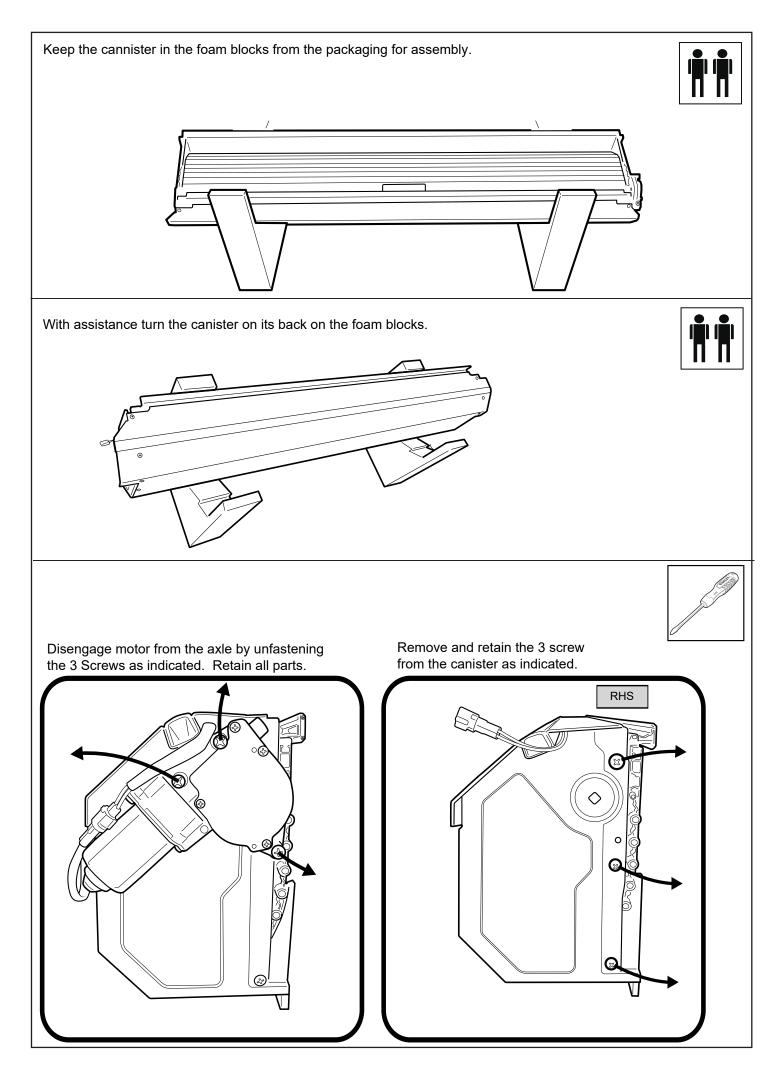


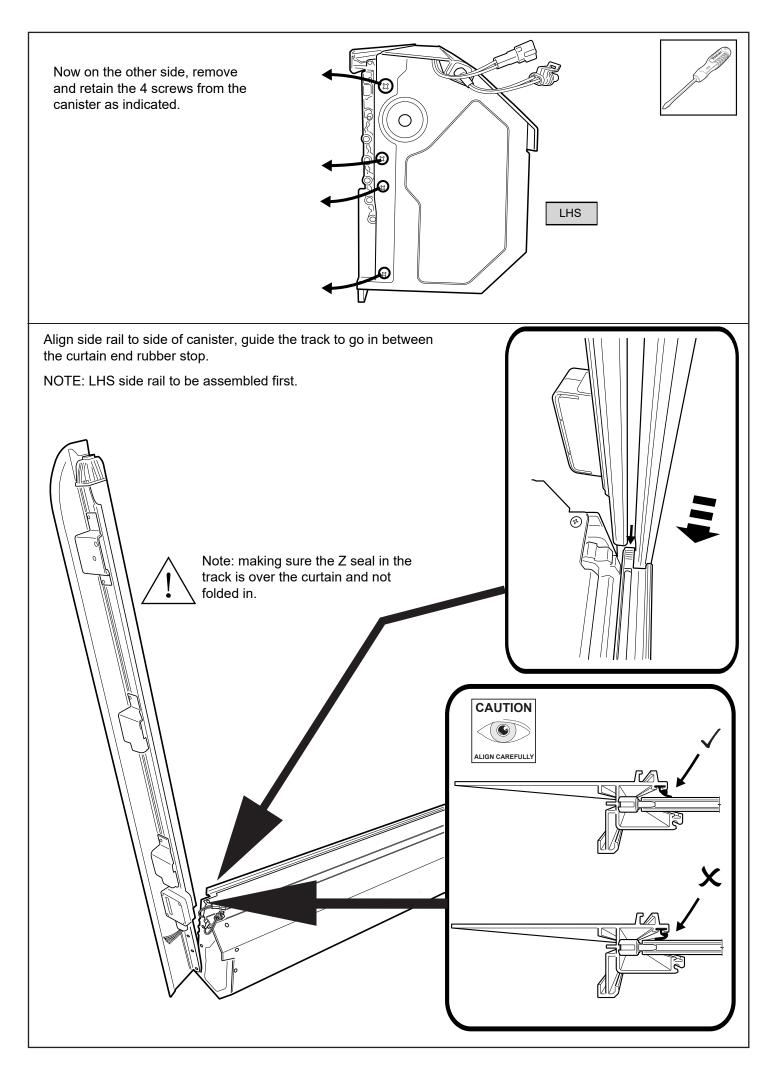



- 1. Using the retained screws, spring washer and washer, Loosely fasten the side rail to the location indicated.
- 2. Side rail edge must compress and meet with the canister profile as indicated below.
- 3. Fasten all screws tight.

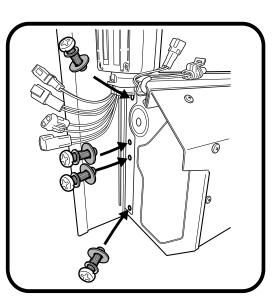


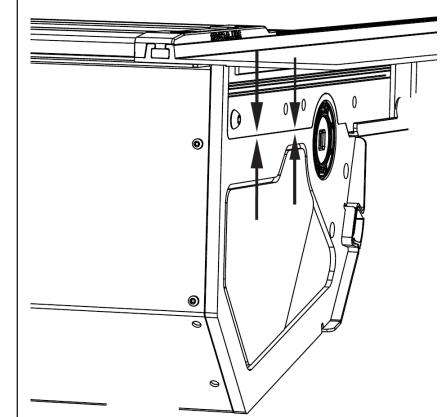


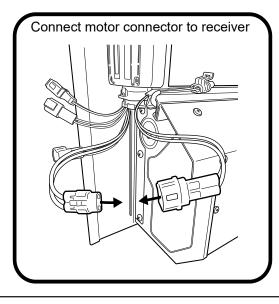


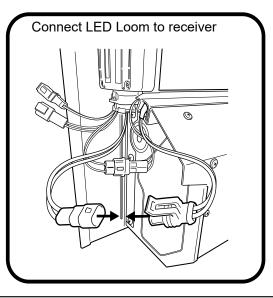

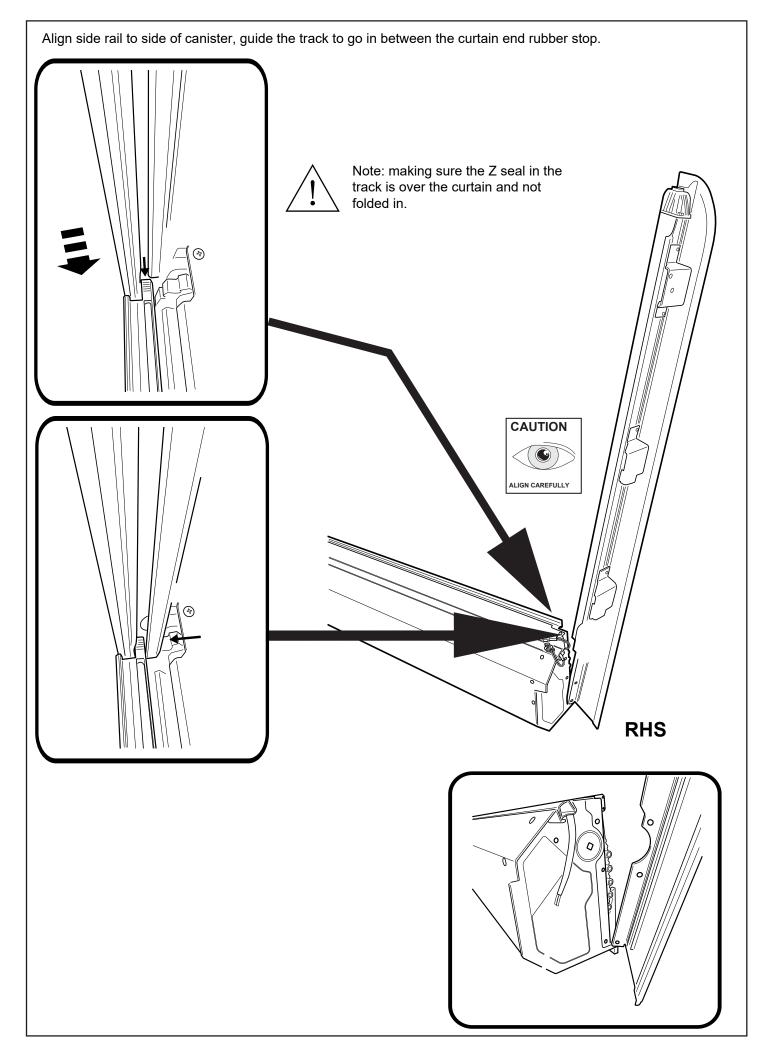


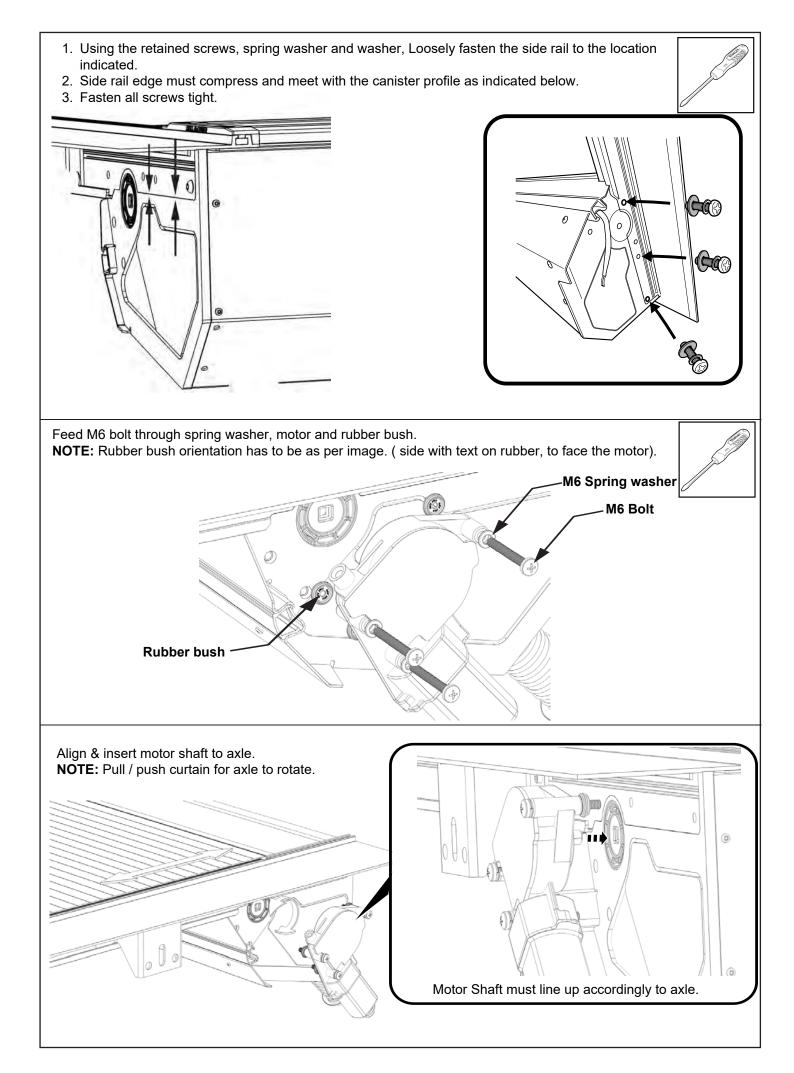


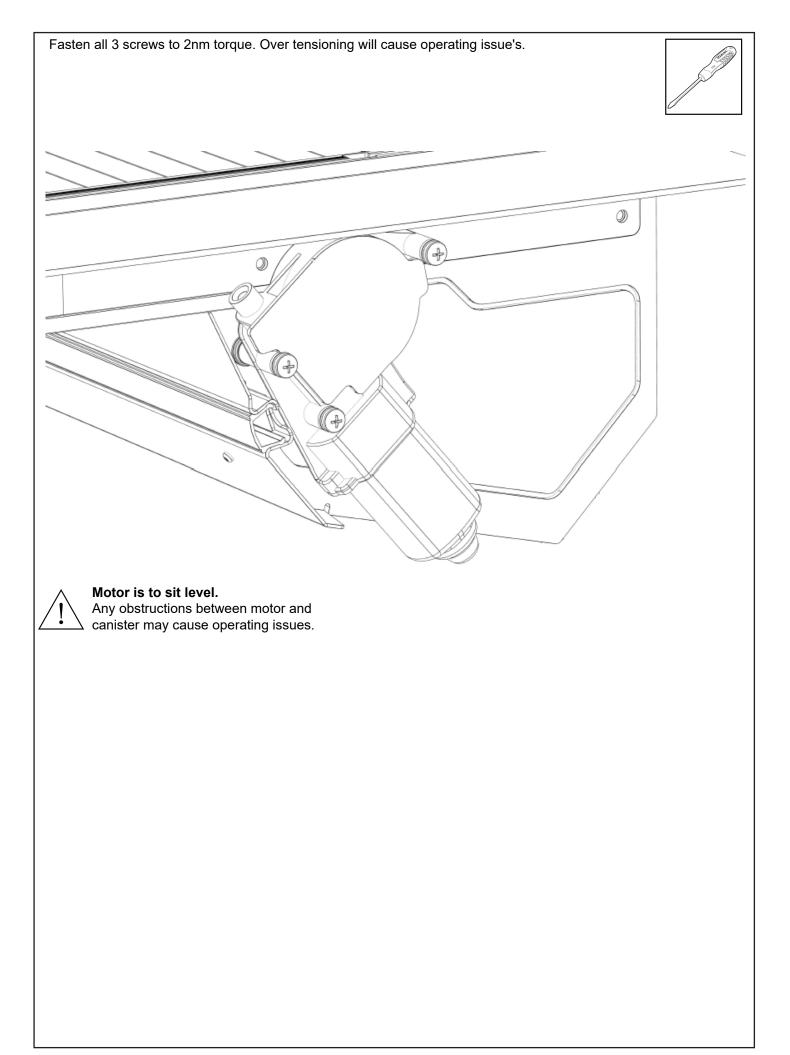


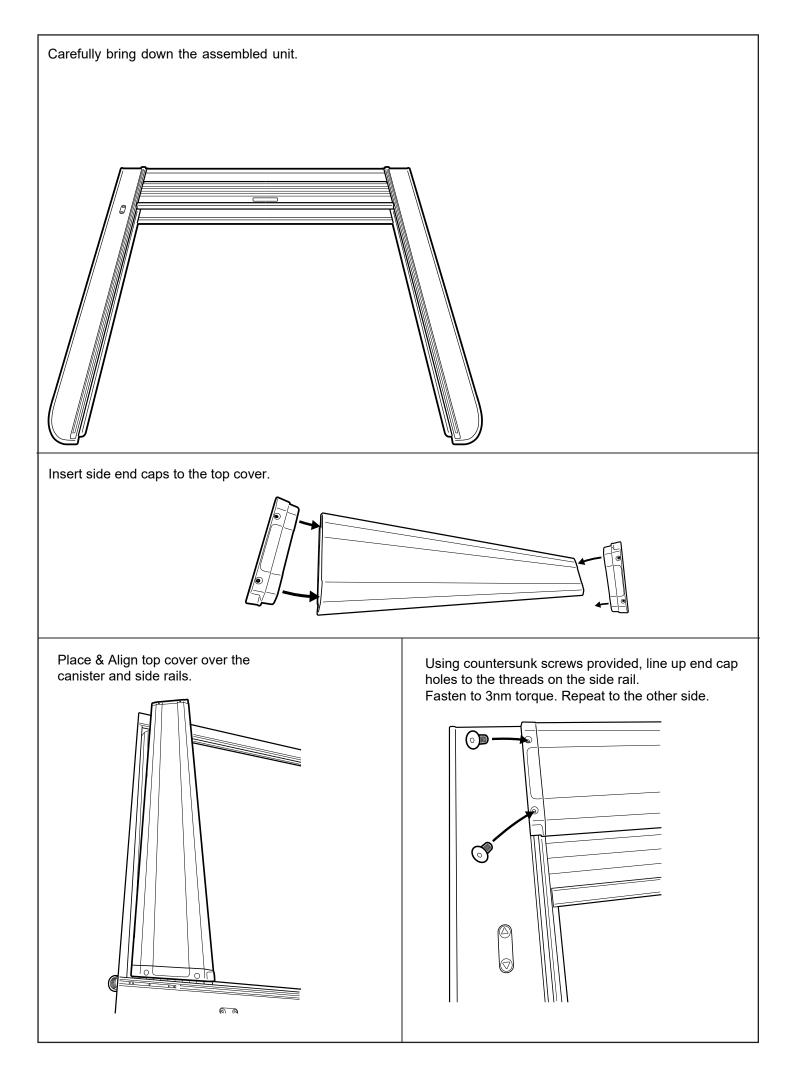



Apply 3M primer provided around all side rail holes.	
Peal away backing from foam sealant and stick to side rail. Repeat on all 4 locations.	

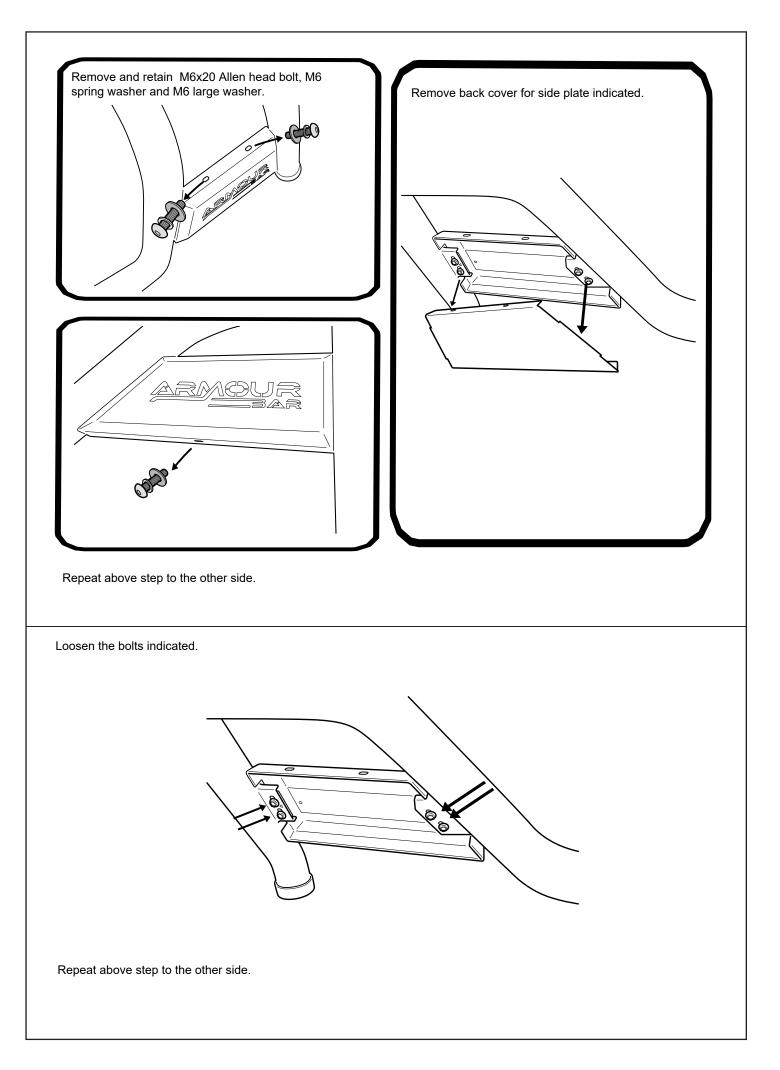

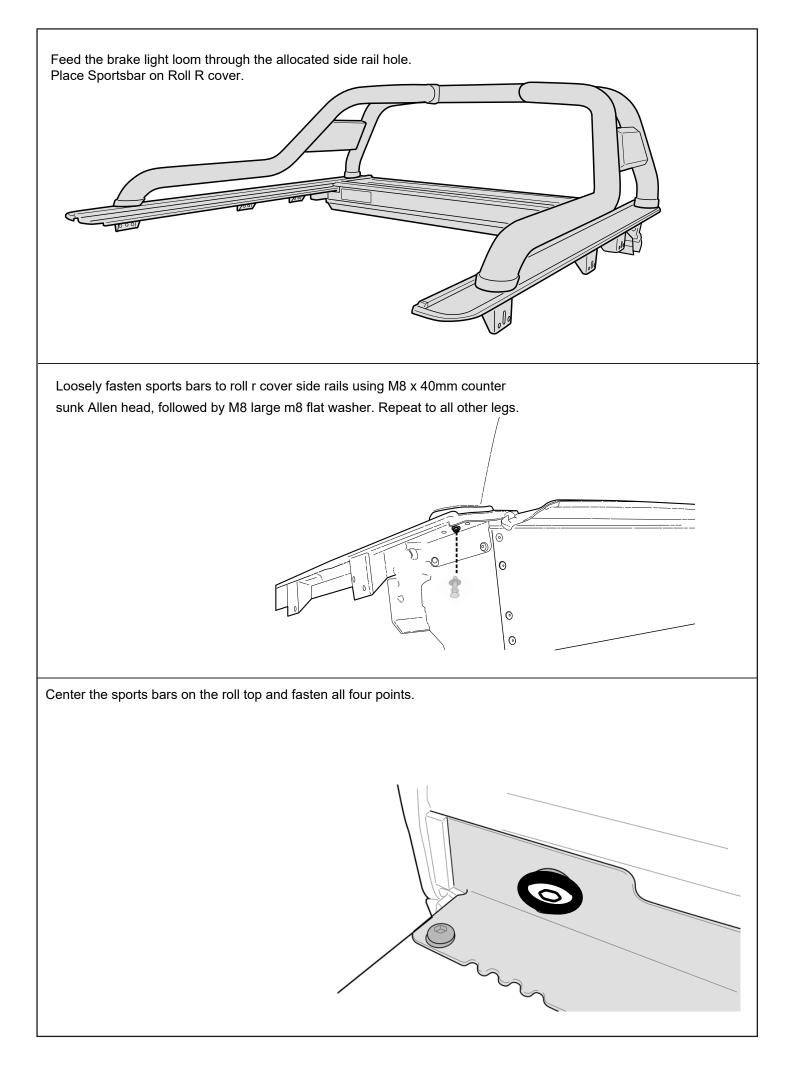


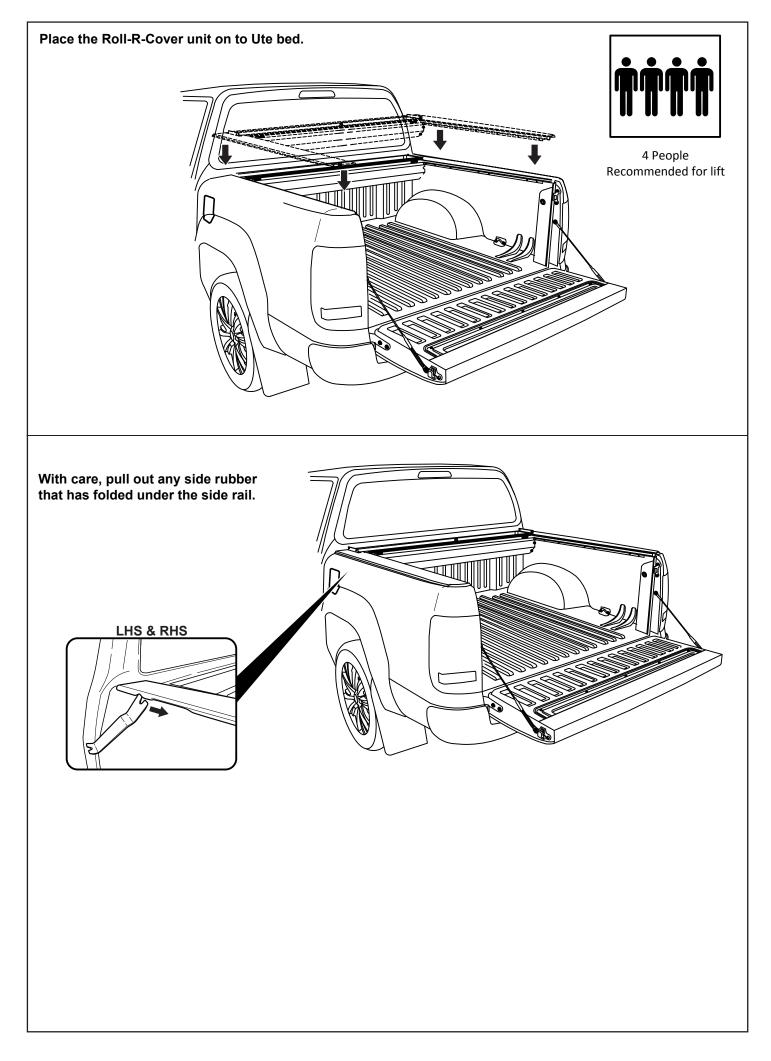


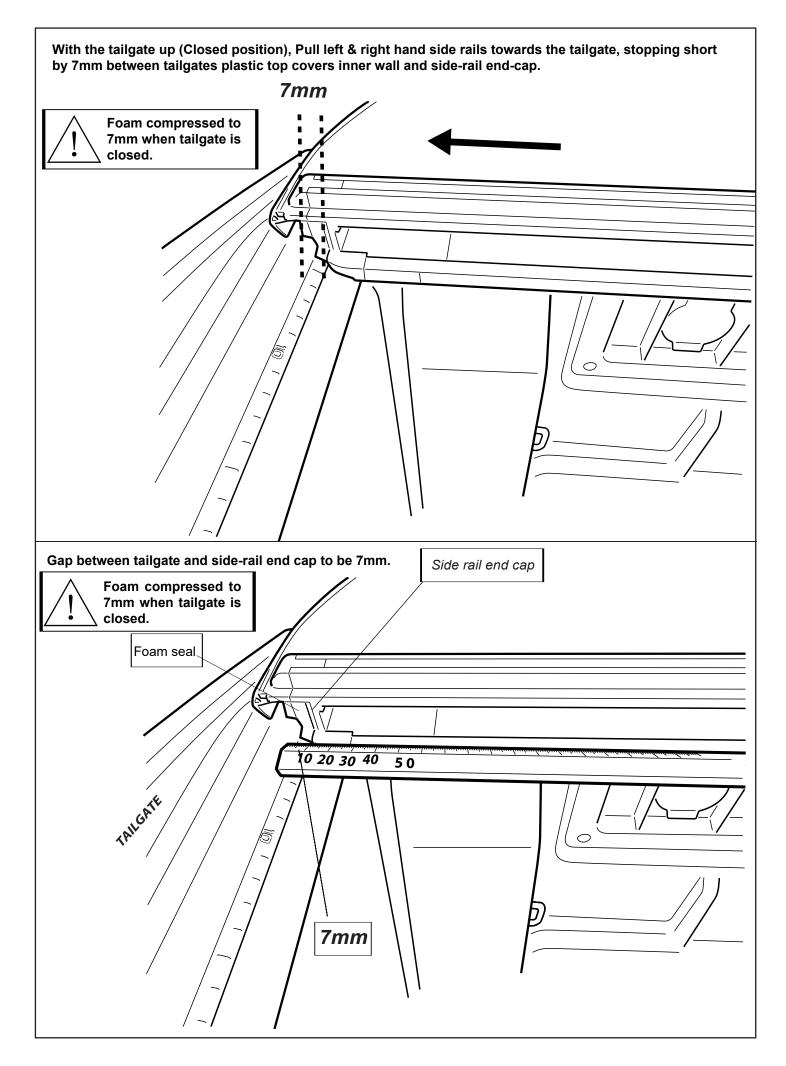

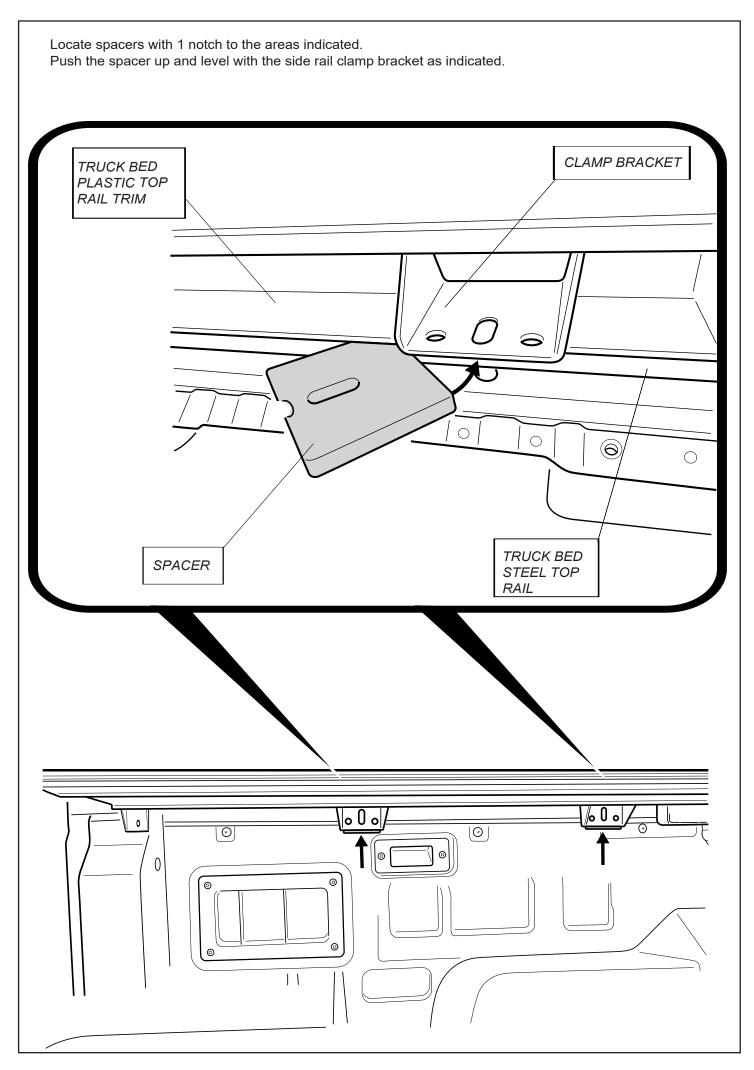


- 1. Rear brackets elongated hole will line up with the thread in the body as indicated.
- 2. Feed M6x25mm hex head bolt followed by M6 spring washer and M6 flat washer through bracket and loosely fasten to the thread of the ute bed.

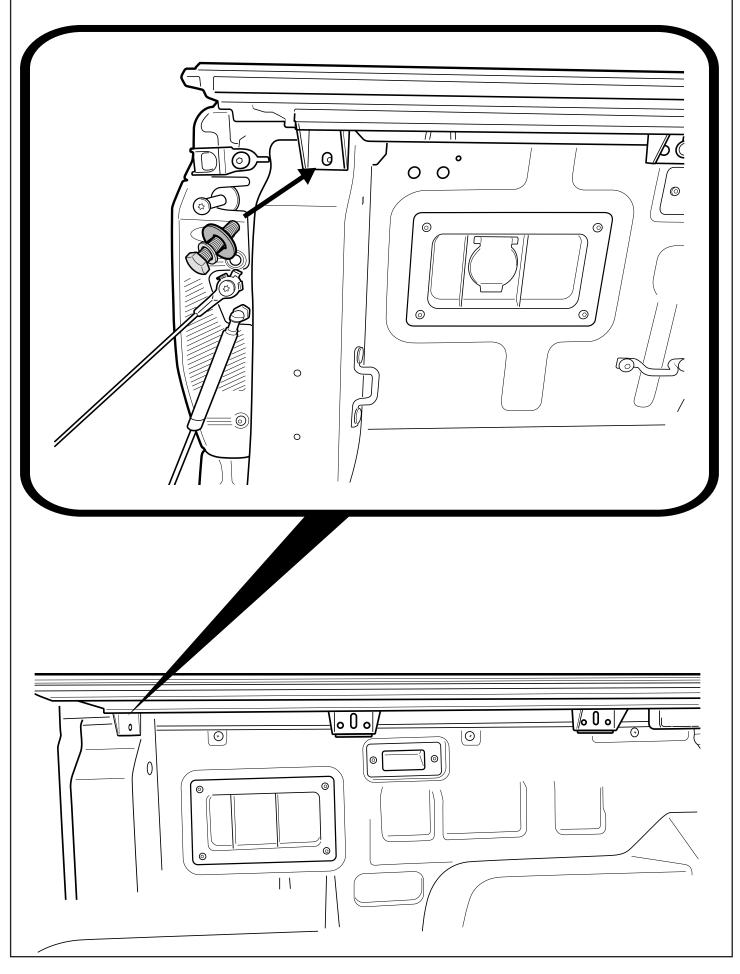


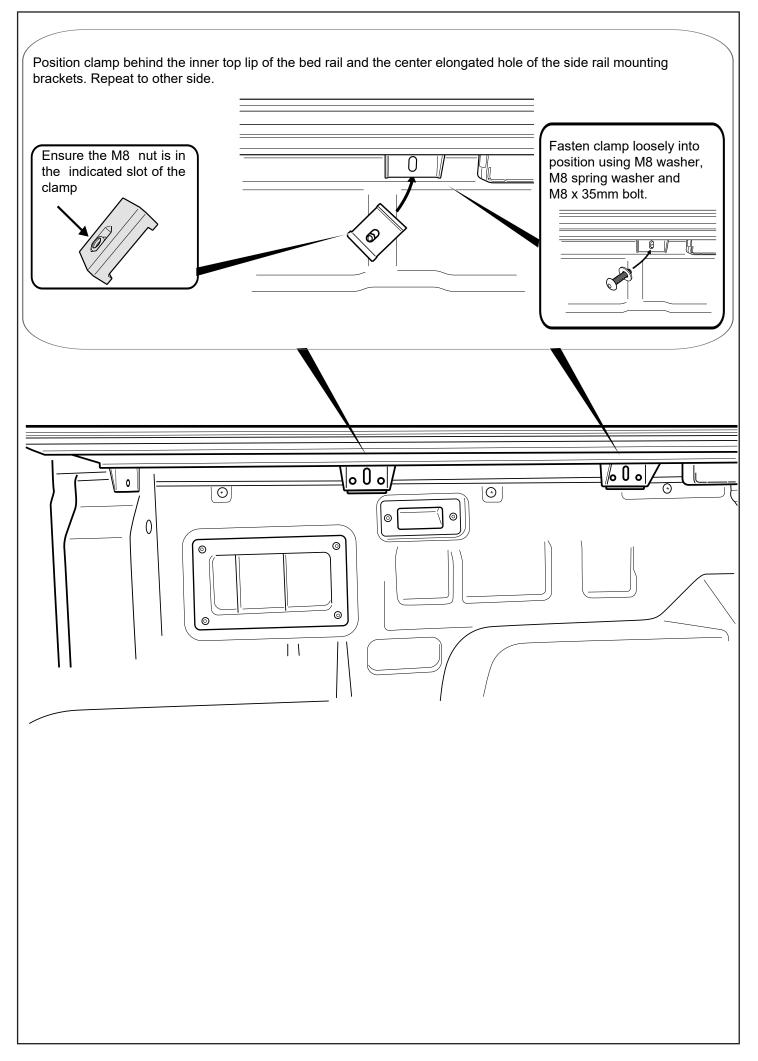


Please follow the steps in order starting with point 1.

- 1. With assistance apply down pressure to the side rail surface. Keeping that position, now fasten the M6 x 25mm hex bolt to 8Nm torque.
- 2. Making sure the black spacer is still in-line with the bottom of side rails clamp bracket, push clamps up as far as possible into the inner rail of the tub and fasten bolts to 10Nm torque.
- 3. Making sure the black spacer is still in-line with the bottom of side rails clamp bracket, push clamps up as far as possible into the inner rail of the tub and fasten bolts to 10Nm torque.

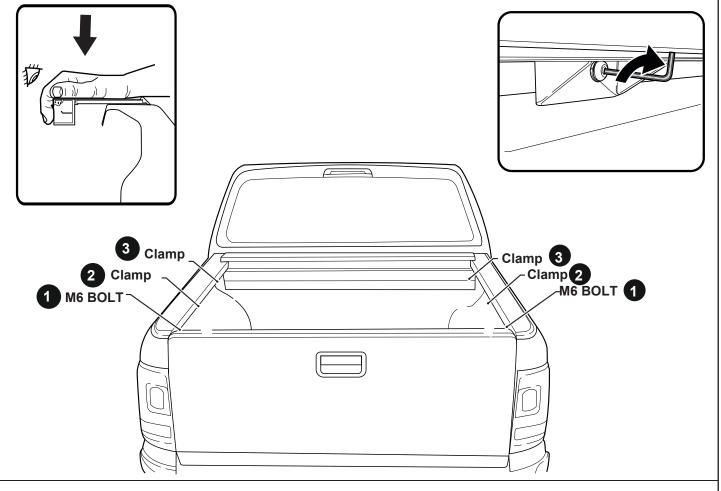


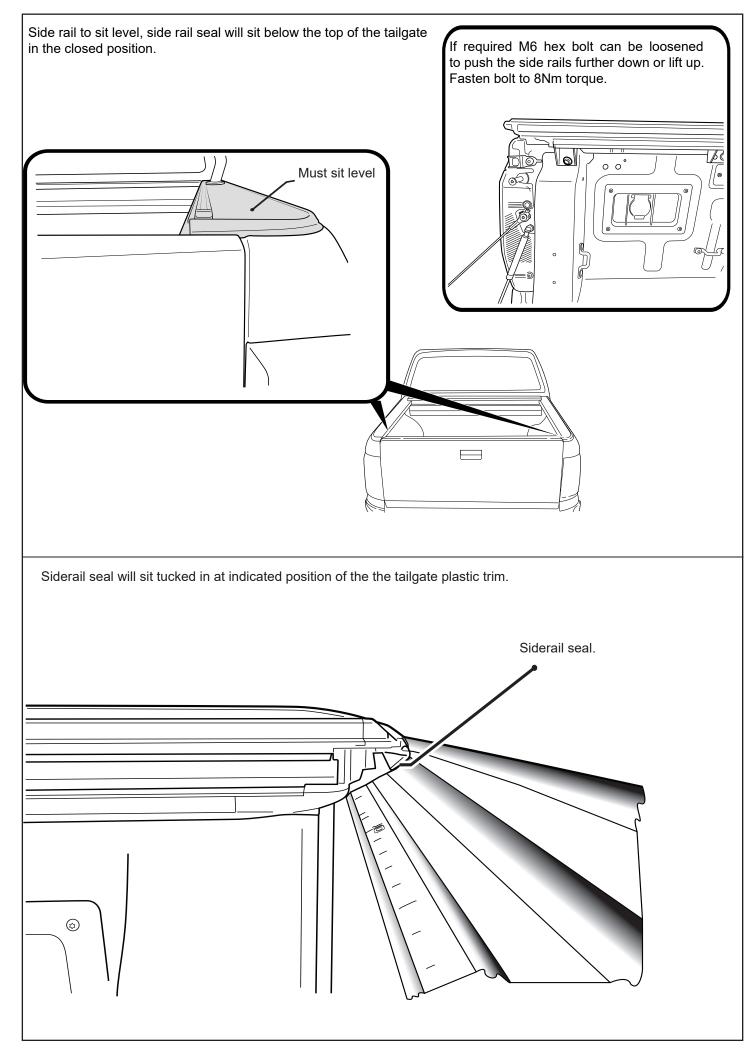


Install front drain pipes through pre-drilled holes of the canister. (RHS/LHS)

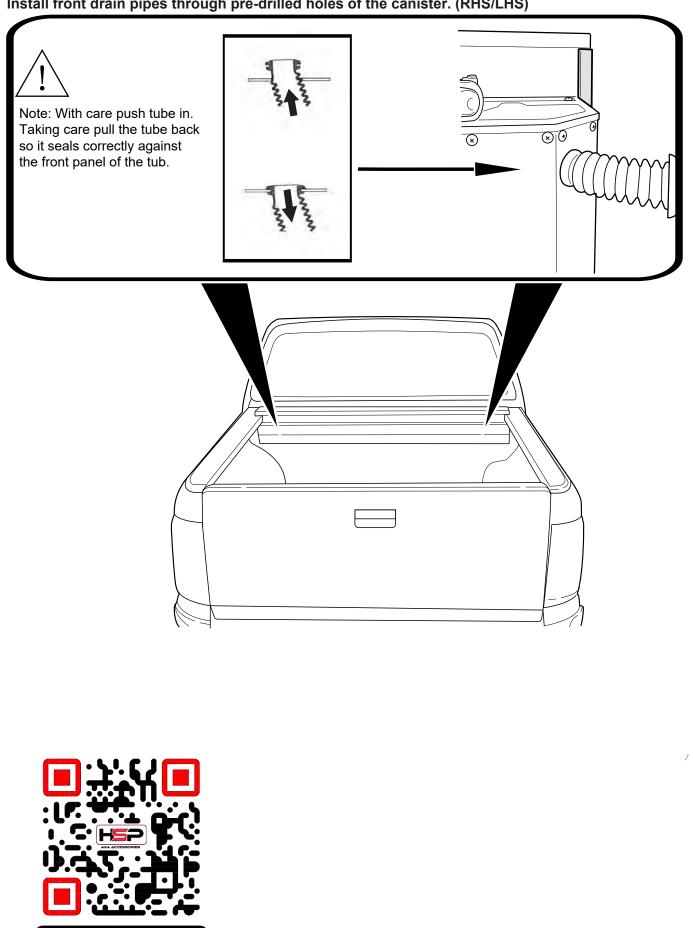

Խմ

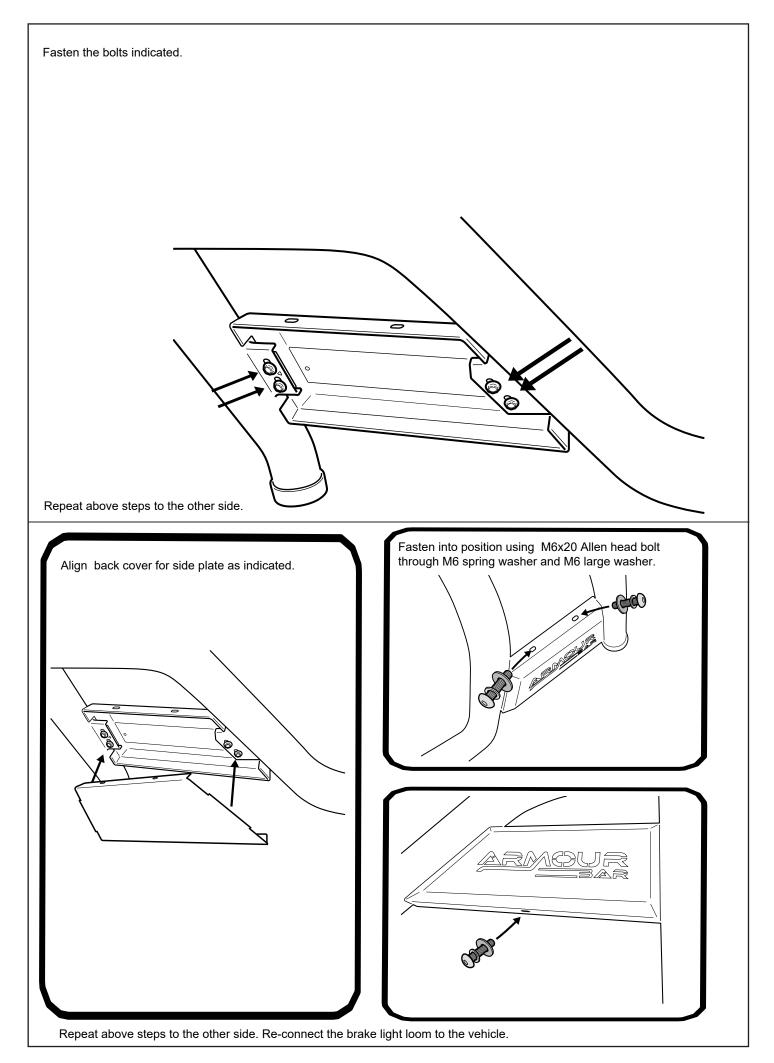

- a. Connect Battery loom S2.75 to Receiver loom.
- b. Carefully connect CI-Loom-short to Receiver loom.

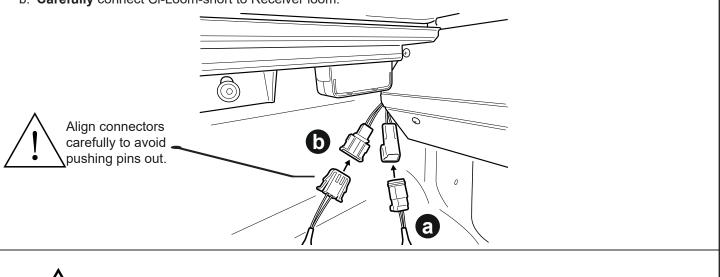



NOTE: 1. To wear in the Roll R Cover please fully open & close the cover approximately 15 times after install is complete.

2. Set your vehicle locking system to unlock all doors with one press of the factory remote unlock button. This setting can be found in your vehicle settings.

Operating instructions:


Press unlock on vehicle key fob to activate controller. When vehicle is unlocked the side rail sensor buttons will be active to control. When vehicle is locked the side rail sensor buttons will be inactive.

Using factory key fob to operate:

Pressing unlock twice on the factory key fob within 4 seconds, will activate the roll r cover to open. Pressing lock twice on the factory key fob within 4 seconds, will activate the roll r cover to close.

Vehicle proximity:

Tapping the proximity twice to open or lock the car door will act exactly the same way as the key fob being pressed twice.

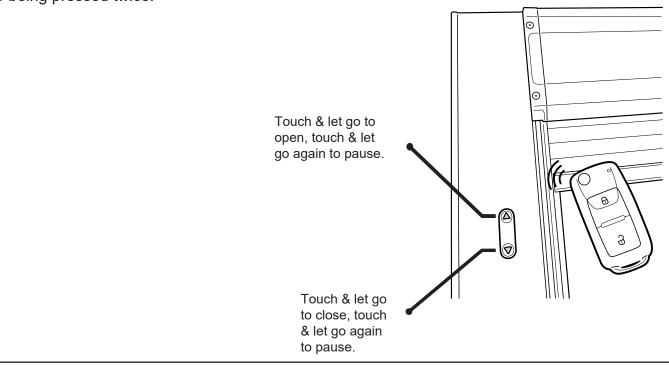




NOTE: You must service the unit before hand over, please scan the QR code to see how to service.



Trouble shooting visual tips:

side rail Parallel test

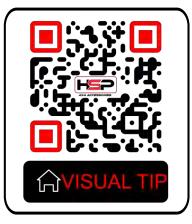

Ampage test and servicing

