



# INSTALLATION INSTRUCTIONS

**GWM UTE 2020+  
fitted with Armour bar**



**INSTALLATION TIME:** 2 Hours (Approximately)

<b>IMPORTANT</b>	<ul style="list-style-type: none"> <li>• Do not stand/sit or rest heavy objects on Roll R Cover</li> <li>• Humans or animals are not to be under the closed cover at any given time</li> <li>• Tonneau Cover is not dust or water tight</li> <li>• If contact with volatile chemicals occur, clean Cover with mild detergent and water solution</li> </ul>			
<b>Care Instructions</b>	<ul style="list-style-type: none"> <li>• Read Instructions fully before commencing installation.</li> <li>• Clean Cover with a mild detergent and water solution</li> <li>• Do not use abrasive cleaners or solvents</li> <li>• Refer to manufactures instructions applicable to power drill.</li> <li>• Protect Tub floor against scratches during installation process.</li> </ul>			
<b>Maintenance</b>	Refer to Maintenance instructions.			
<b>Tools Required</b>	<table style="width: 100%; border: none;"> <tr> <td style="vertical-align: top;"> <ul style="list-style-type: none"> <li>• Pen / Marker</li> <li>• Centre Punch</li> <li>• Drill &amp; Drill bits</li> <li>• Caulking Gun</li> <li>• Silicon - Non Acetic</li> </ul> </td> <td style="vertical-align: top;"> <ul style="list-style-type: none"> <li>• Scissors &amp; Knife</li> <li>• Spanner &amp; Socket</li> <li>• Tape measure</li> <li>• Holesaw</li> <li>• Filing tool</li> </ul> </td> <td style="vertical-align: top;"> <ul style="list-style-type: none"> <li>• Soapy water solution</li> <li>• Allen Key set</li> <li>• Screw driver</li> <li>• Rust Inhibitor</li> <li>• Trim Removal Tool</li> </ul> </td> </tr> </table>	<ul style="list-style-type: none"> <li>• Pen / Marker</li> <li>• Centre Punch</li> <li>• Drill &amp; Drill bits</li> <li>• Caulking Gun</li> <li>• Silicon - Non Acetic</li> </ul>	<ul style="list-style-type: none"> <li>• Scissors &amp; Knife</li> <li>• Spanner &amp; Socket</li> <li>• Tape measure</li> <li>• Holesaw</li> <li>• Filing tool</li> </ul>	<ul style="list-style-type: none"> <li>• Soapy water solution</li> <li>• Allen Key set</li> <li>• Screw driver</li> <li>• Rust Inhibitor</li> <li>• Trim Removal Tool</li> </ul>
<ul style="list-style-type: none"> <li>• Pen / Marker</li> <li>• Centre Punch</li> <li>• Drill &amp; Drill bits</li> <li>• Caulking Gun</li> <li>• Silicon - Non Acetic</li> </ul>	<ul style="list-style-type: none"> <li>• Scissors &amp; Knife</li> <li>• Spanner &amp; Socket</li> <li>• Tape measure</li> <li>• Holesaw</li> <li>• Filing tool</li> </ul>	<ul style="list-style-type: none"> <li>• Soapy water solution</li> <li>• Allen Key set</li> <li>• Screw driver</li> <li>• Rust Inhibitor</li> <li>• Trim Removal Tool</li> </ul>		

**PERSONAL PROTECTIVE EQUIPMENT:**



Rubber Gloves



Goggles



Hearing Protection


# BOX CONTENTS

## LEFT & RIGHT SIDE RAIL


S2.5-DC-AE-002ps-GWM4



S2.5-DC-AE-003ds-GWM4



## CANISTER ASSEMBLY



S3-DC-AF-GW4R\_LD4R-001/002

## CANISTER TOP COVER



S2.5-DC-AE-005 -GWM5

## STANDARD KIT

### COVER END CAPS



S2.5-DC-PI-004ps



S2.5-DC-PI-004ds



COUNTERSUNK  
SCREW Qty - 4




FLAT PLATE  
Qty- 2




CABLE TIE  
Qty x 16




BATTERY  
LOOM S2.75



Drainage pipe  
Qty - 2



SIDERAIL CLAMP  
Qty - 6




M8 x 35mm  
Qty - 6



M8 WASHER  
Qty - 6



M8 SPRING  
WASHER  
Qty - 6




M8 x 70 mm  
Qty - 2



M8 NUT  
Qty - 8

## SPECIFIC KIT GWM4R



50449 D-SPONGE  
Qty-2



CL-LOOM-LONG



GWM-PATCH

## SPECIFIC KIT AB1



M8 FLAT  
WASHER  
Qty - 4




M8 SPRING  
WASHER  
Qty - 4




M8 x 40 ALLEN  
Head Bolt  
Qty - 4



3M PRIMER




SIDERAIL  
HOLE GASKET  
Qty - 5

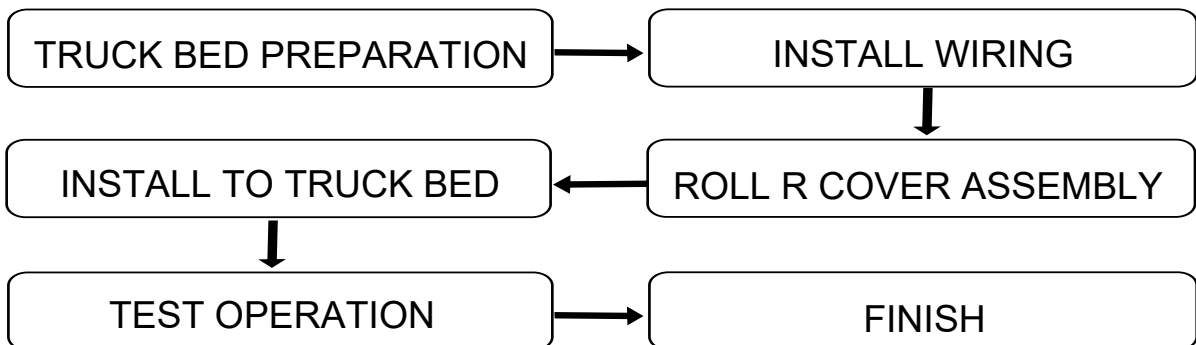


## TUB PREPARATION


If the Vehicle is fitted with a cabin guard or sports styling bar, remove from Ute Tub (truck bed).

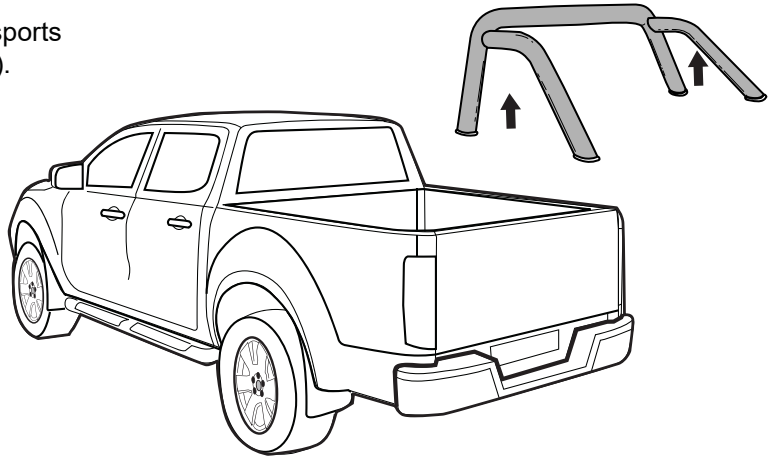




Clean as indicated.

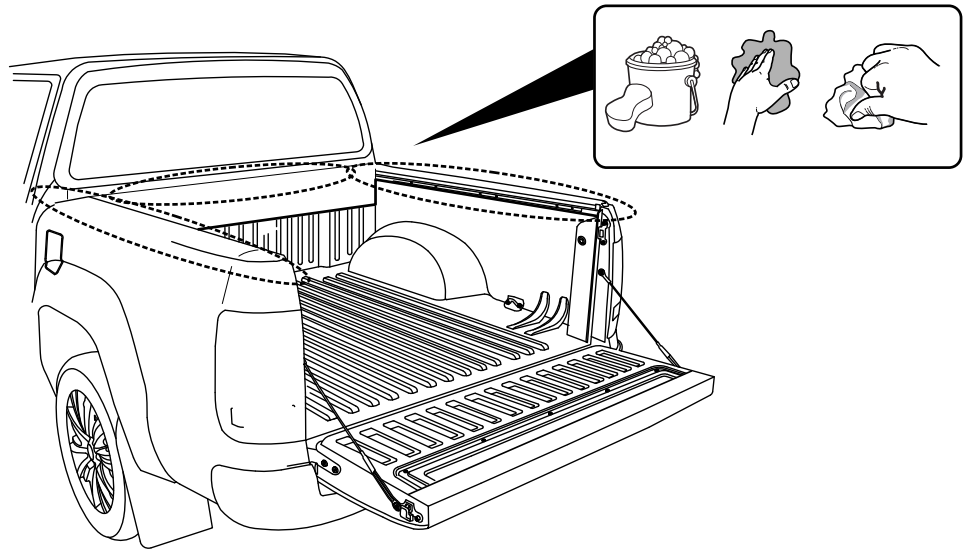



If the Vehicle is fitted with tub liner, Measure 10mm down from top of tailgate and trim tailgate liner.

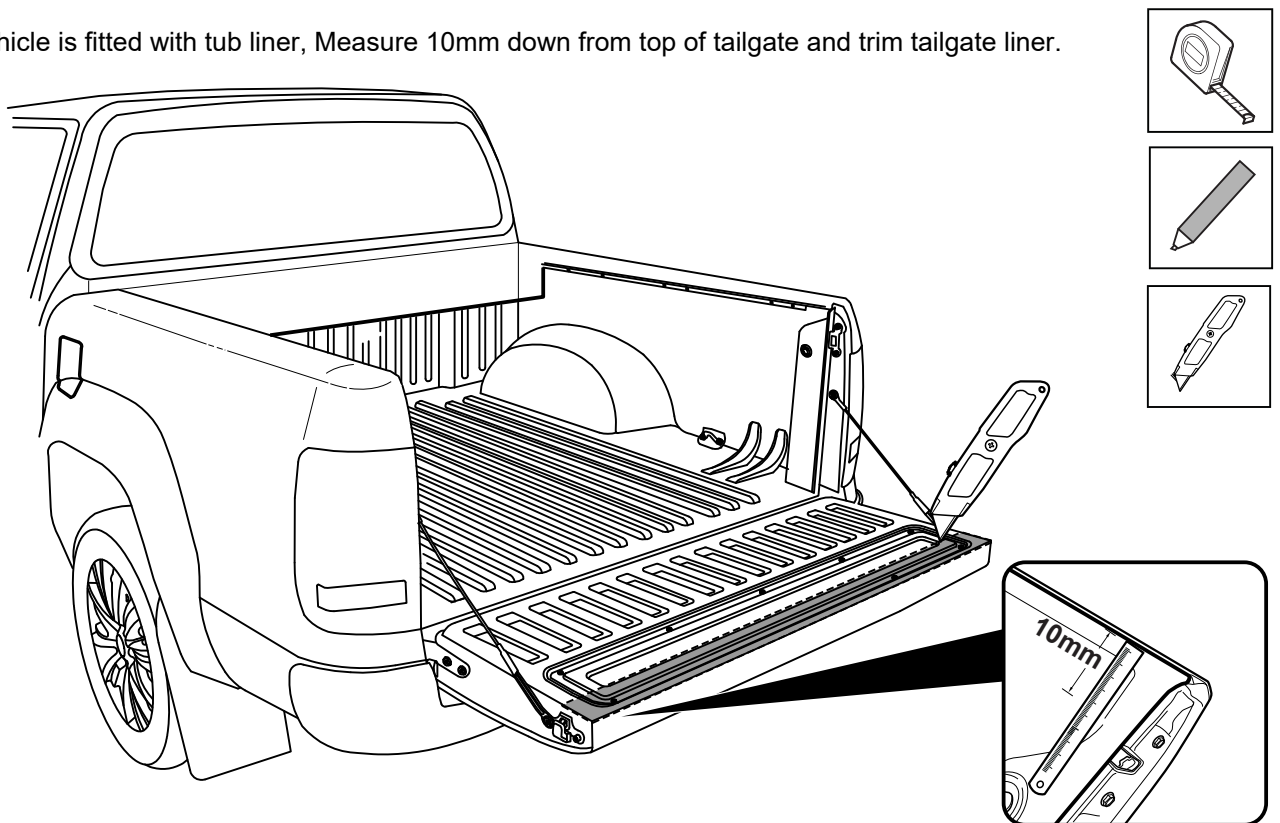

Measure down from top of assembly bar 215mm & 80 mm from inside wall of bed liner as shown. Repeat to the other side. Using a 50mm hole-saw drill the liner only as indicated.

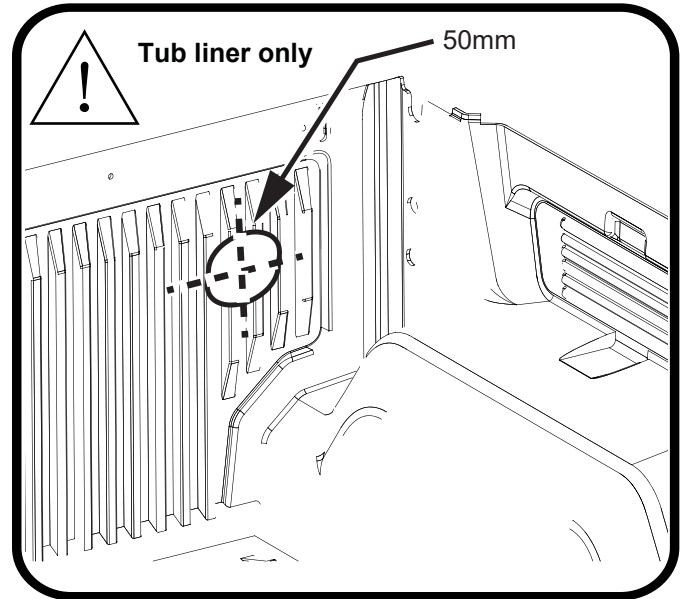
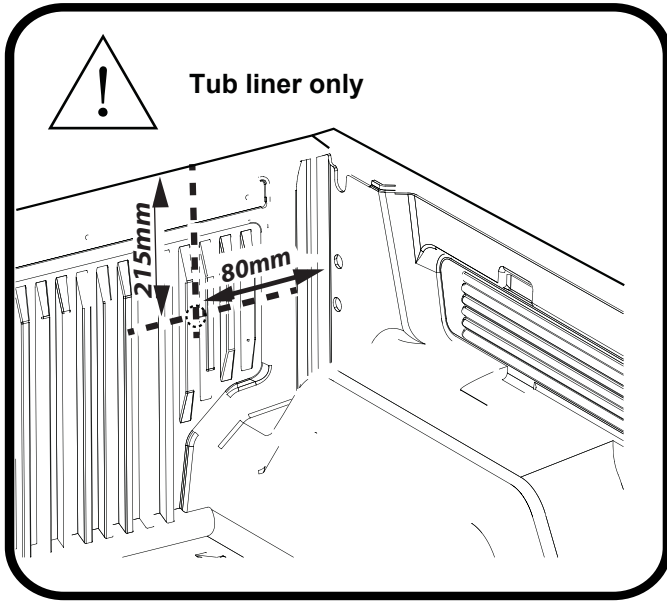
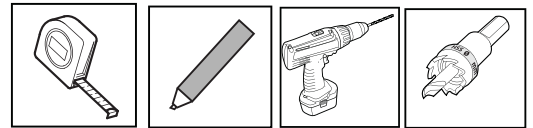


Measure down from top of headboard 215mm & 80mm from inside wall of bed as shown. ( or 80mm if measuring from the side of the top rail) Repeat to the other side. Using a 30mm hole-saw drill through tub front panel, file away any sharp edges. Apply anti rust coating. Repeat to other side.

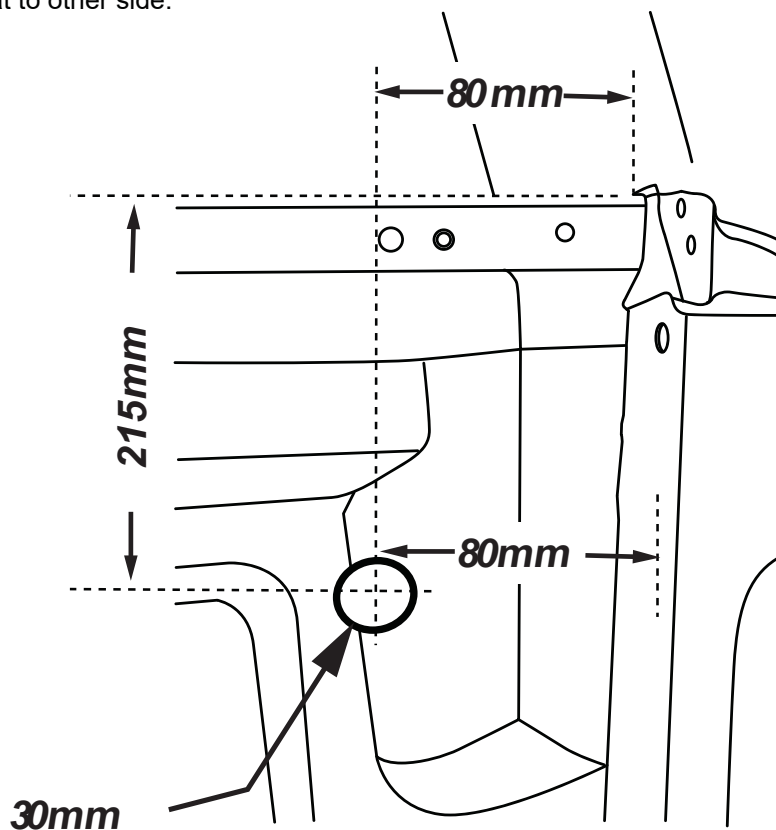
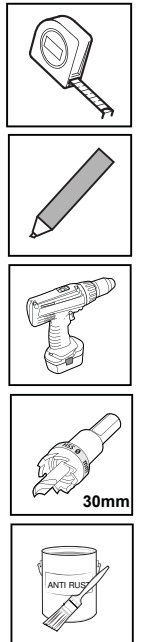


**! ATTENTION:** Do not exceed 30mm hole.

Seal any exposed gaps or holes on the front panel of the Ute bed with sealant.

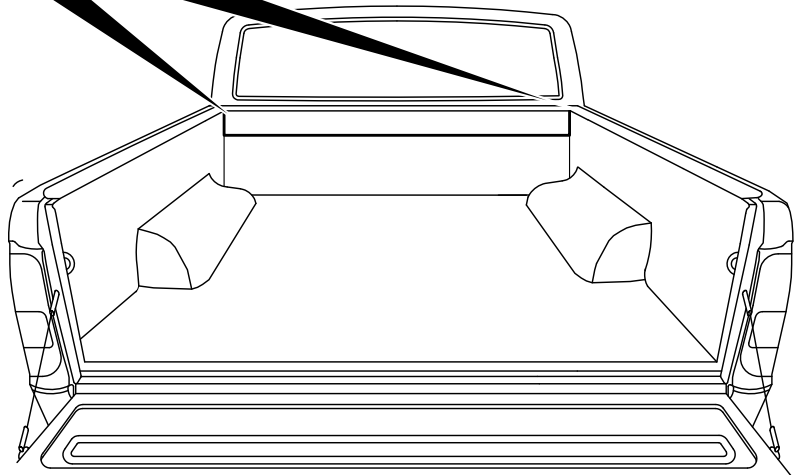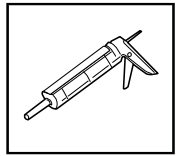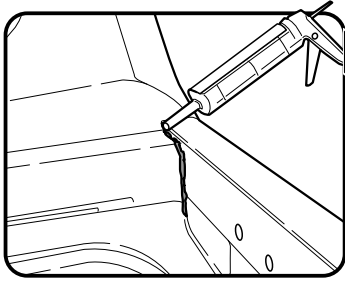



Carefully unpack the box.

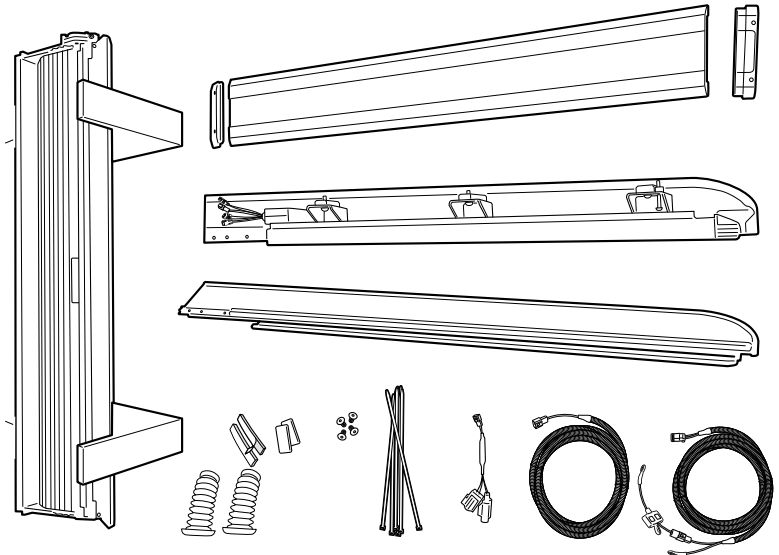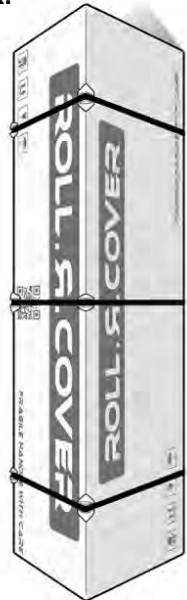


Install front drain pipes ( 55mm diameter end of hose) through pre-drilled holes on the front tub panel.



Note: With care push tube in.  
Taking care pull the tube back so it seals correctly against the front panel of the tub.

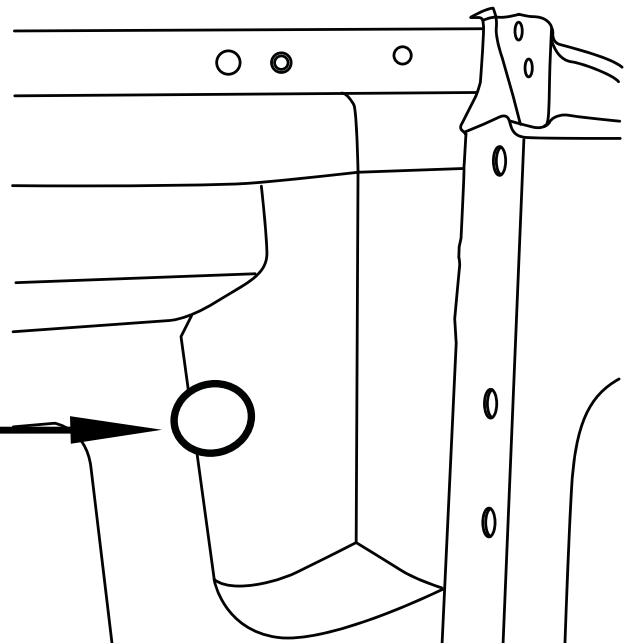
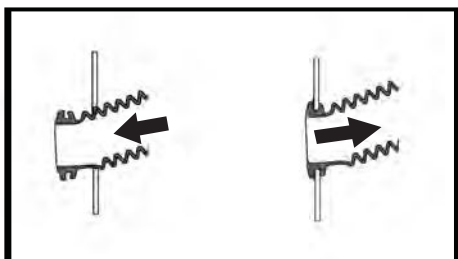


Disconnect fuse patch from battery loom S2.75.

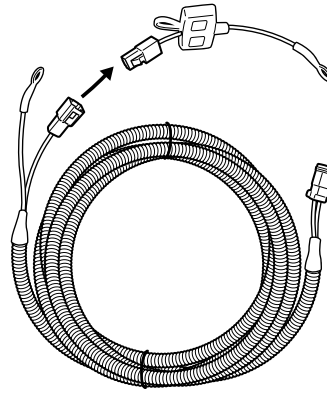


### Wiring Harness steps

**1** Feed Battery Loom S2.75 through the cavity

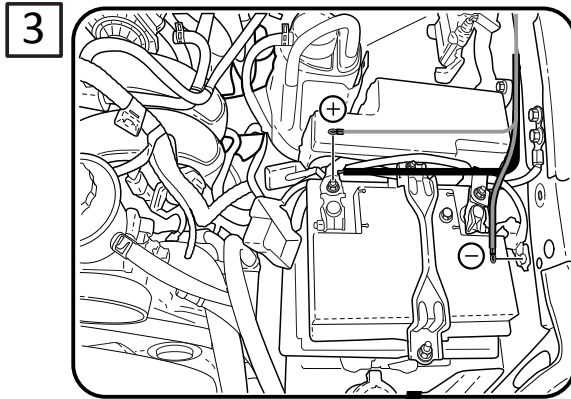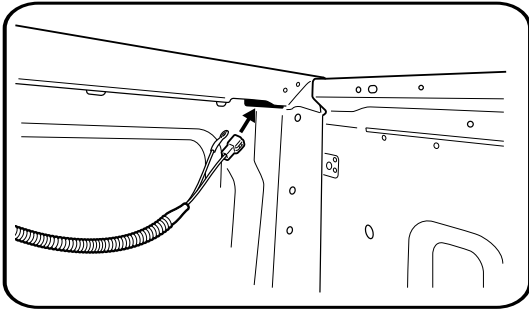


**2**

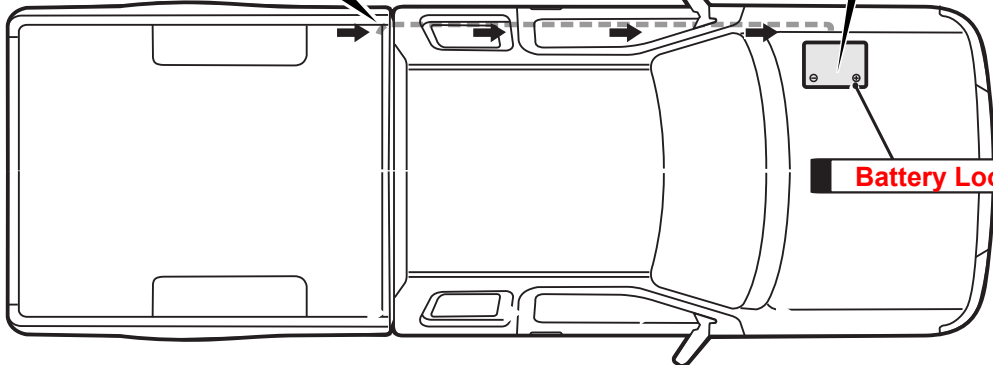


Run the wiring from the front corner cavity ( leaving 200mm in the tub) to the battery over the chassis rail. Making sure to keep away from hot obstructions and cable tie every 400mm. Reconnect fuse patch to battery loom S2.75, now attach fuse patch to positive of battery and earth to the body of the Ute.


Feed CL-Long-Loom through drivers side cavity leaving 200mm in the tub.

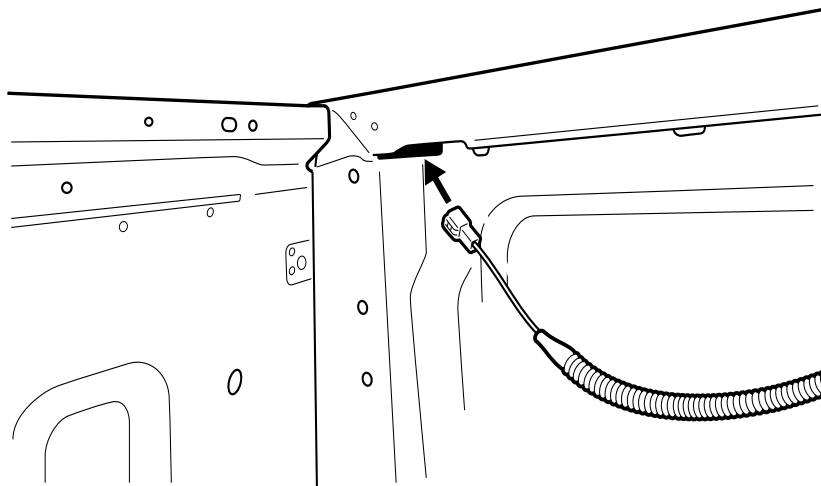


Run wiring from front tub corner cavity to drivers side kick panel. Cable tie wiring every 500mm over chassis rail. Find the large grommet on the firewall, make a small incision & run the loom through it to enter the cab and towards the kick panel. Seal accordingly.

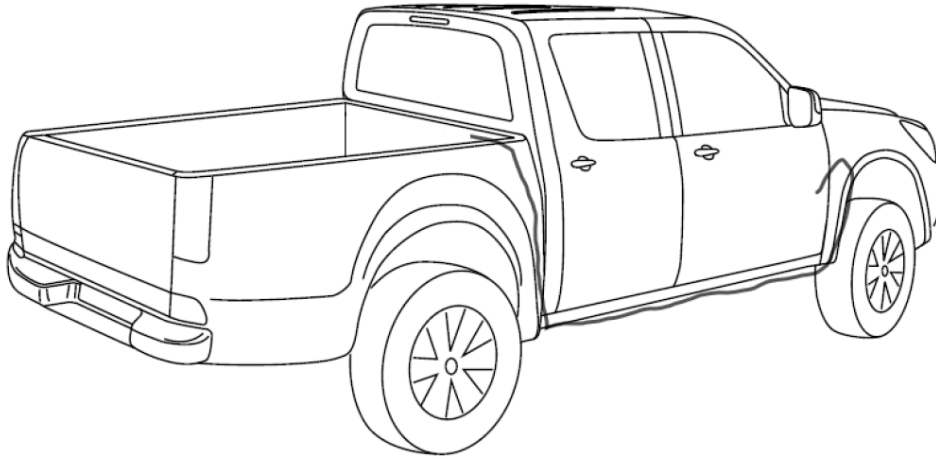


Carefully remove the drivers side scuff plate.

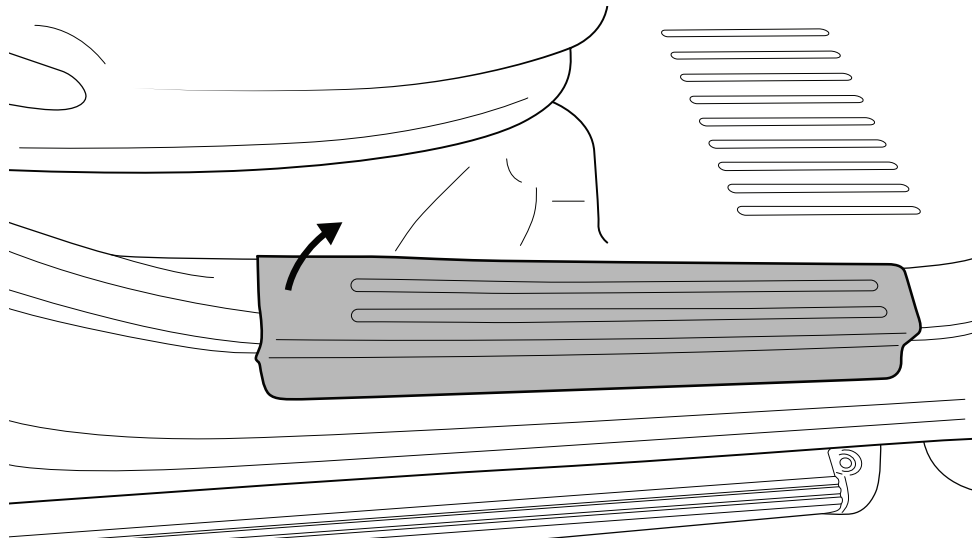


Remove kicker panel.

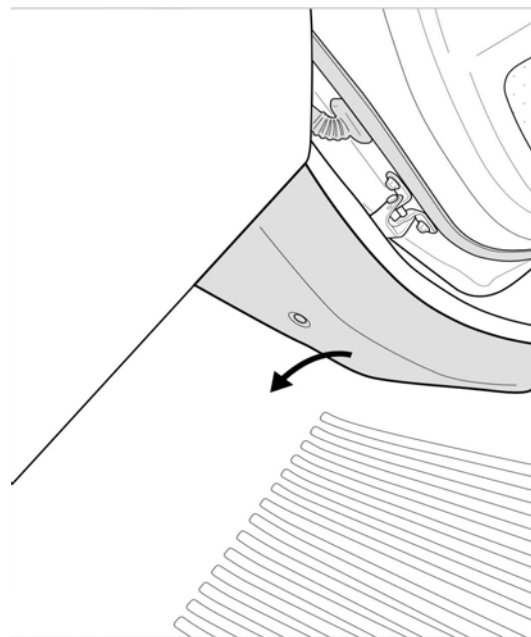

locate the central locking loom connector.  
It will be deep in the pillar cavity leading  
towards the door. Now disconnect the  
plug indicated.

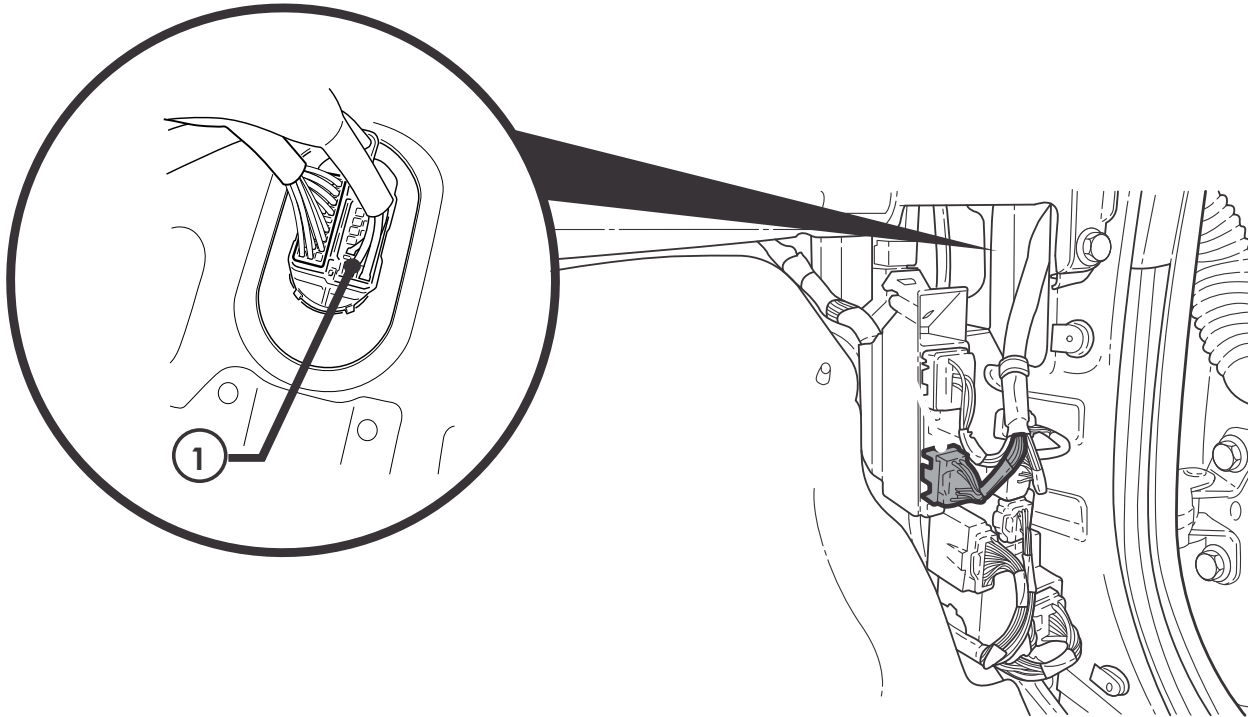

connect the GWM-patch connector provided to the vehicle connector (piggyback)

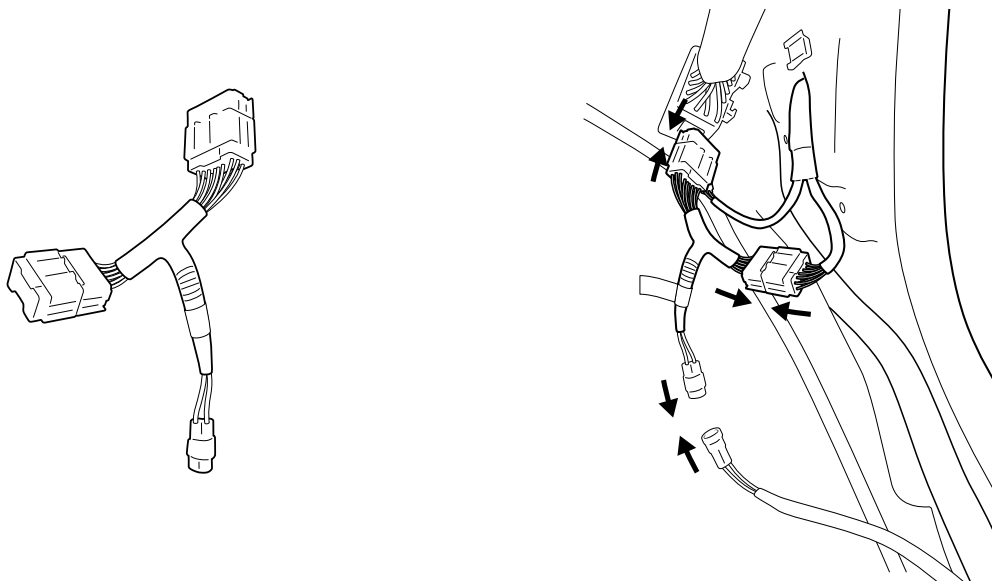


Now connect the GWM-Patch to the CI-Long-Loom


Note: Re-fit kick panel and scuff plate.



keep the cannister in the foam blocks from the packaging for assembly.



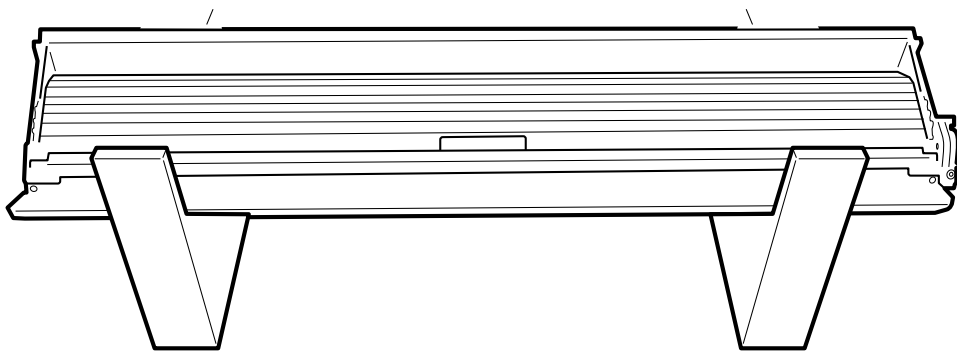


With assistance turn the canister on its back on the foam blocks.

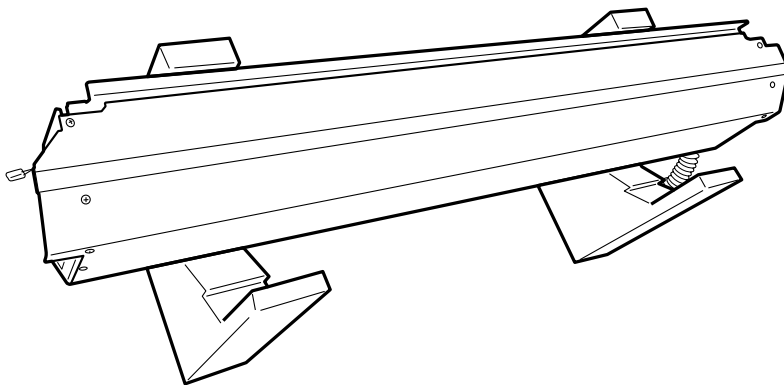


Disengage motor from the axle by unfastening the 3 Screw as indicated. Retain all parts.

Remove and retain the 3 screw from the canister as indicated.

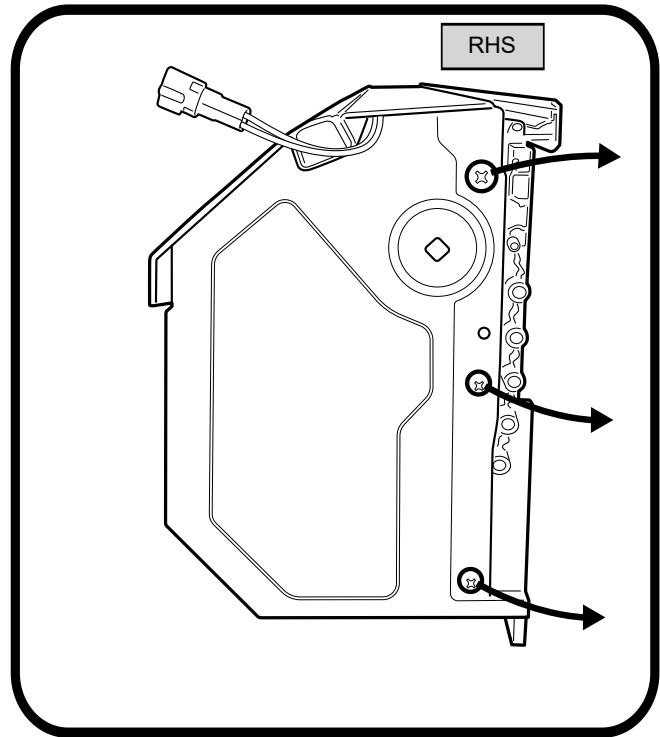
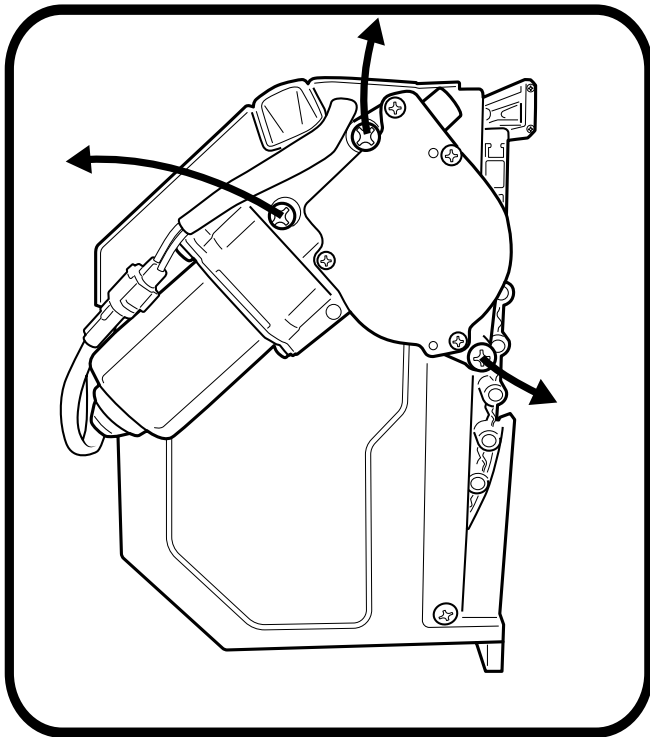
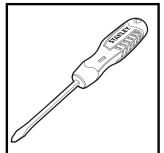


Now on the other side, remove and retain the 4 screws from the canister as indicated.



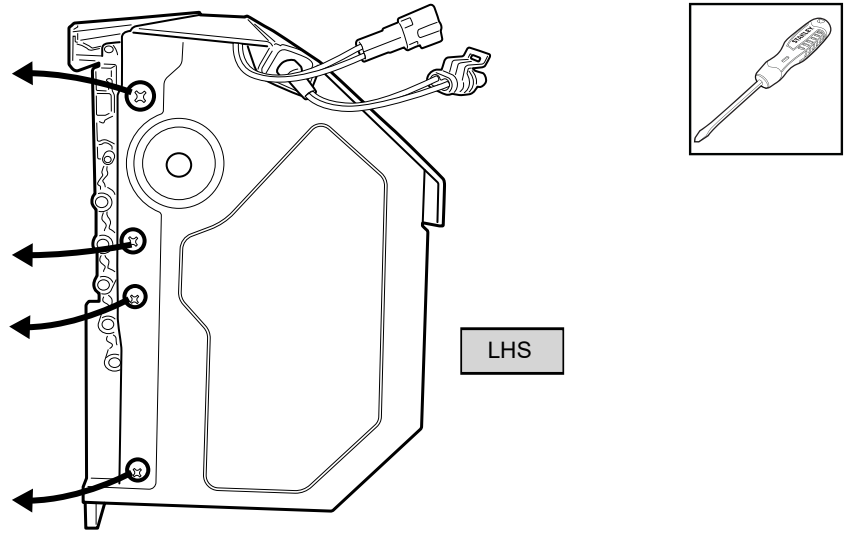


Align side rail to side of canister, guide the track to go in between the curtain end robber stop.


NOTE: LHS side rail to be assembled first.

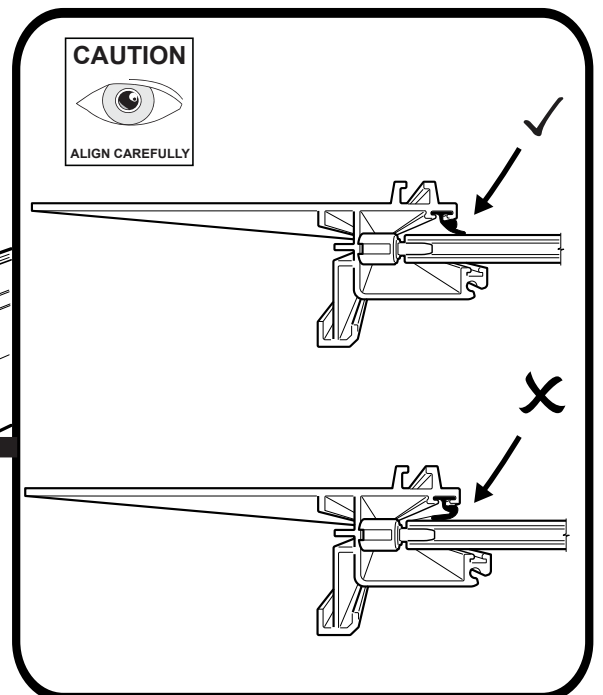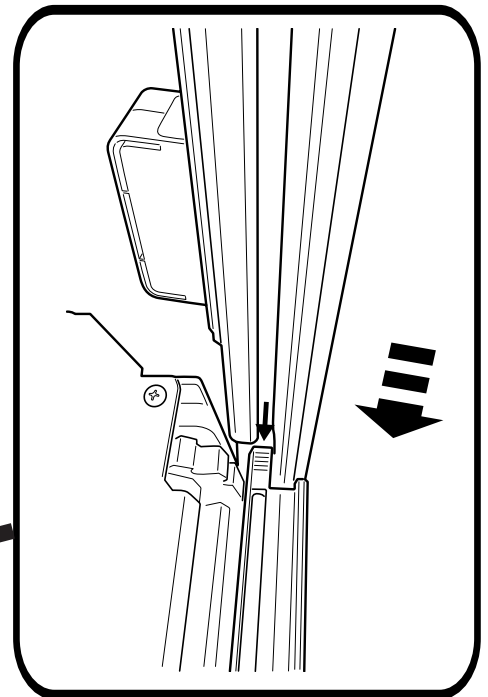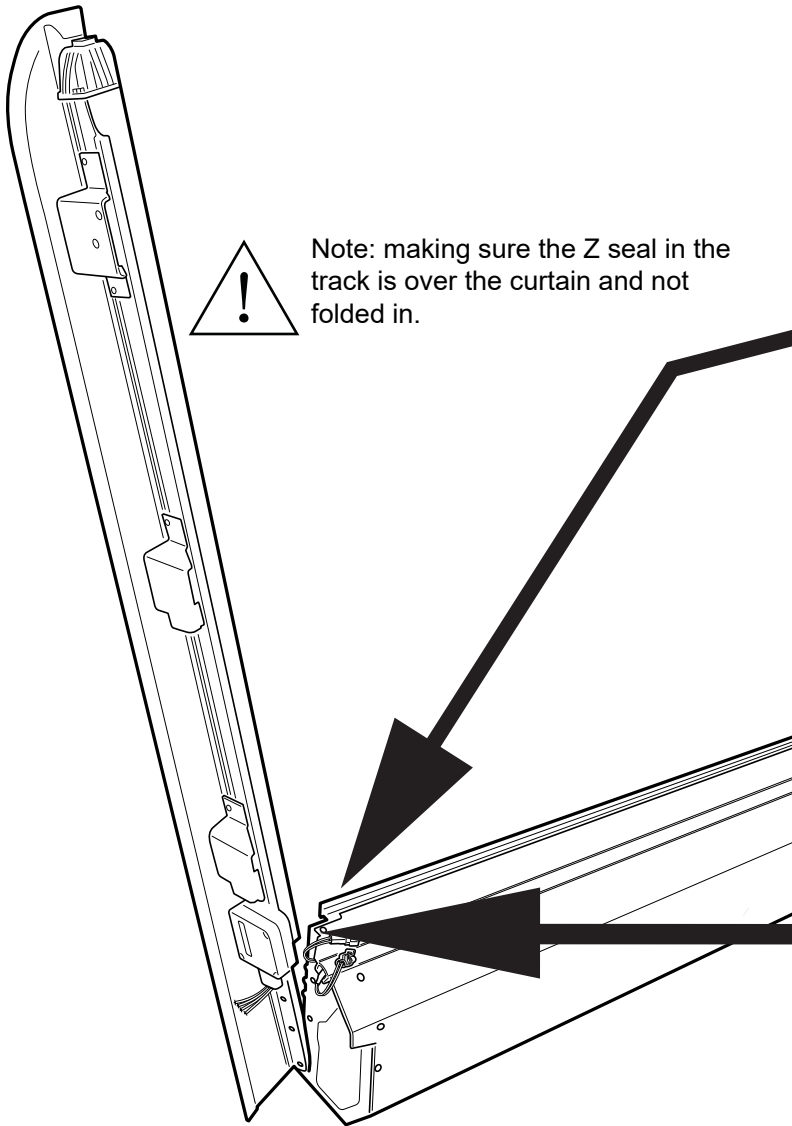


Fasten the side rail using the retained screws, spring washer and flat washer.

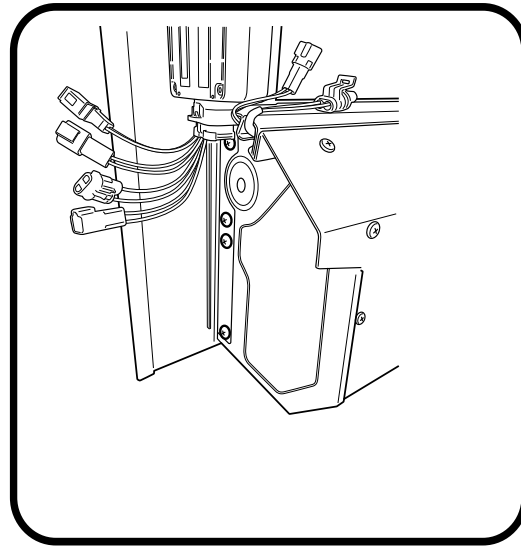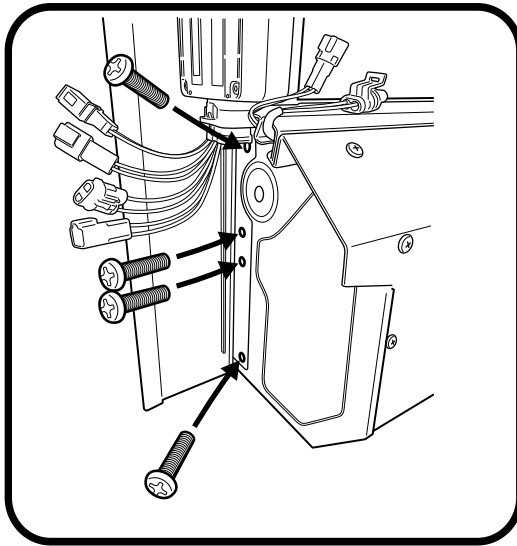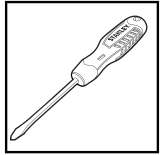


Connect motor connector to receiver

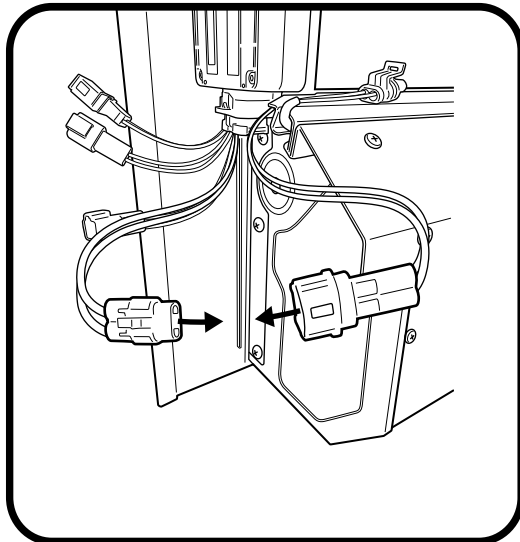




Connect LED Loom to receiver

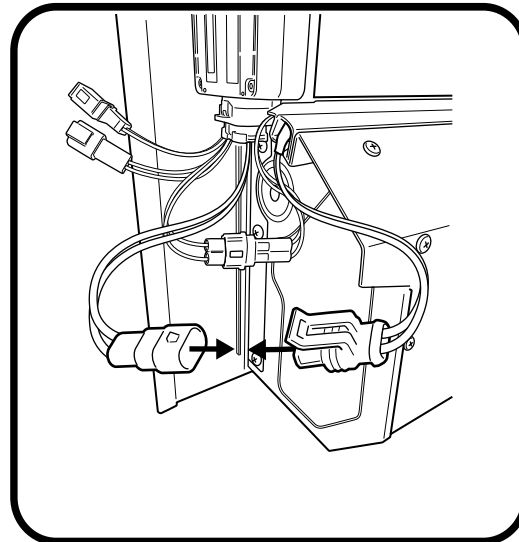




Align side rail to side of canister, guide the track to go in between the curtain end rubber stop.

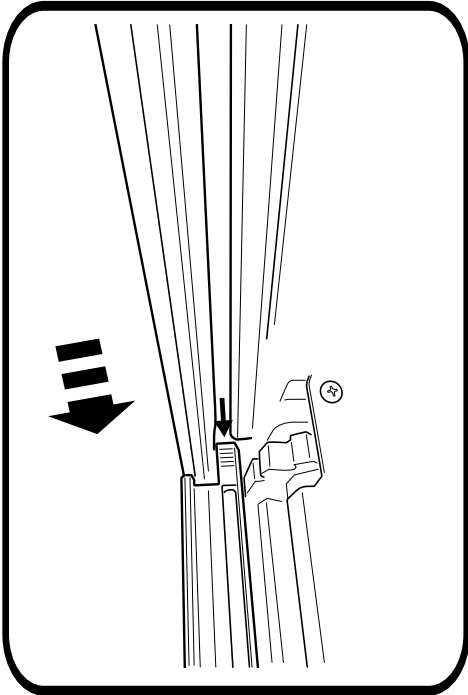

Note: making sure the Z seal in the track is over the curtain and not folded in.

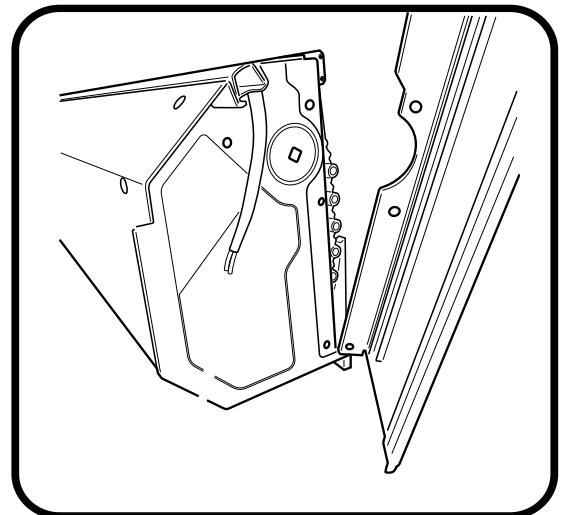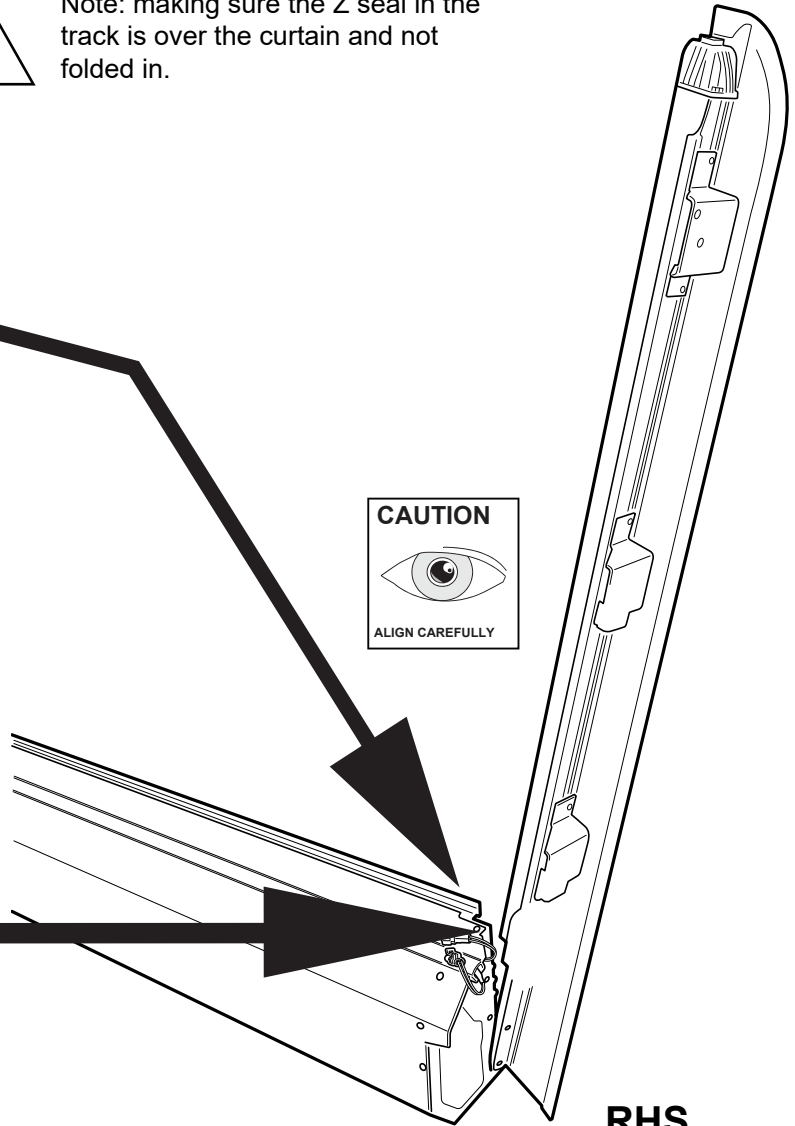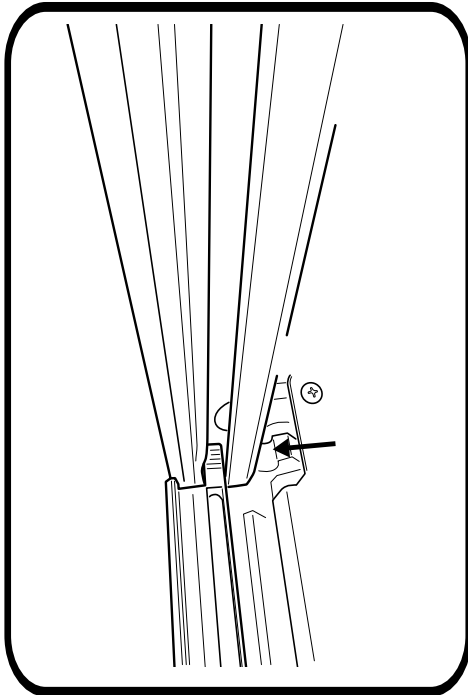


Fasten the side rail using the retained screws, spring washer and flat washer, only to the locations indicated.

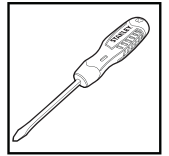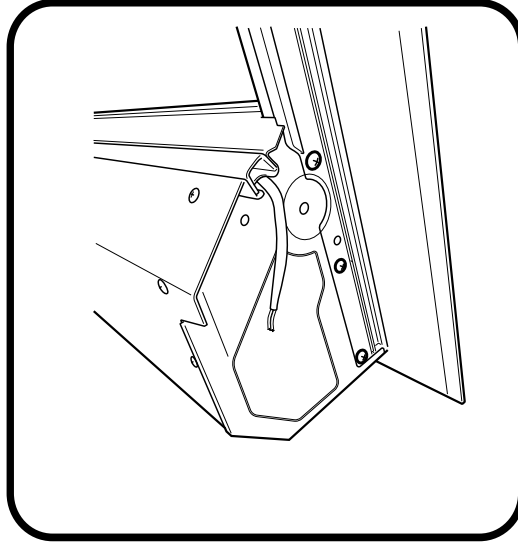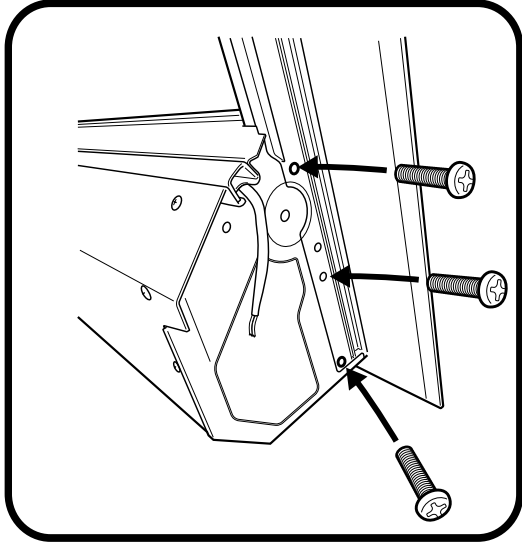



Feed M6 bolt through spring washer, motor and rubber bush.

**NOTE:** Rubber bush orientation has to be as per image. ( side with text on rubber, to face the motor).


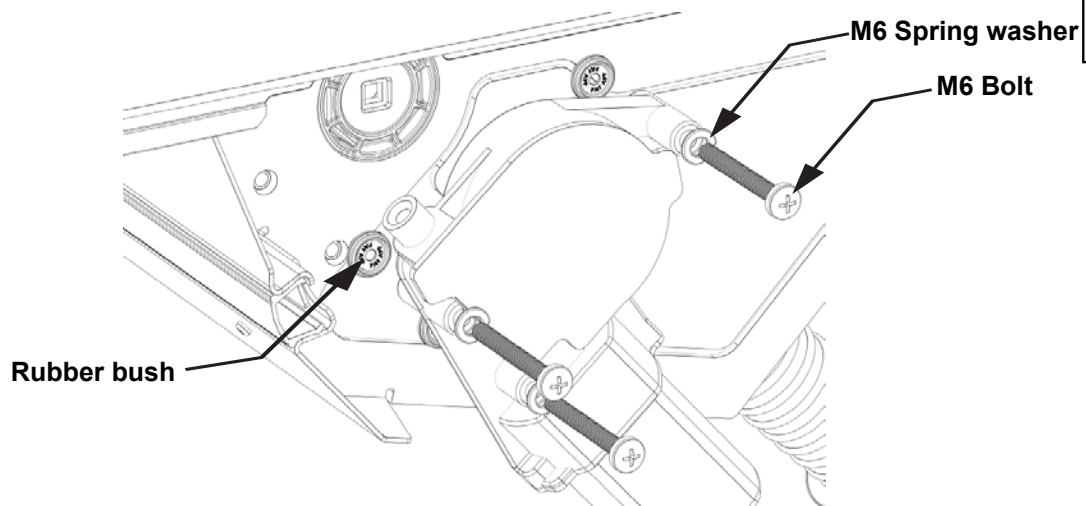


Align & insert motor shaft to axle.

**NOTE:** Pull / push curtain for axle to rotate.

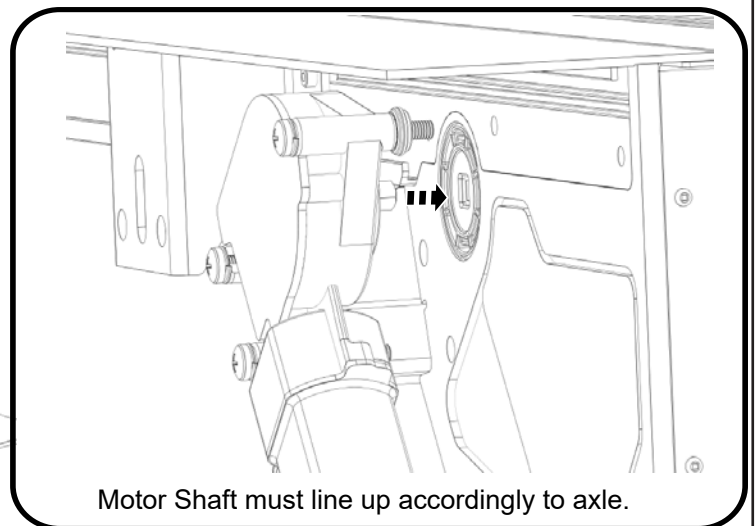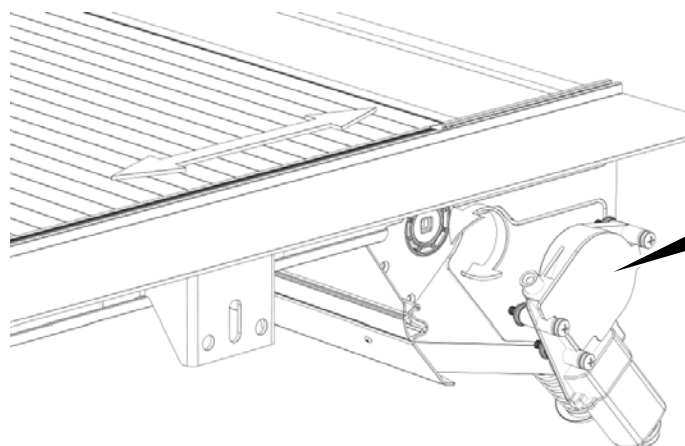





Fasten all 3 screws to 2nm torque. Over tensioning will cause operating issue's.

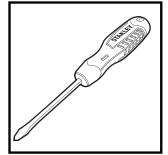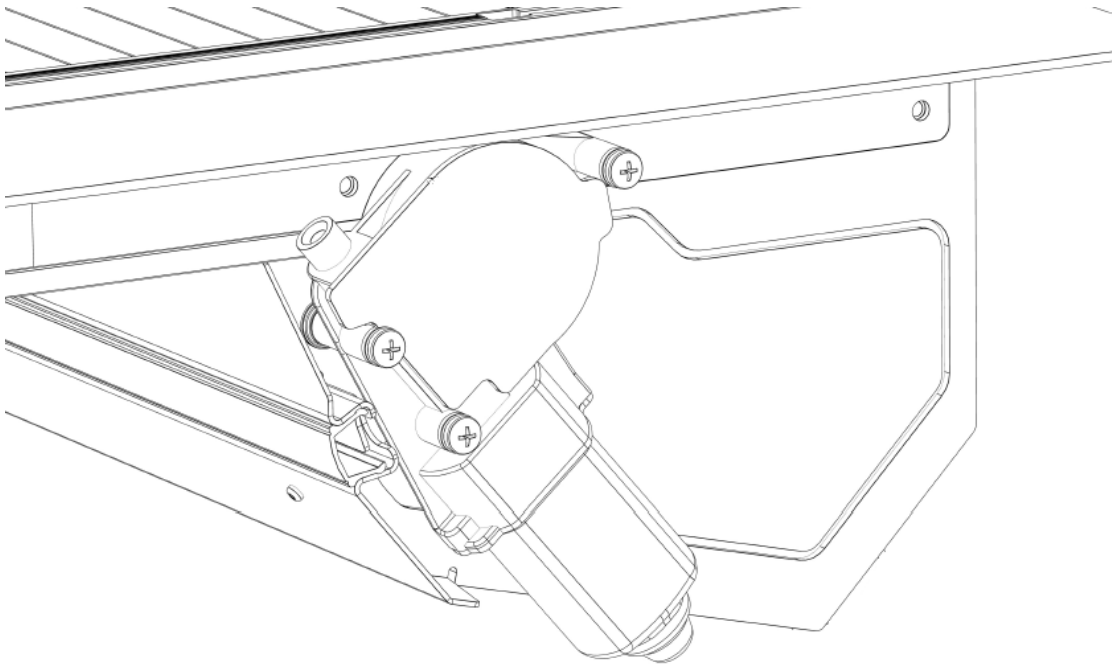


**Motor is to sit level.**

Any obstructions between motor and canister may cause operating issues.


Apply D-sponge foam tape to side rail as indicated. NOTE: Join foam firmly to the per-fitted D- sponge foam of the canister. Carefully trim excess off & discard as indicated. Repeat on the other side.

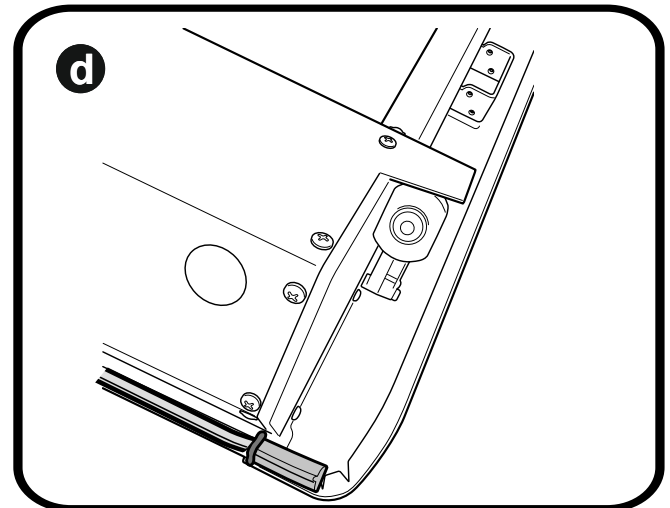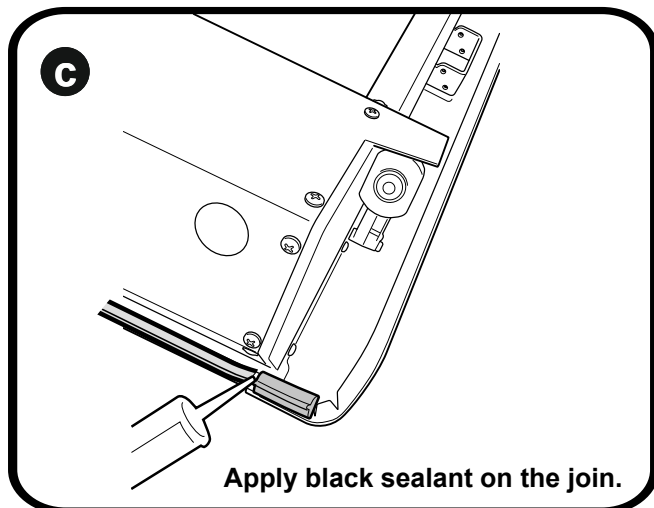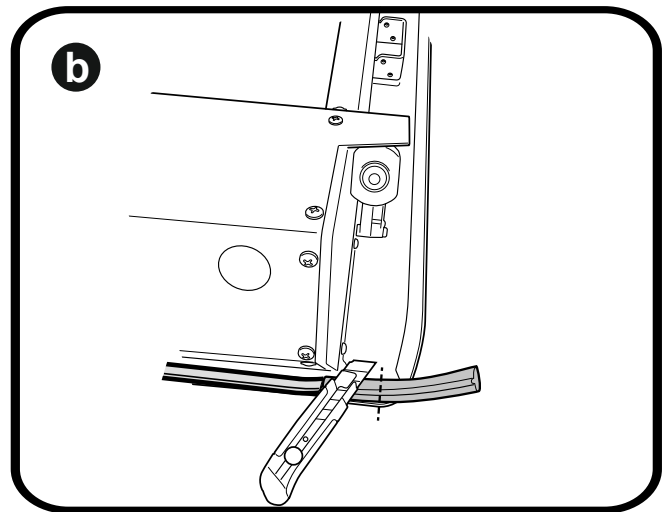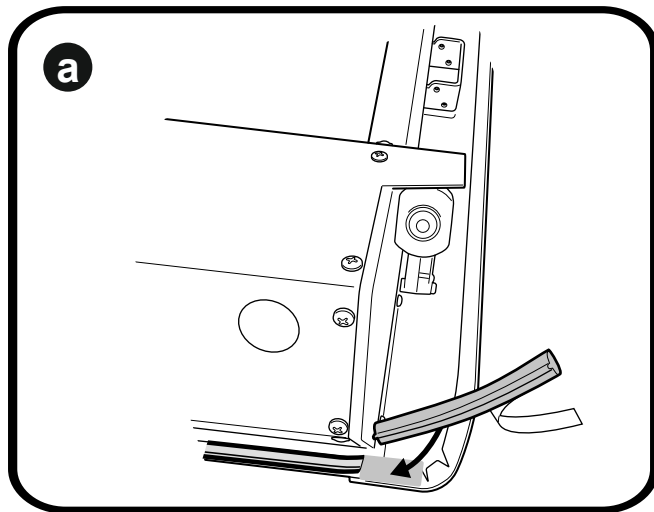


Carefully bring down the assembled unit.

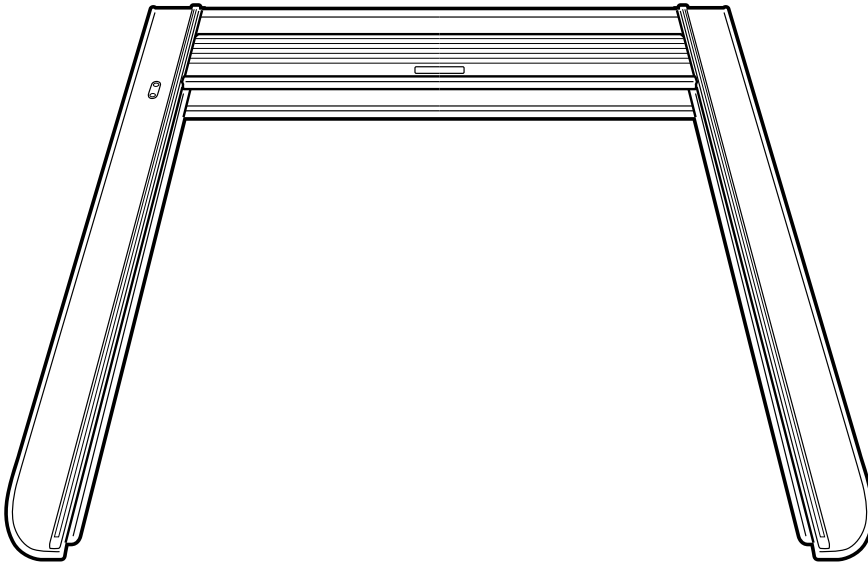


Insert side end caps to the top cover.

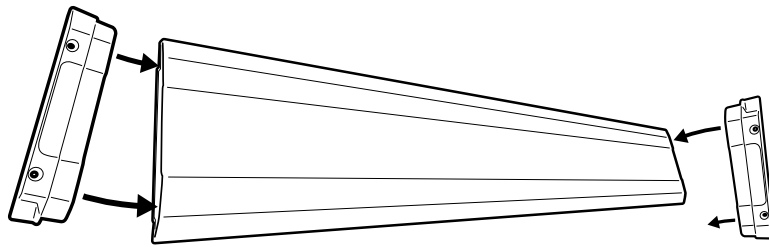


Place & Align top cover over the canister and side rails.

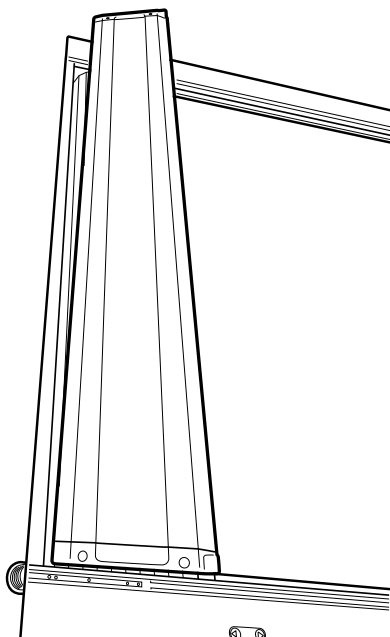



Using countersunk screws provided, line up end cap holes to the threads on the side rail. Fasten to 3nm torque. Repeat to the other side.

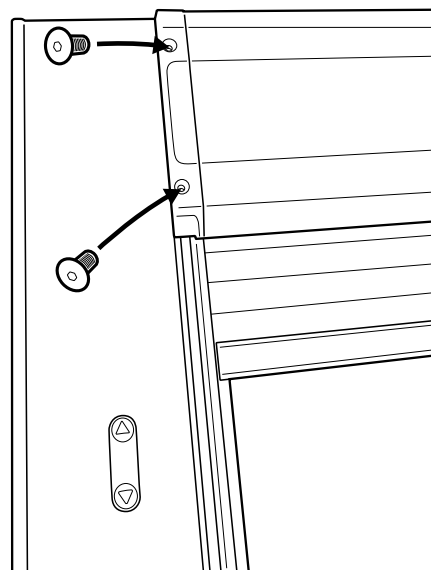

Apply 3M primer provided around all side rail holes.

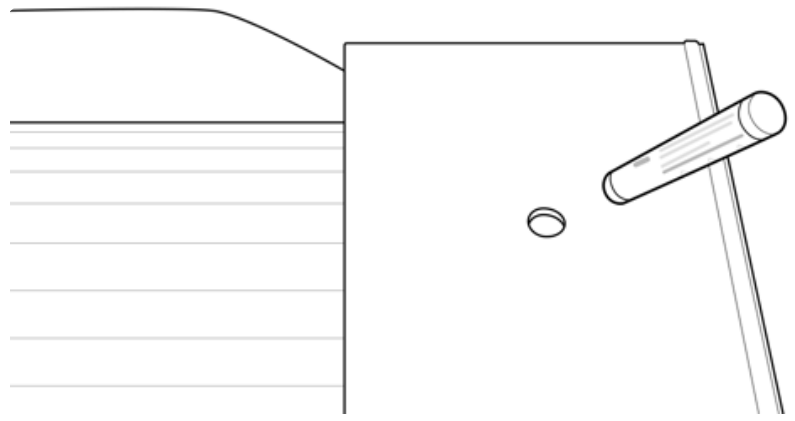


Peel away backing from foam sealant and stick to side rail. Repeat on all 5 holes.

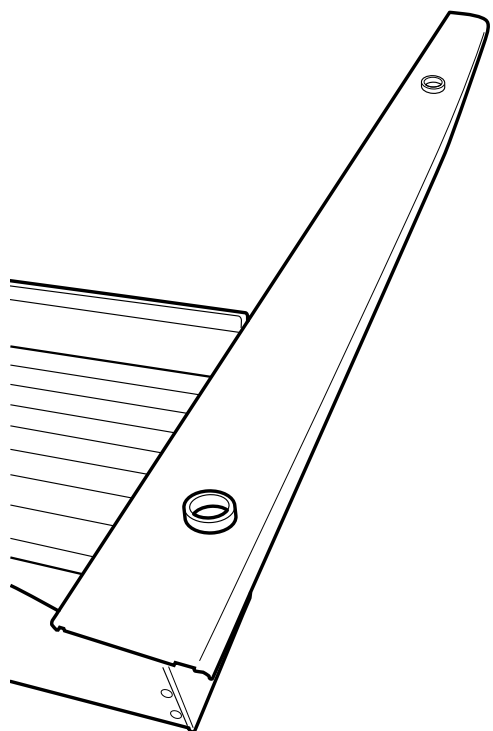
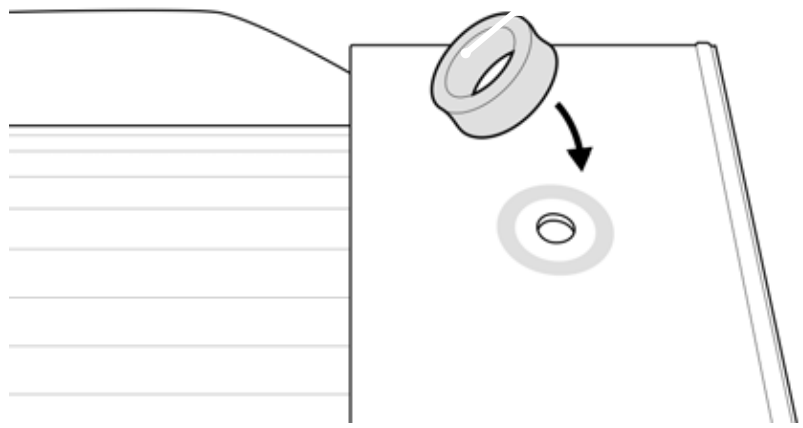




Remove and retain M6x20 Allen head bolt, M6 spring washer and M6 large washer.

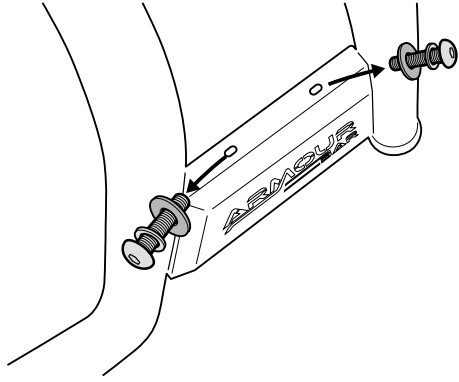


Remove back cover for side plate indicated.

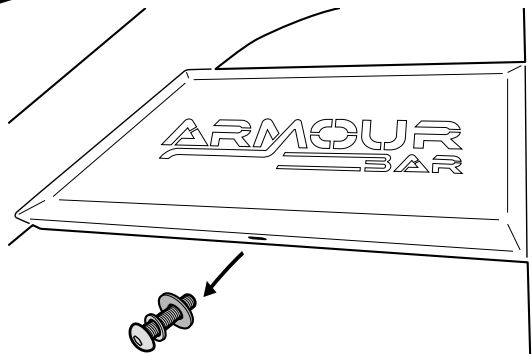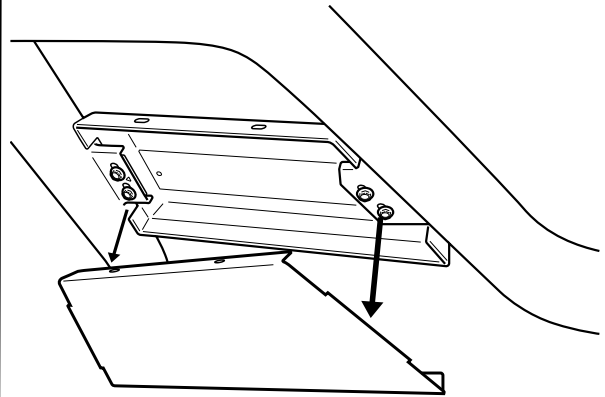


Repeat above step to the other side.

Loosen the bolts indicated.

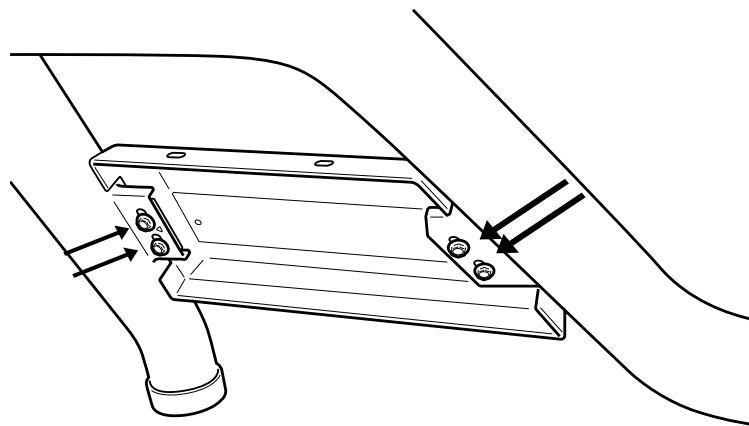


Repeat above step to the other side.


**Feed the brake light loom through the allocated side rail hole.  
Place Sportsbar on Roll R cover.**

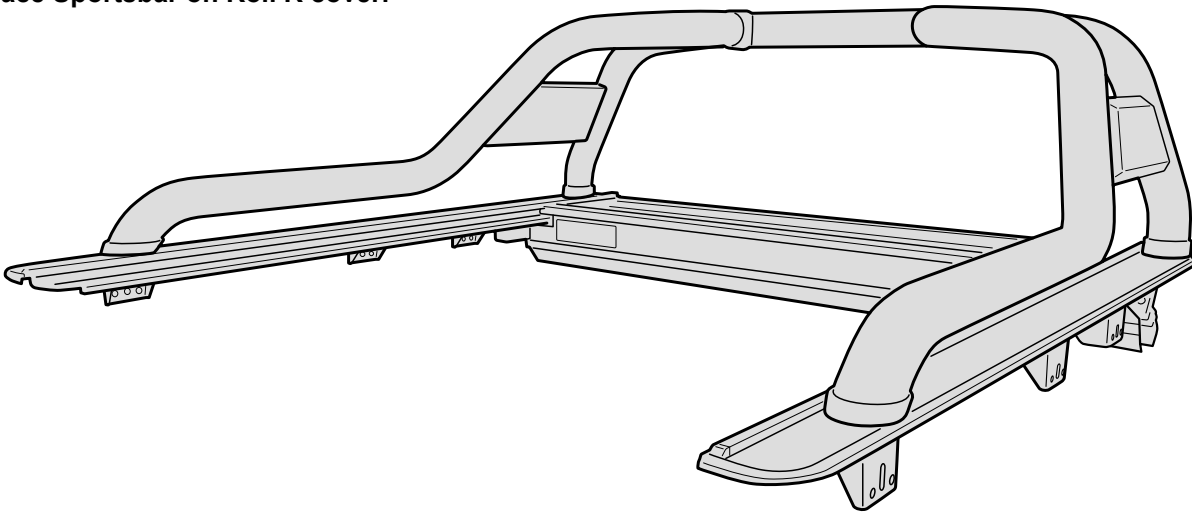



**Loosely fasten sports bars to roll r cover side rails using  
M8 x 40mm Allen head, followed by M8 spring washer and  
m8 flat washer. Repeat to all other legs.**

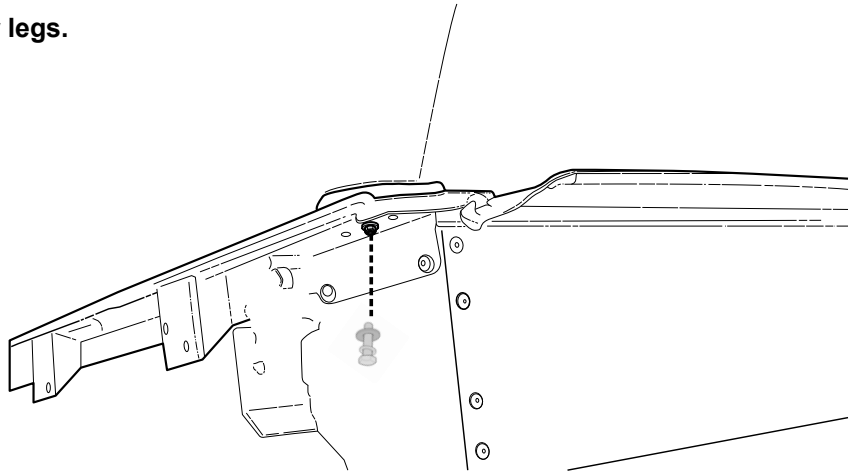

**Center the sports bars on the roll top and fasten tight  
the front legs of the sports bars only.**

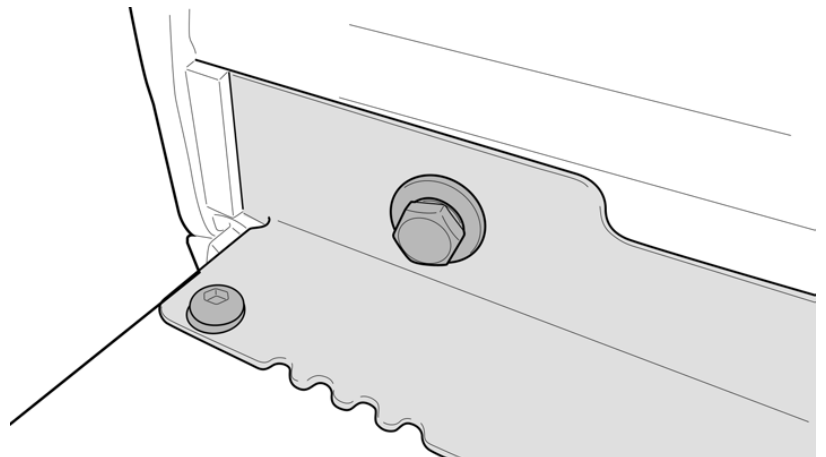


Place the Roll-R-Cover unit on to Ute bed.

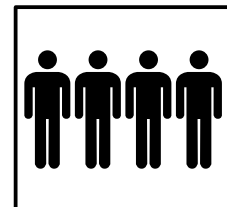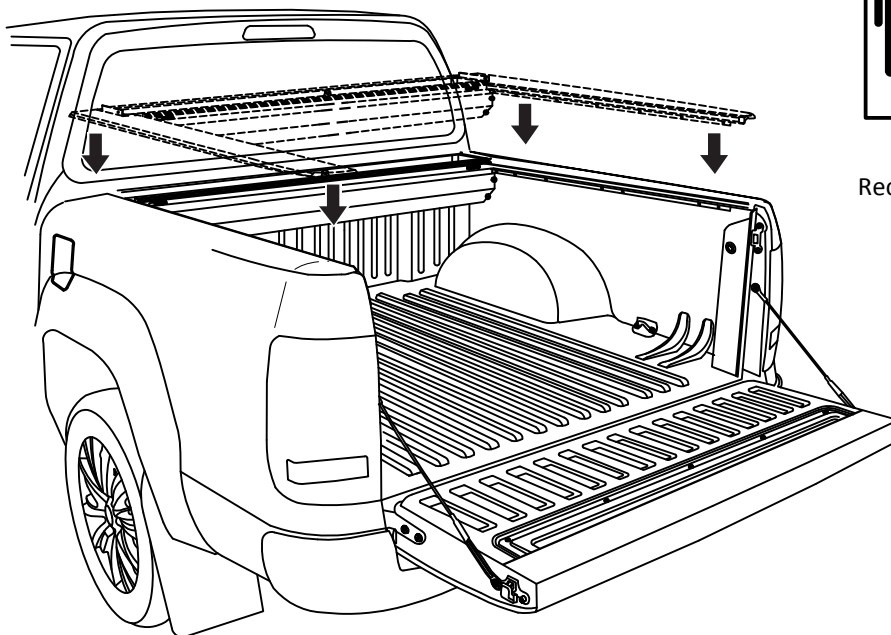


4 People  
Recommended for lift

With care, pull out any side rubber that has folded under the side rail.

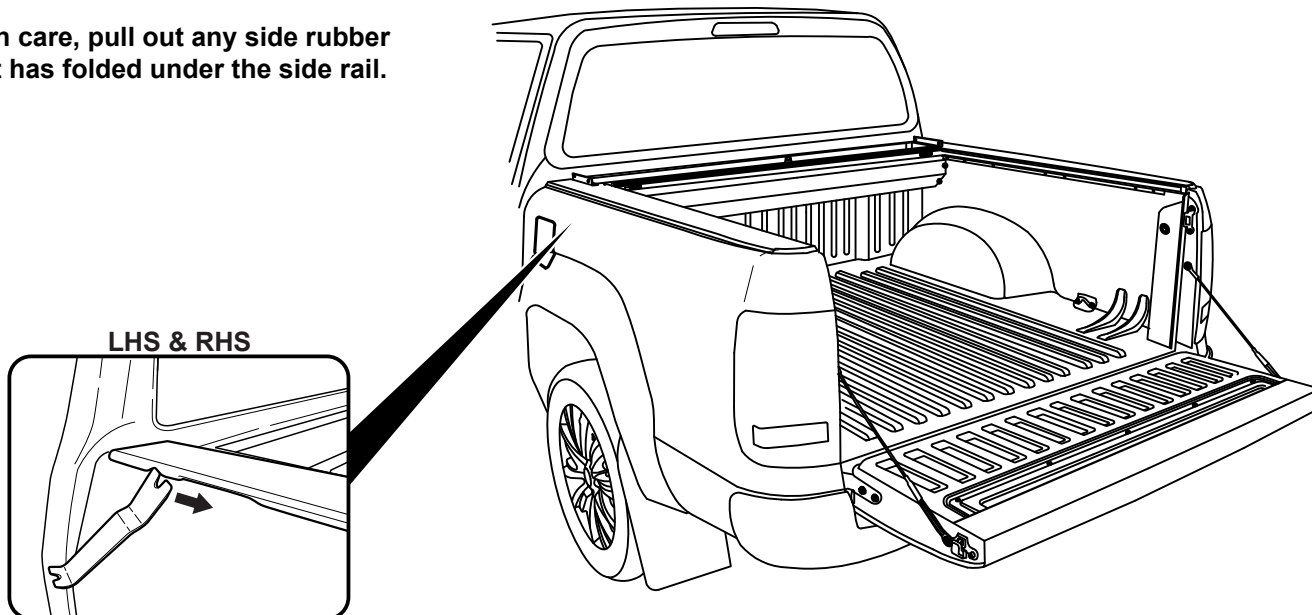

With the tailgate up (Closed position),  
Pull left & right hand side rails  
towards the tailgate, stopping short by  
5mm between tailgate and side-rail  
end-cap.

5mm

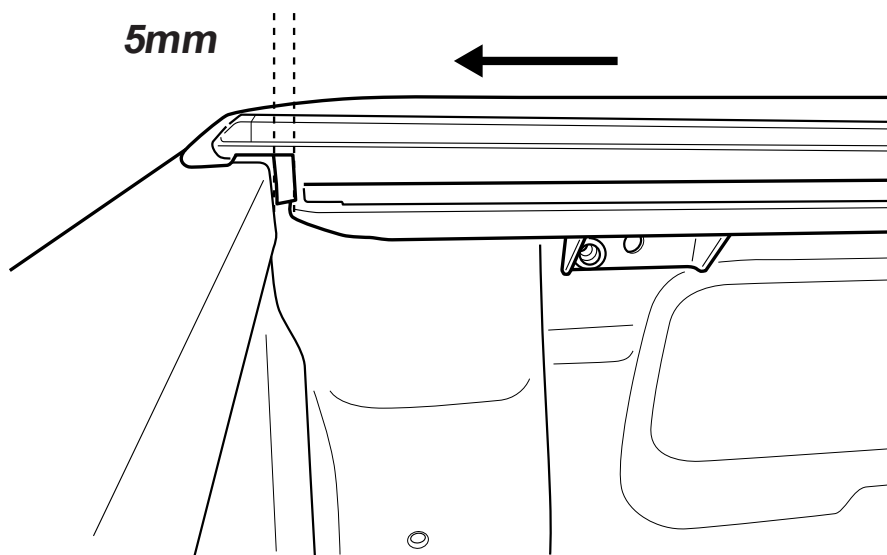


Foam compressed to  
5mm when tailgate is  
closed.

Gap between tailgate and side-rail end cap to be 5mm.

Foam seal



Side rail end cap

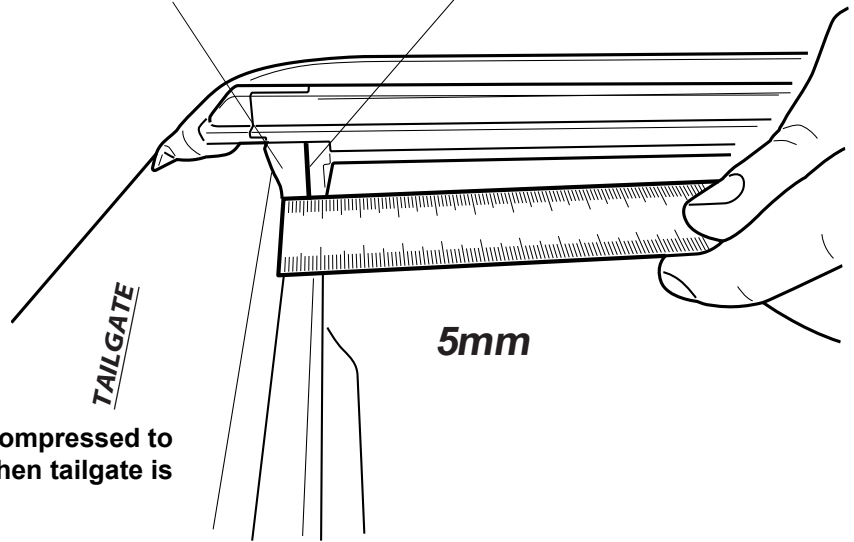


Foam compressed to 5mm when tailgate is closed.

Position clamp behind the inner top lip of the bed rail and the center elongated hole of the side rail mounting brackets. Repeat to all 6 positions.




Ensure the M8 nut is in the indicated slot of the clamp

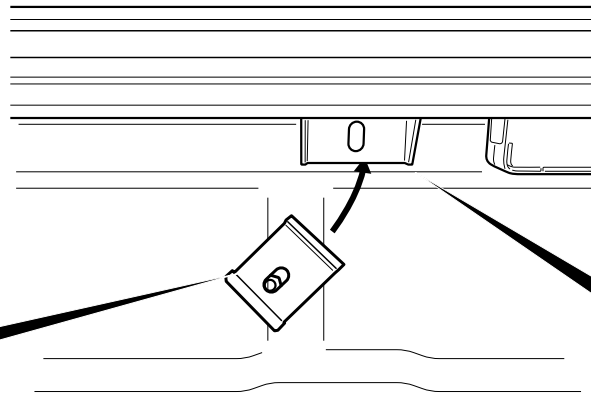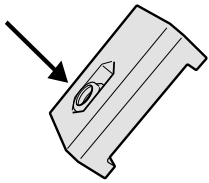


Fasten clamp loosely into position using M8 washer, M8 spring washer and M8 x 35mm bolt.

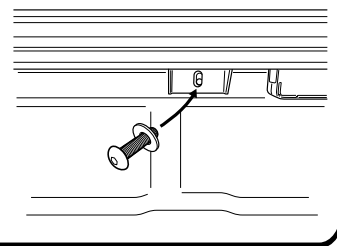

Apply pressure then tighten clamps in the order indicated.

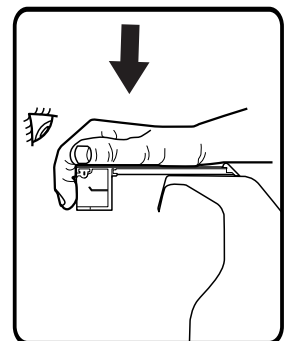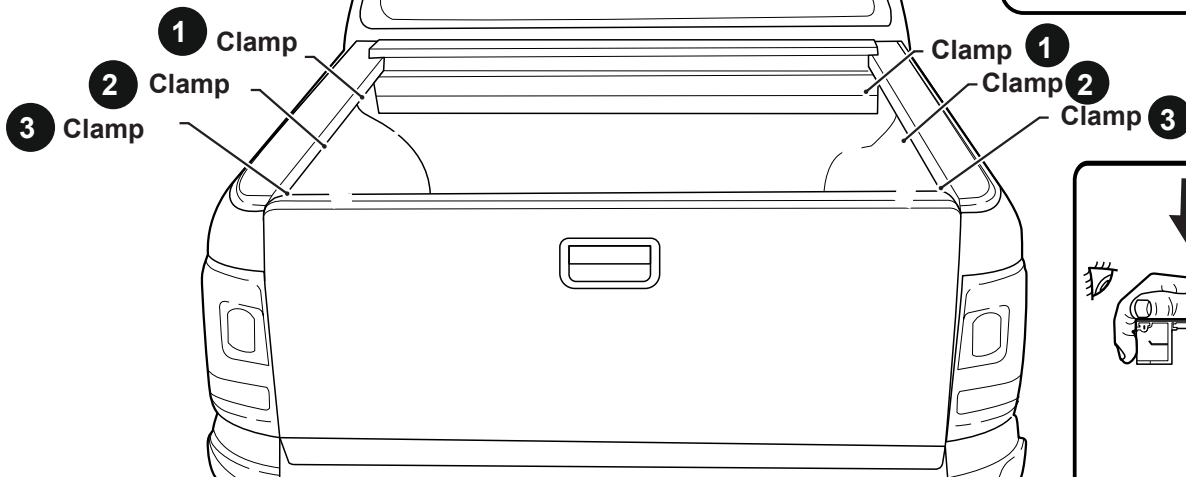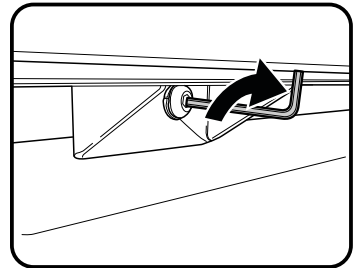

Apply flat plate behind adjusting bolt hole to the ute bed panel or to the liner if the Ute is equipped with a tub liner.

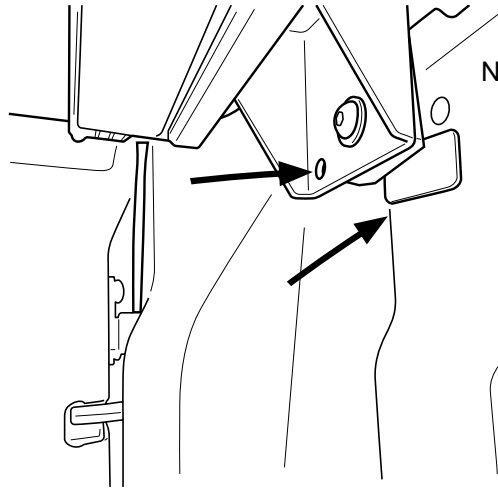


Note: Rear Clamp bracket.






Note: Clean surface before applying flat plate.

Feed M8 nut into M8x70mm bolt and through clamp bracket's pre-installed nutsurt as indicated.

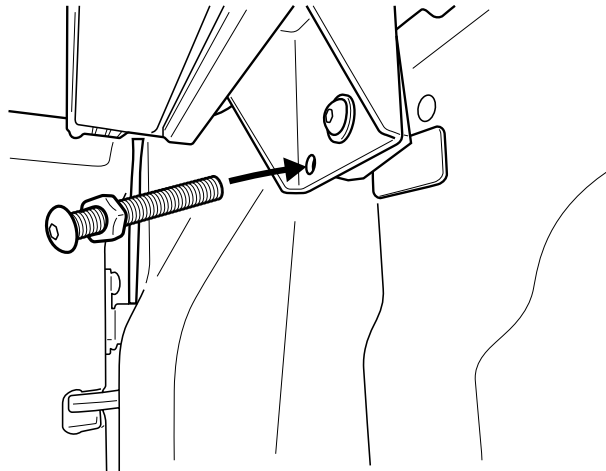


Side rail rubber must have a 1mm gap from the top of the tailgate in the closed position.

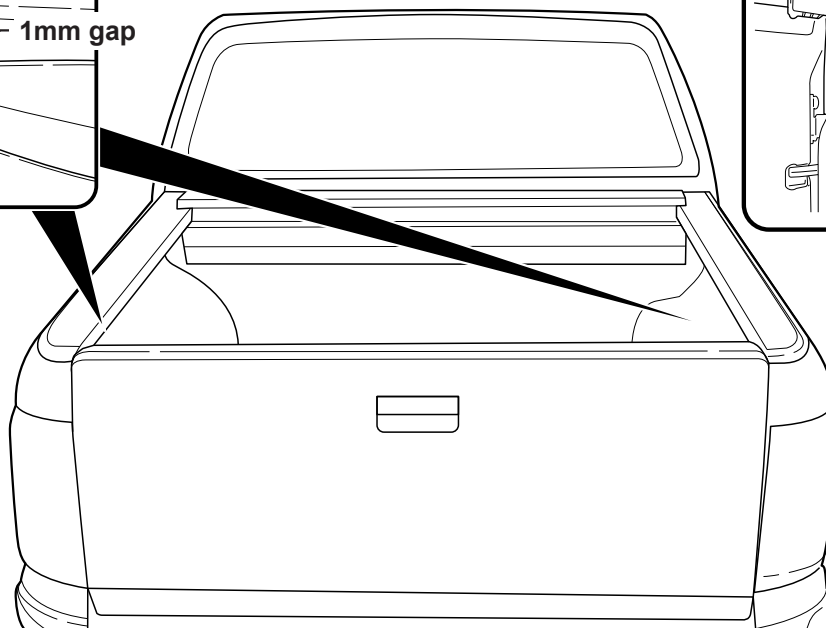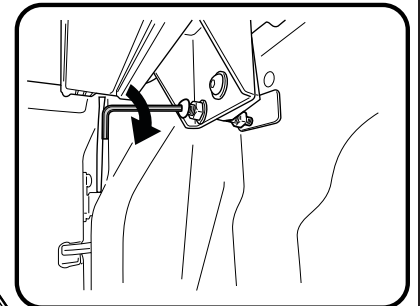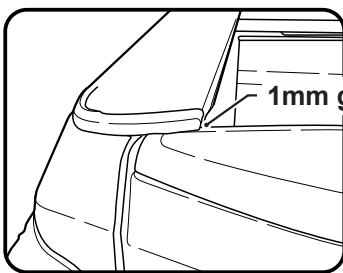

Drive the adjustment bolt in to lift the rear of the side rail till it clears the tailgate.




Fasten the M8 nut against clamp bracket.

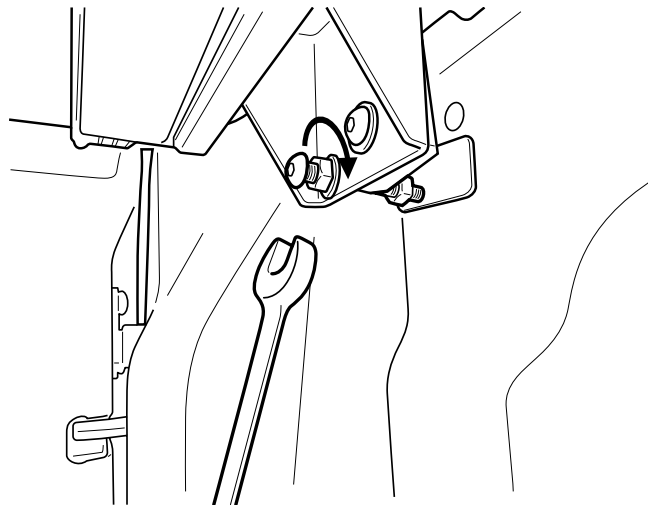



Install front drain pipes through pre-drilled holes of the canister. ( RHS/LHS)




Note: With care push tube in.  
Taking care pull the tube back  
so it seals correctly against  
the front panel of the tub.

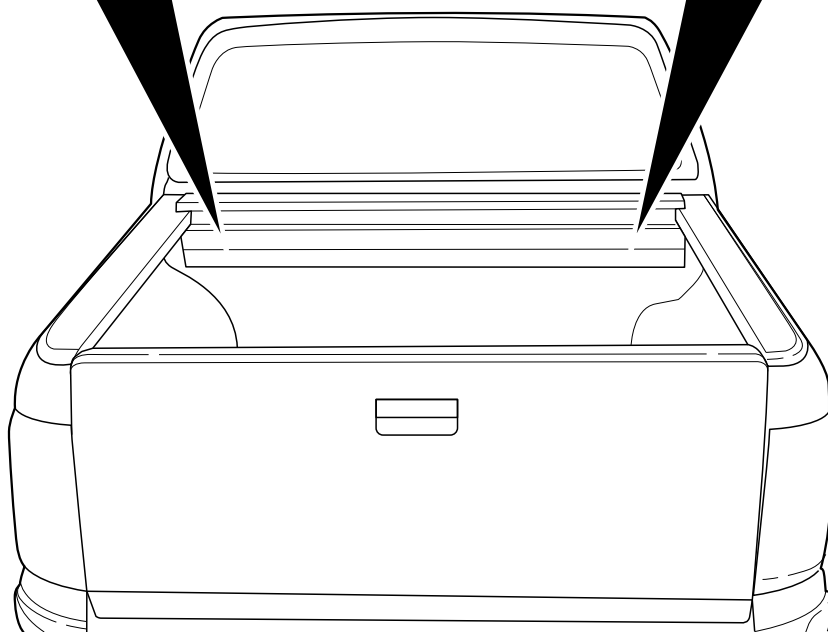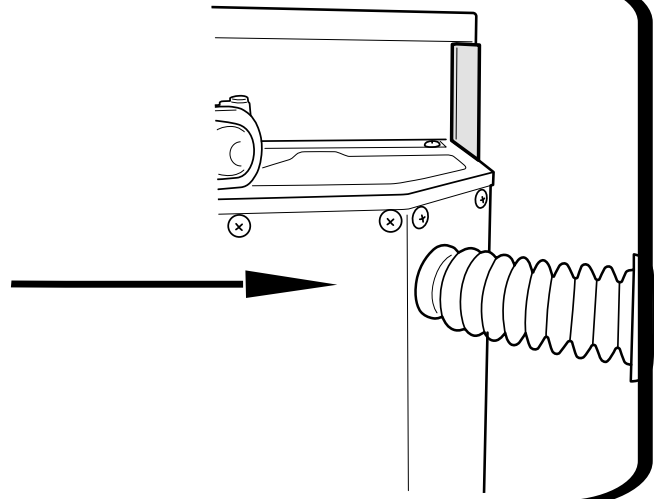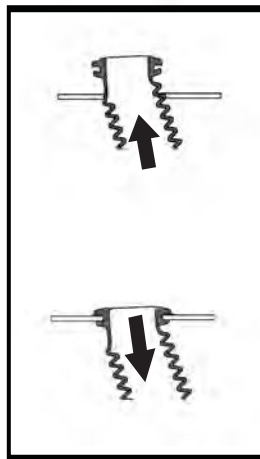

Fasten both rear legs of the sports bars to to 3nm torque.

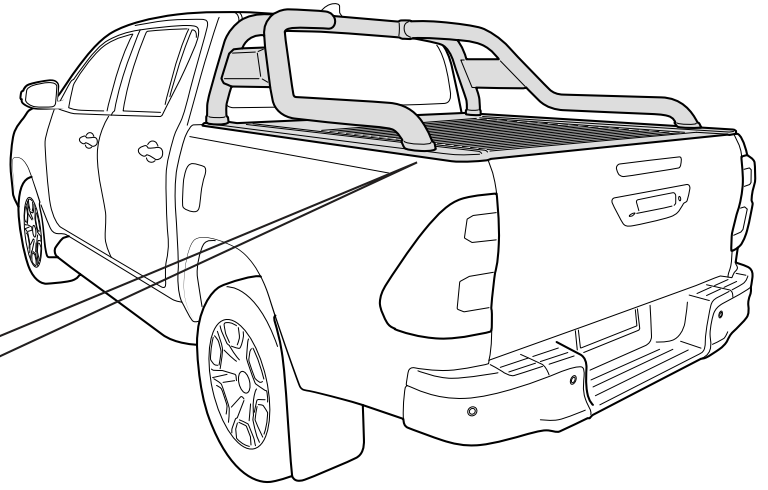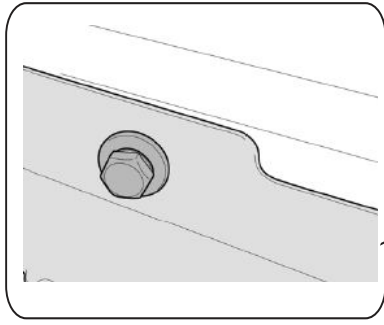


Fasten the bolts indicated.


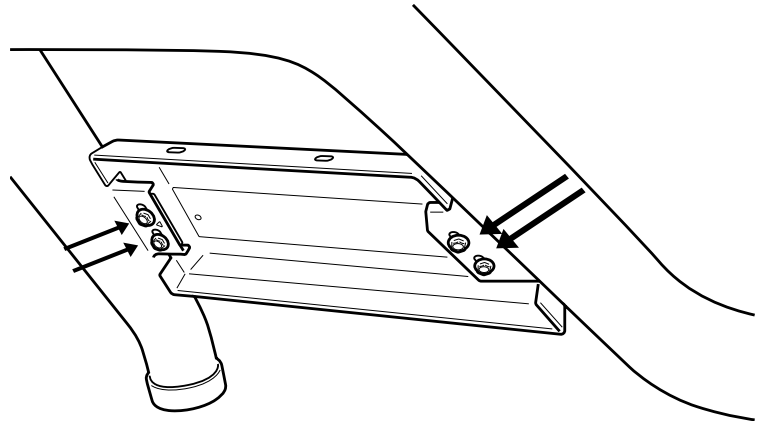


Repeat above steps to the other side.

Align back cover for side plate as indicated.

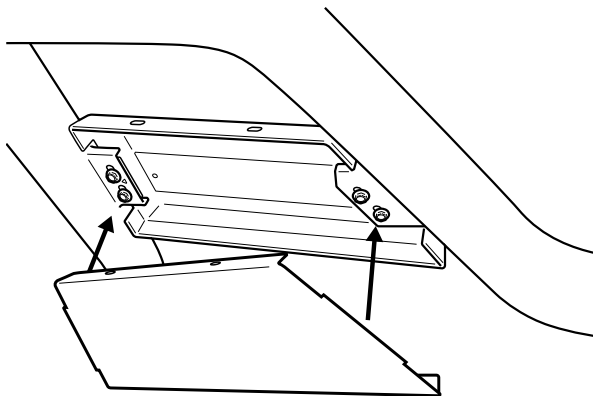

Fasten into position using M6x20 Allen head bolt through M6 spring washer and M6 large washer.

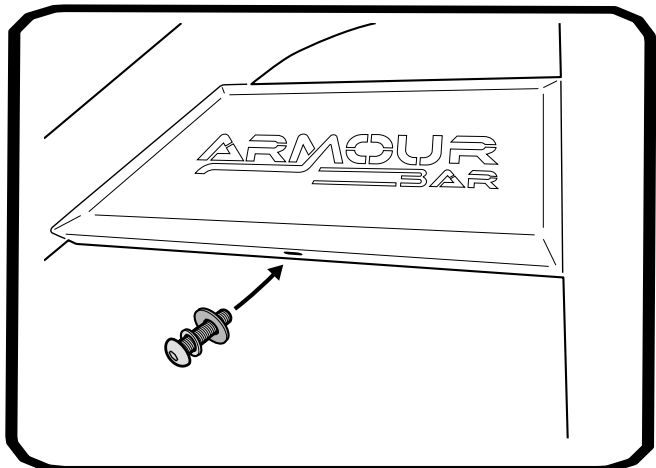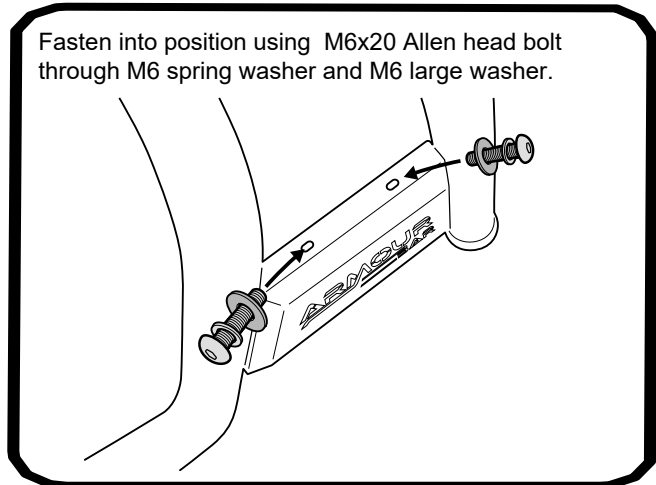


Repeat above steps to the other side. Re-connect the brake light loom to the vehicle.


- a. Connect Battery loom S2.75 to Receiver loom.
- b. **Carefully** connect S3-CL-PATCH to Receiver loom.



Align connectors carefully to avoid pushing pins out.

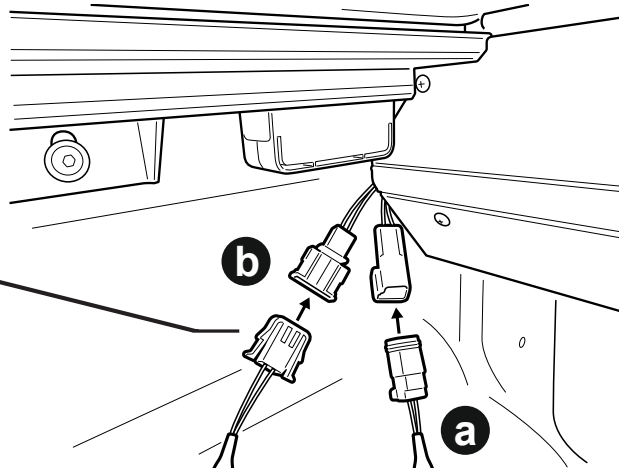

Carefully connect CI-Loom-Long to S3-cl-patch.

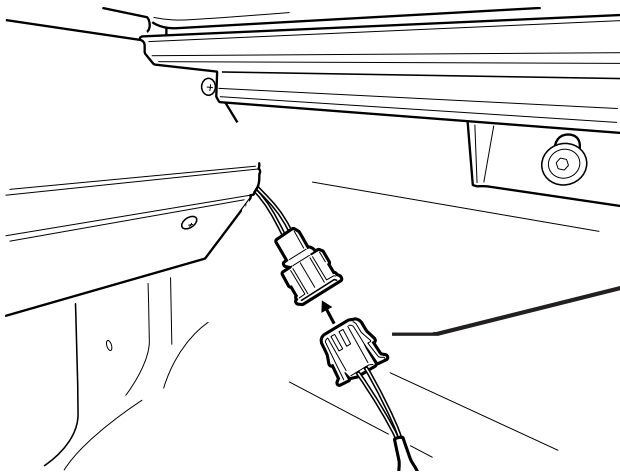

Align connectors carefully to avoid pushing pins out.



**Operating instructions:**

Press unlock on vehicle key fob to activate controller.  
 When vehicle is unlocked the side rail sensor buttons will be active to control.  
 When vehicle is locked the side rail sensor buttons will be inactive.

**Using factory key fob to operate:**


Pressing unlock twice on the factory key fob within 4 seconds, will activate the roll r cover to open.  
 Pressing lock twice on the factory key fob within 4 seconds, will activate the roll r cover to close.

**Vehicle proximity:**

Tapping the proximity twice to open or lock the car door will act exactly the same way as the key fob being pressed twice.

Touch & let go to open, touch & let go again to pause.

Touch & let go to close, touch & let go again to pause.

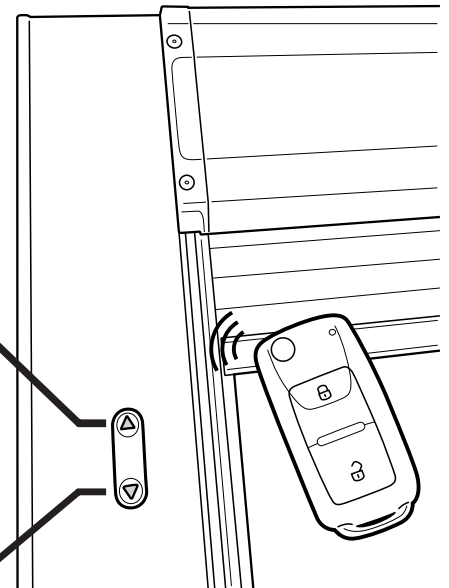

NOTE: 1. To wear in the Roll R Cover please fully open & close the cover approximately 15 times after install is complete.

2. Set your vehicle locking system to unlock all doors with one press of the factory remote unlock button. This setting can be found in your vehicle settings.