



# INSTALLATION INSTRUCTIONS

**To suit Nissan NP300 Navara  
Dual Cab 06/2015 - 12/2020.**



**INSTALLATION TIME:** 2.5 Hours (Approximately)

<b>IMPORTANT</b>	<ul style="list-style-type: none"> <li>• Do not stand/sit or rest heavy objects on Roll R Cover</li> <li>• Humans or animals are not to be under the closed cover at any given time</li> <li>• Tonneau Cover is not dust or water tight</li> <li>• If contact with volatile chemicals occur, clean Cover with mild detergent and water solution</li> </ul>			
<b>Care Instructions</b>	<ul style="list-style-type: none"> <li>• Read Instructions fully before commencing installation.</li> <li>• Clean Cover with a mild detergent and water solution</li> <li>• Do not use abrasive cleaners or solvents</li> <li>• Refer to manufactures instructions applicable to power drill.</li> <li>• Protect Tub floor against scratches during installation process.</li> </ul>			
<b>Maintenance</b>	Refer to Maintenance instructions.			
<b>Tools Required</b>	<table style="width: 100%; border: none;"> <tr> <td style="vertical-align: top;"> <ul style="list-style-type: none"> <li>• Pen / Marker</li> <li>• Centre Punch</li> <li>• Drill &amp; Drill bits</li> <li>• Caulking Gun</li> <li>• Silicon - Non Acetic</li> </ul> </td> <td style="vertical-align: top;"> <ul style="list-style-type: none"> <li>• Scissors &amp; Knife</li> <li>• Spanner &amp; Socket</li> <li>• Tape measure</li> <li>• Holesaw</li> <li>• Filing tool</li> </ul> </td> <td style="vertical-align: top;"> <ul style="list-style-type: none"> <li>• Soapy water solution</li> <li>• Allen Key set</li> <li>• Screw driver</li> <li>• Rust Inhibitor</li> <li>• Trim Removal Tool</li> </ul> </td> </tr> </table>	<ul style="list-style-type: none"> <li>• Pen / Marker</li> <li>• Centre Punch</li> <li>• Drill &amp; Drill bits</li> <li>• Caulking Gun</li> <li>• Silicon - Non Acetic</li> </ul>	<ul style="list-style-type: none"> <li>• Scissors &amp; Knife</li> <li>• Spanner &amp; Socket</li> <li>• Tape measure</li> <li>• Holesaw</li> <li>• Filing tool</li> </ul>	<ul style="list-style-type: none"> <li>• Soapy water solution</li> <li>• Allen Key set</li> <li>• Screw driver</li> <li>• Rust Inhibitor</li> <li>• Trim Removal Tool</li> </ul>
<ul style="list-style-type: none"> <li>• Pen / Marker</li> <li>• Centre Punch</li> <li>• Drill &amp; Drill bits</li> <li>• Caulking Gun</li> <li>• Silicon - Non Acetic</li> </ul>	<ul style="list-style-type: none"> <li>• Scissors &amp; Knife</li> <li>• Spanner &amp; Socket</li> <li>• Tape measure</li> <li>• Holesaw</li> <li>• Filing tool</li> </ul>	<ul style="list-style-type: none"> <li>• Soapy water solution</li> <li>• Allen Key set</li> <li>• Screw driver</li> <li>• Rust Inhibitor</li> <li>• Trim Removal Tool</li> </ul>		

**PERSONAL PROTECTIVE EQUIPMENT:**



Rubber Gloves



Goggles




Hearing Protection


# BOX CONTENTS

**LEFT & RIGHT SIDE RAIL**

S2.5-DC-AE-002ps-NP42 

S2.5-DC-AE-003ds-NP42 



**CANISTER ASSEMBLY**




S3-DC-AF-NP4R-001-002

**CANISTER TOP COVER**  S2.5-DC-AE-005 -NP4



## STANDARD KIT



<p><b>COVER END CAPS</b></p>  <p>S2.5-DC-PI-004ps</p>  <p>S2.5-DC-PI-004ds</p>	 <p><b>COUNTERSUNK SCREW</b> Qty - 4</p>	 <p><b>FLAT PLATE</b> Qty - 2</p>	 <p><b>CABLE TIE</b> Qty x 16</p>	 <p><b>BATTERY LOOM S2.75</b></p>	 <p><b>Drainage pipe</b> Qty - 2</p>
 <p><b>SIDERRAIL CLAMP</b> Qty - 6</p>	 <p><b>M8 x 35mm</b> Qty - 6</p>	 <p><b>M8 WASHER</b> Qty - 6</p>	 <p><b>M8 SPRING WASHER</b> Qty - 6</p>	 <p><b>M8 x 70 mm</b> Qty - 2</p>	 <p><b>M8 NUT</b> Qty - 8</p>

## SPECIFIC KIT NP4R


 <p>50449 D-SPONGE Qty-2</p>	 <p>CL-LOOM-LONG</p>	 <p>NP-PATCH</p>		
---	---	---	--	--

## SPORTS BAR KIT NP42R


 <p>3M PRIMER</p>	 <p>L/H SIDERRAIL HOLE GASKET Qty - 2</p>	 <p>R/H SIDERRAIL HOLE GASKET Qty - 2</p>	 <p>M8 NYLOC NUT Qty 4</p>	 <p>M8 GRUB SCREW Qty x 2</p>	 <p>M8 FLAT WASHER Qty - 6</p>
 <p>M8 FLANGE NUT Qty - 2</p>	 <p>THREAD BOLT Qty x 1</p>	 <p>M8 HEX BOLT Qty - 2</p>	 <p>NYLON SPACER Qty - 2</p>		

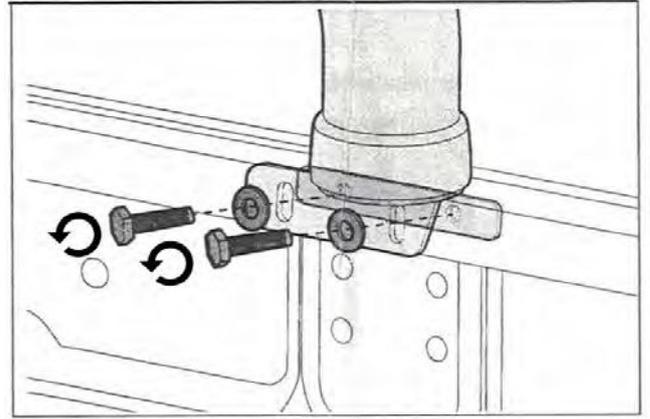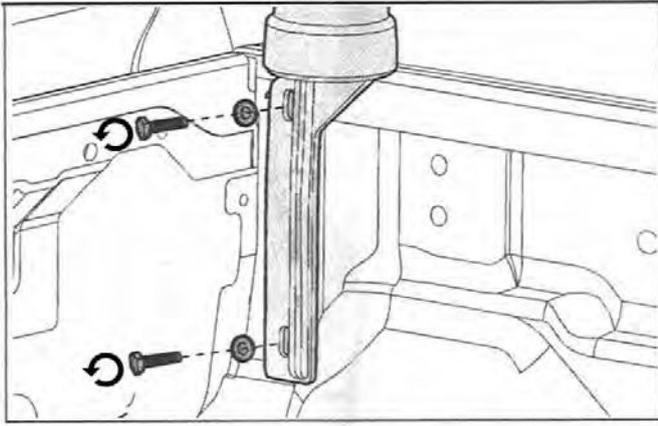

**Remove nuts & bolts holding the sports bars to the vehicle. Discard the removed hardware.**

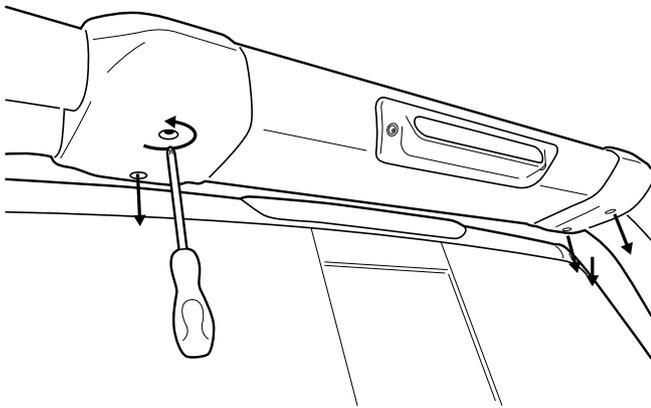


**Remove screws holding plastic cover and retain.**

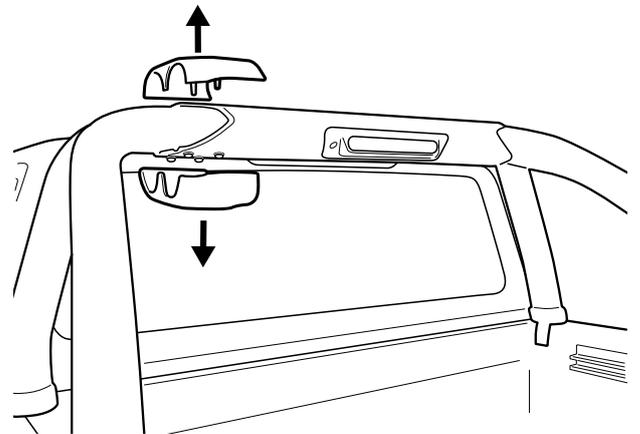


**Remove plastic cover & retain.**



**Loosen all indicated bolts.**

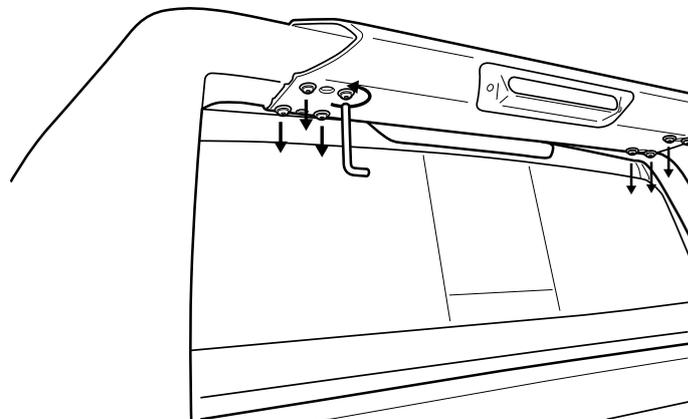


Push all legs in towards the center.

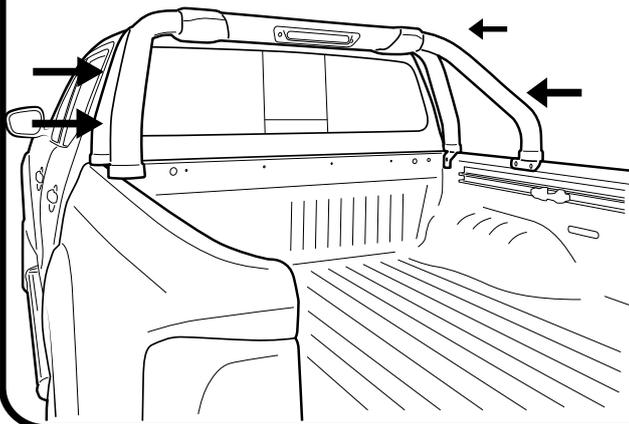



Now fasten all the bolts indicated.

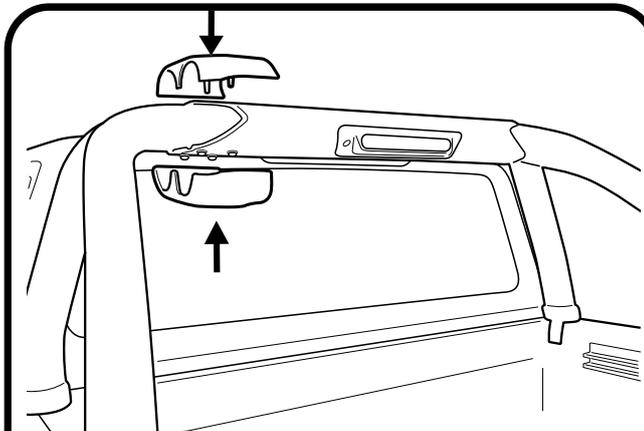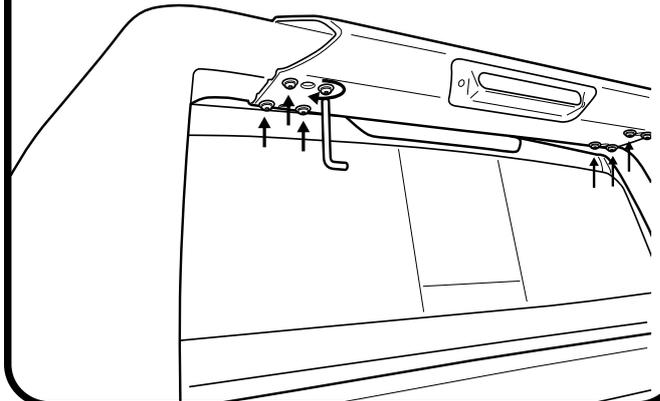

Re-fit the plastic covers.

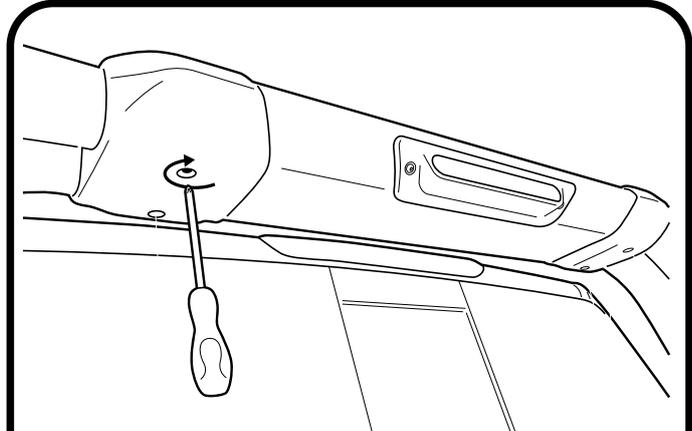

Fasten the cover with all retained bolts.

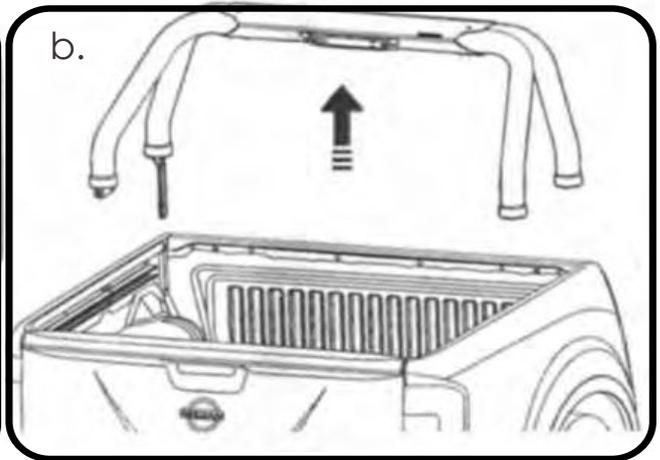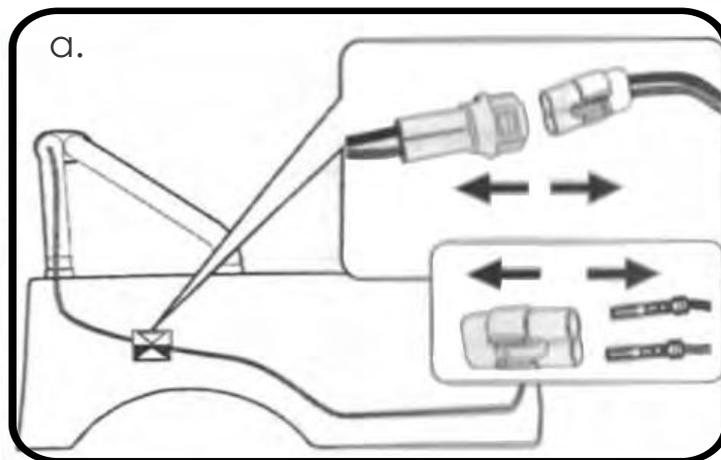


a. Locate brake light wiring loom from rear passenger side wheel arch. Disconnect and remove plug from connectors.


b. Remove Sports Bars from vehicle.

## TUB PREPARATION



Clean are as indicated.

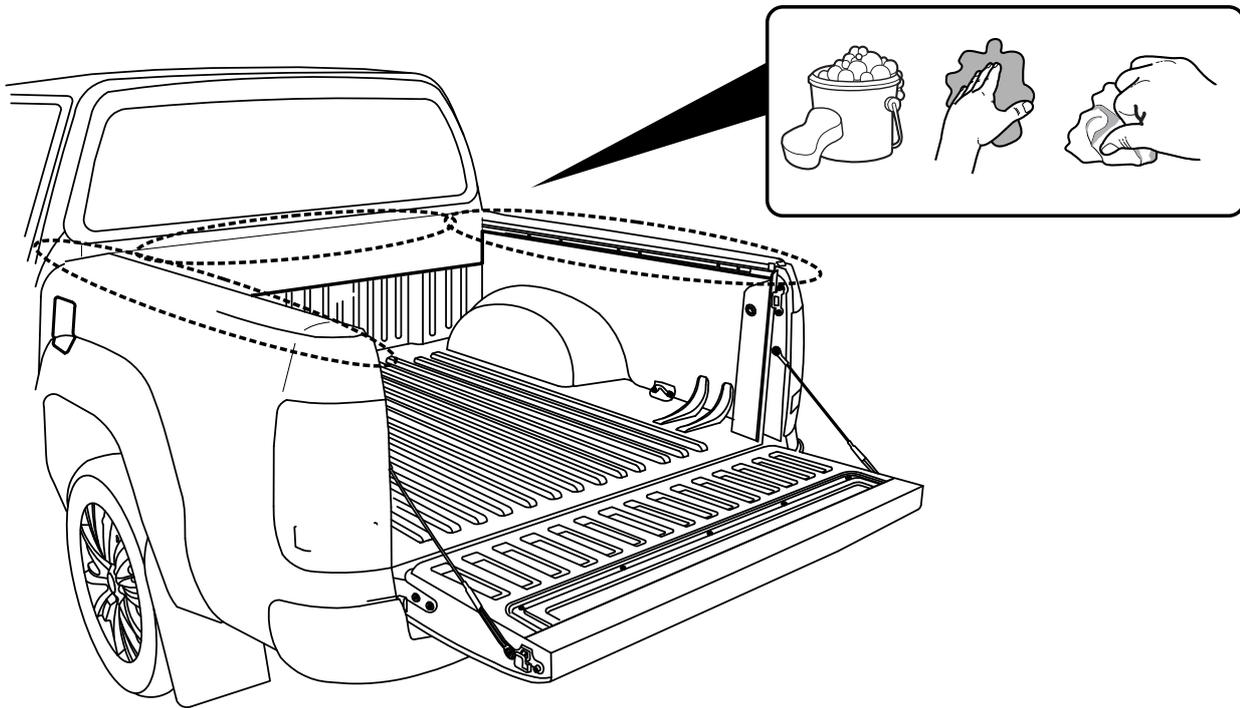



Measure 10mm down from top of tailgate and trim tailgate liner.

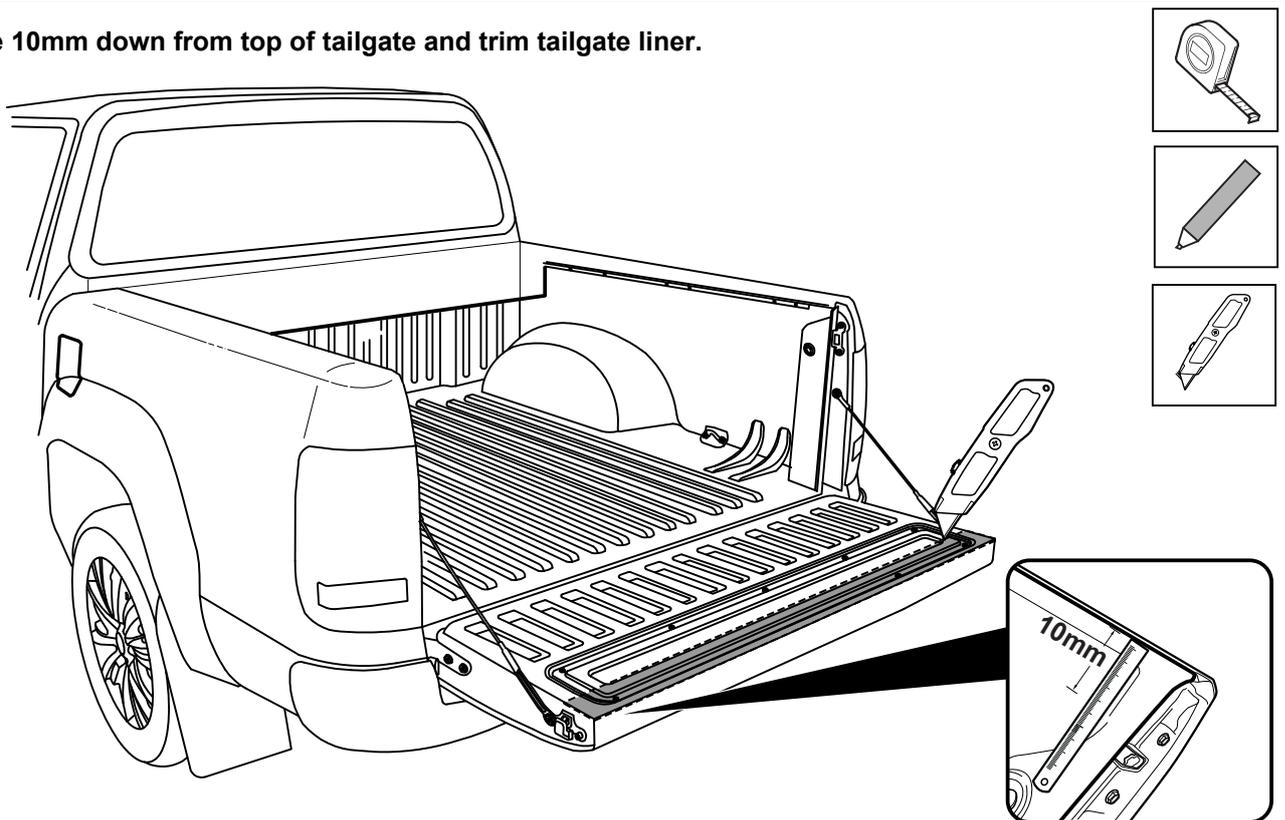




Measure 160mm down from top of Ute bed ( head rail ) and mark across to the other side.  
Trim front of bed liner by 160mm from the top of the Ute bed as shown.

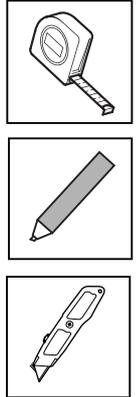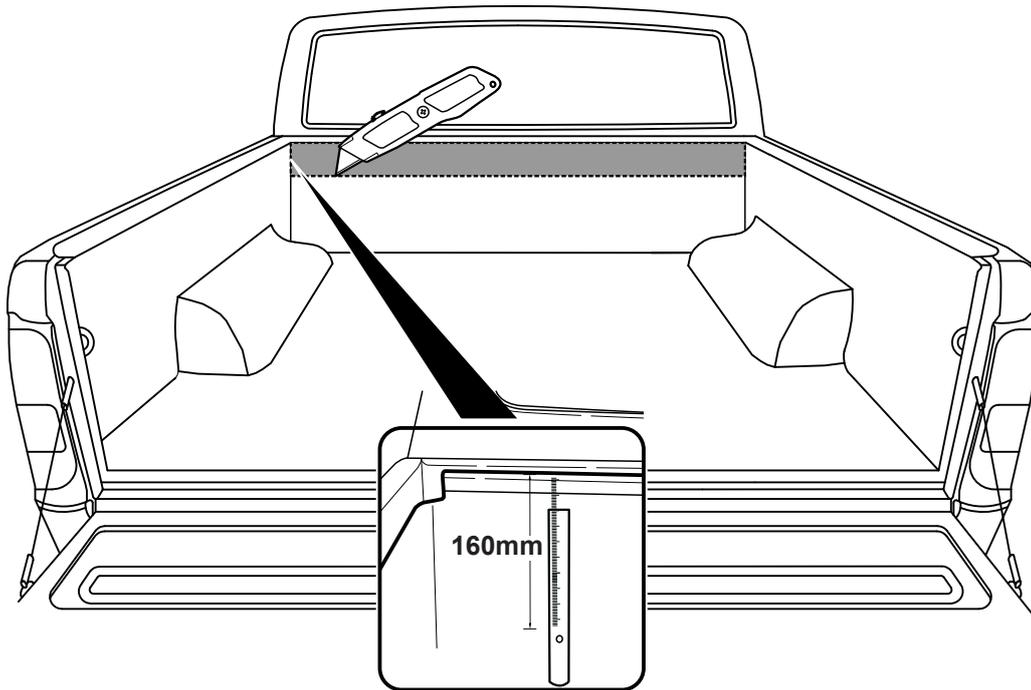


Cut a 20mm split for bed liner to flex.

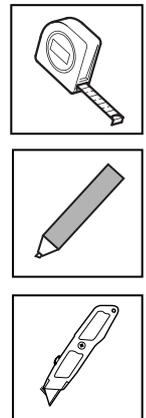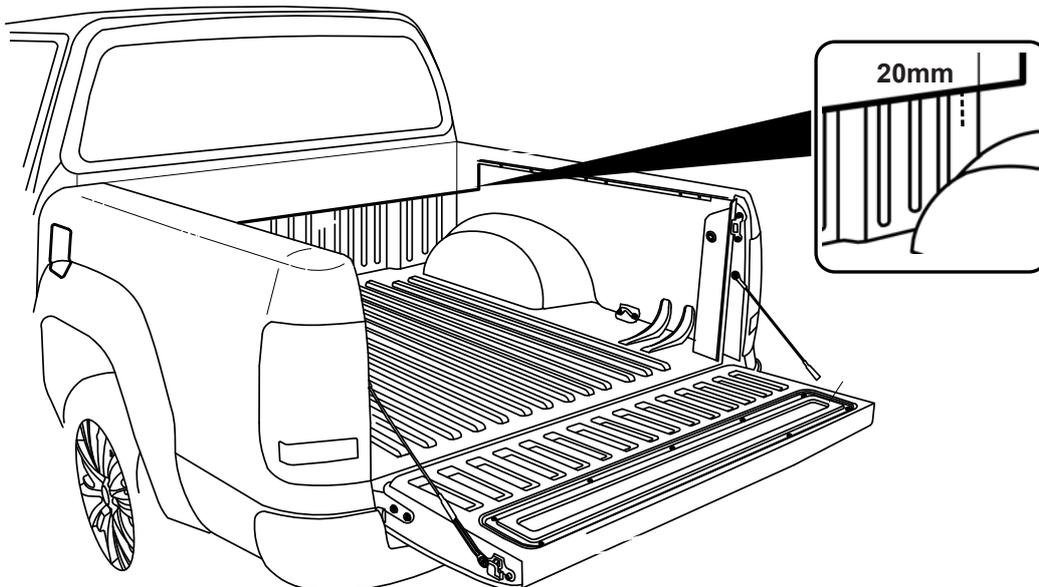

Measure down from top of headboard 225mm & 65mm from inside wall of bed / tub as shown. Repeat to the other side.  
Using a 50mm hole-saw drill the liner only as indicated.

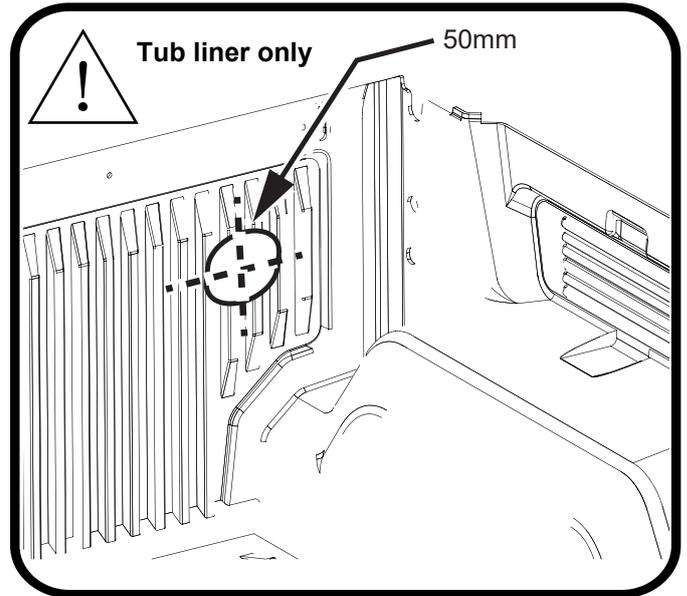
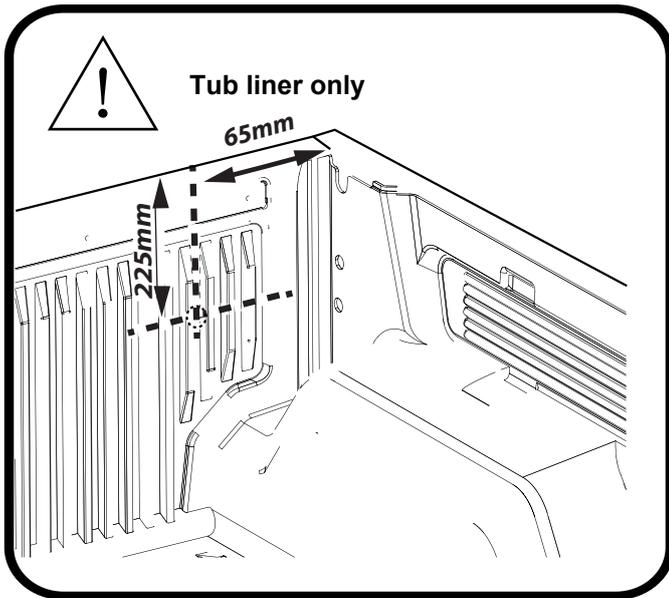
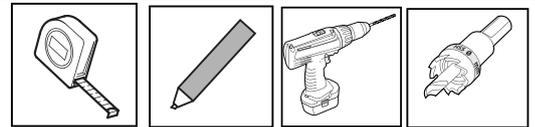


Measure down from top of headboard 225mm & 65mm from inside wall of bed as shown. Repeat to the other side.  
Using a 30mm hole-saw drill through tub front panel, file away any sharp edges. Apply anti rust coating. Repeat to other side.


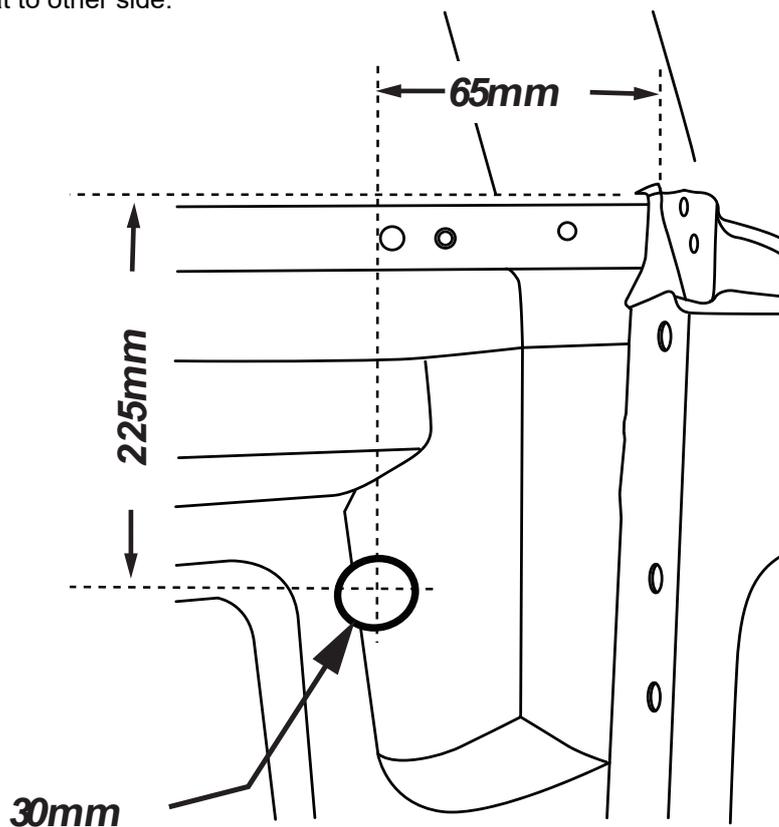


**! ATTENTION:** Do not exceed 30mm hole.

Seal any exposed gaps or holes on the front panel of the Ute bed with sealant.

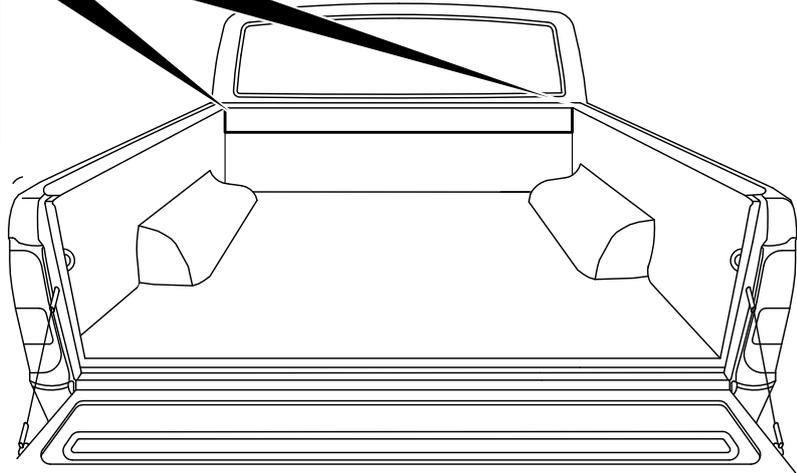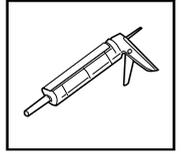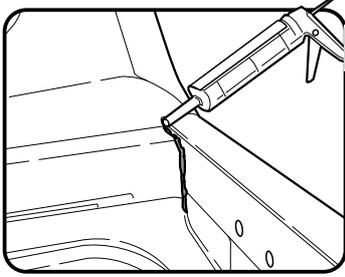



Carefully unpack the box.

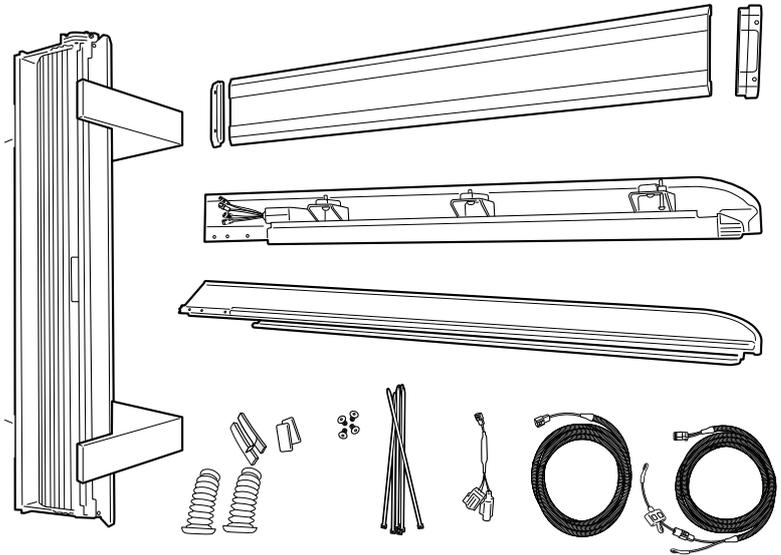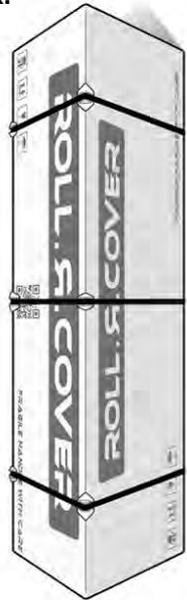


Install front drain pipes ( 55mm diameter end of hose) through pre-drilled holes on the front tub panel.



Note: With care push tube in.  
Taking care pull the tube back so it seals correctly against the front panel of the tub.

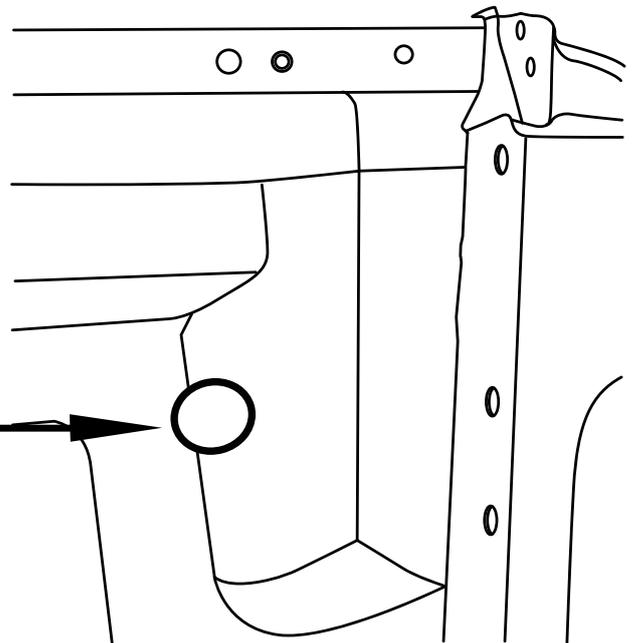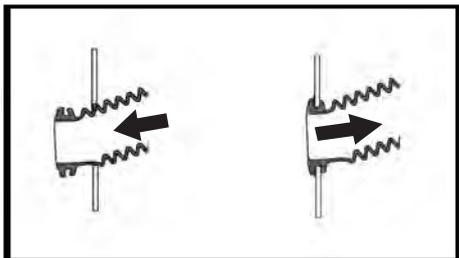


Disconnect fuse patch from battery loom S2.75.

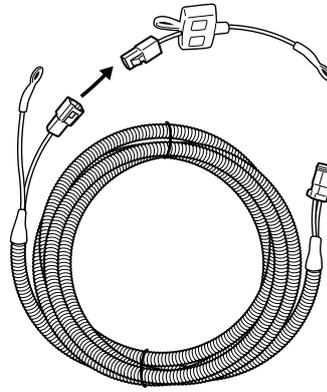


### Wiring Harness steps


**1** Feed Battery Loom S2.75 through the cavity

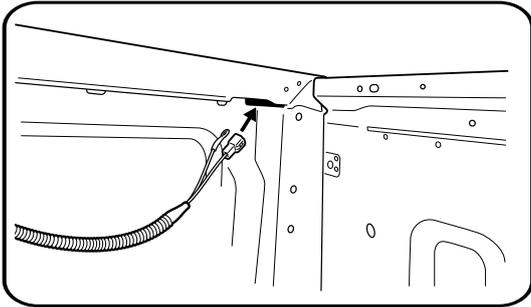

**3**

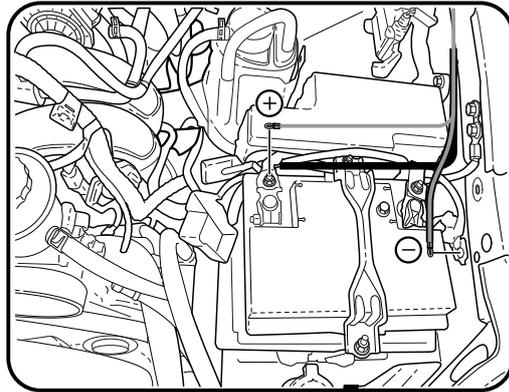


**2**

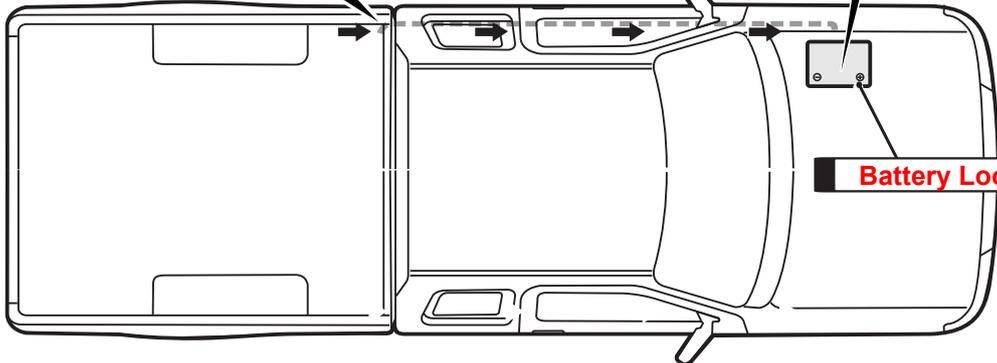


Run the wiring from the front corner cavity ( leaving 200mm in the tub) to the battery over the chassis rail. Making sure to keep away from hot obstructions and cable tie every 400mm. Reconnect fuse patch to battery loom S2.75, now attach fuse patch to positive of battery and earth to the body of the Ute.


Feed CL-Short-Loom through the cavity.

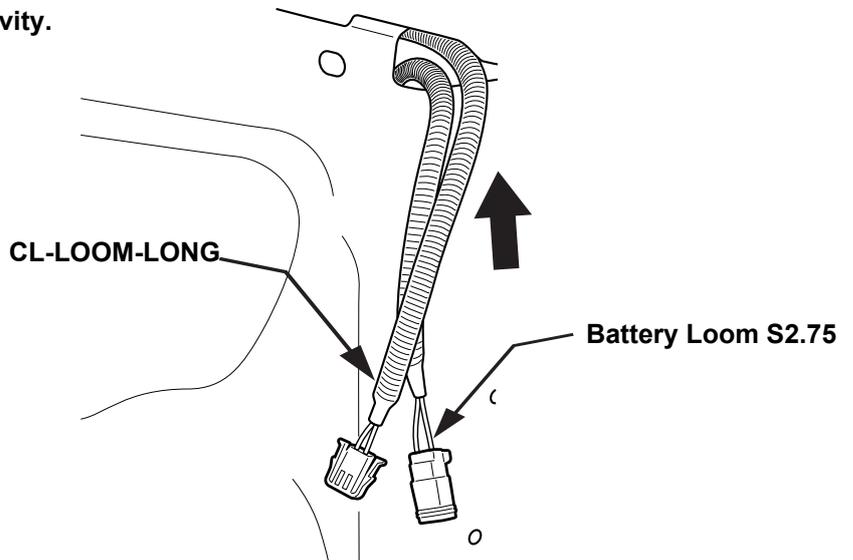

Run cl-loom-long to front passenger door over chassis rail. Cable tie wiring every 500mm.

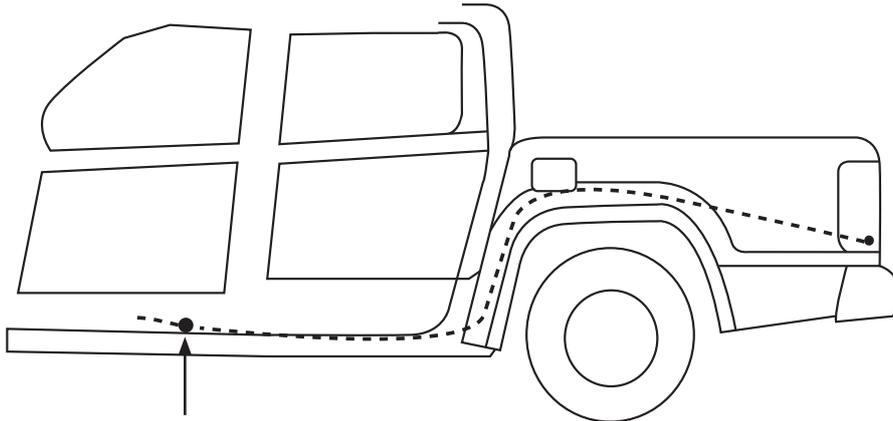



Make a small hole under the front passenger side rail. Be sure to check for obstructions on both sides. Run wiring through small hole made.

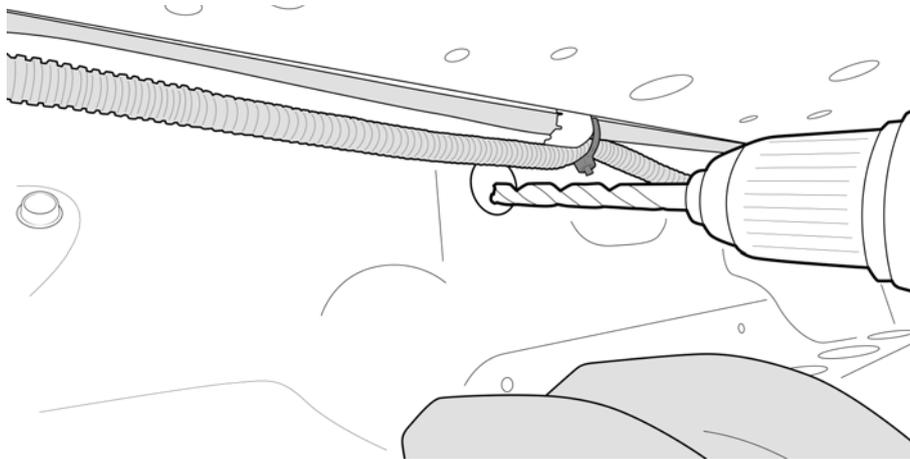


**NOTE:** To avoid drilling you can also run the loom through the grommets of the firewall into the kick panel. Seal accordingly.

Remove scuff plate.

Remove kicker panel.

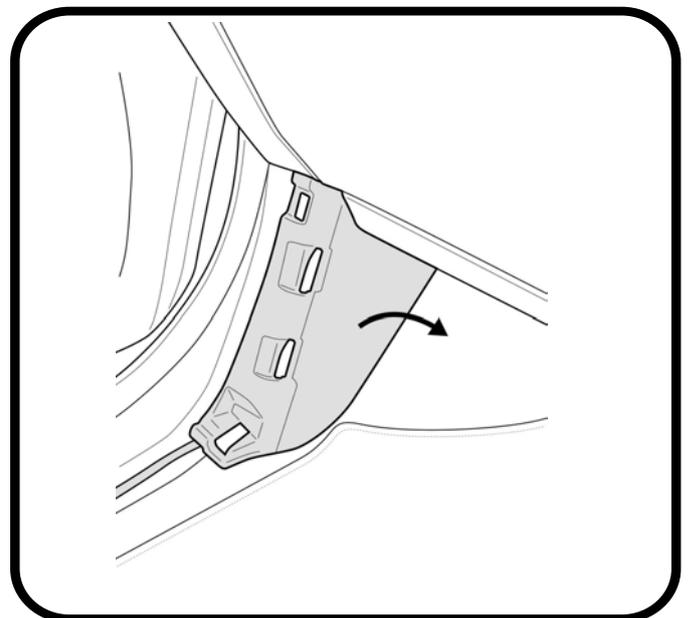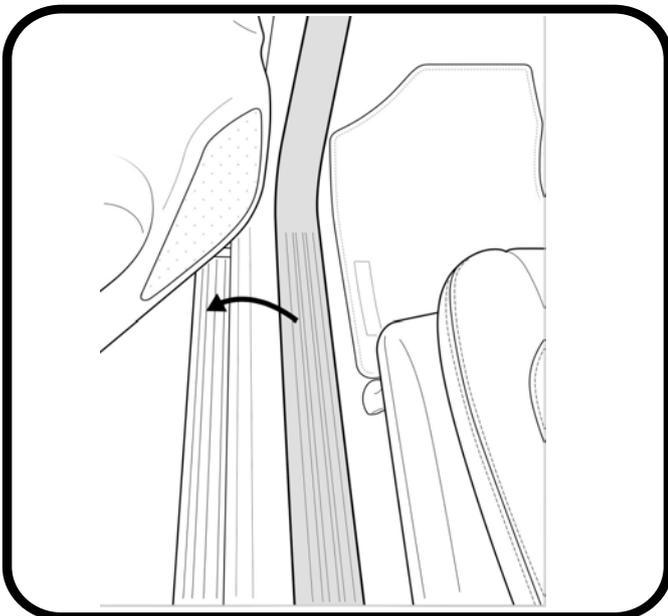


Unplug indicated wiring and plug NP-PATCH wiring.

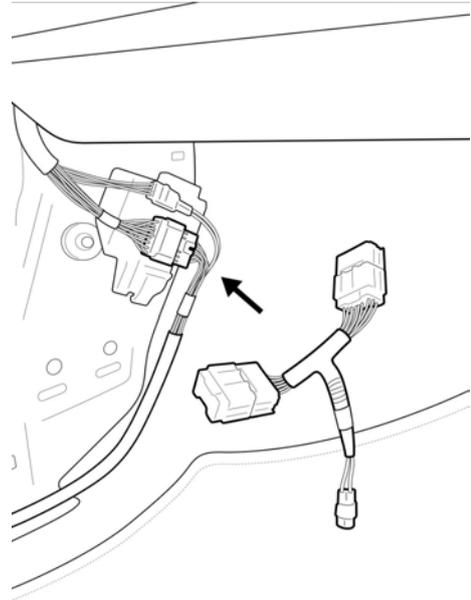


Plug CL-LOOM-LONG to PATCH wiring.



Cable tie overhang of wires and assemble all panels removed earlier.

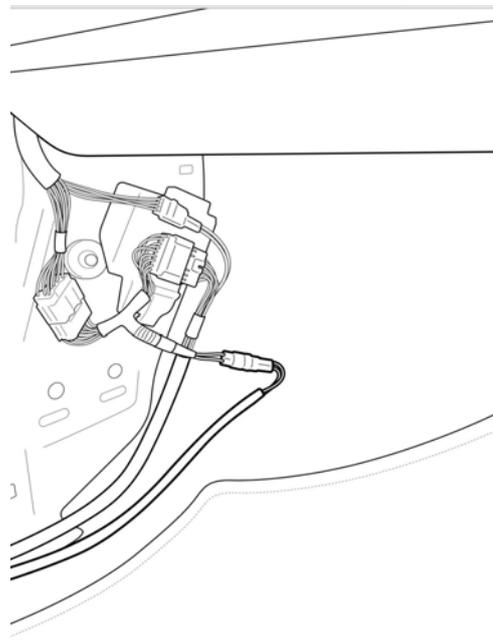


Seal any area where there was an incision or a hole made to have the loom feed in to the cab.

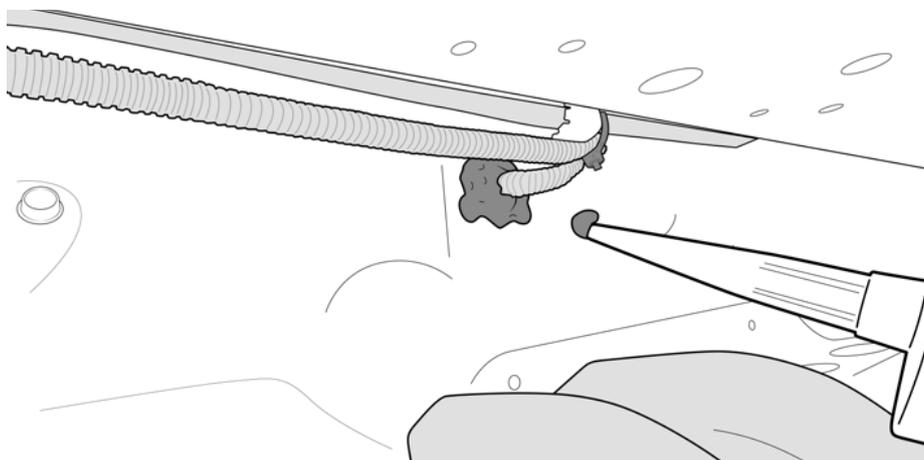

keep the cannister in the foam blocks from the packaging for assembly.

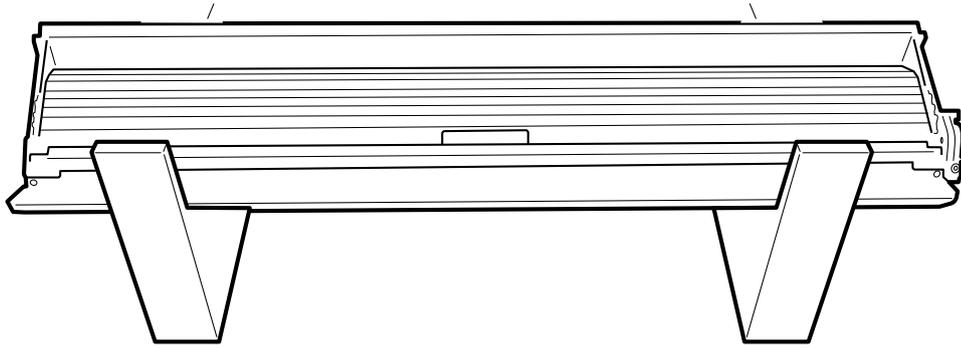
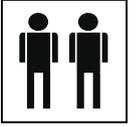


With assistance turn the canister on its back on the foam blocks.

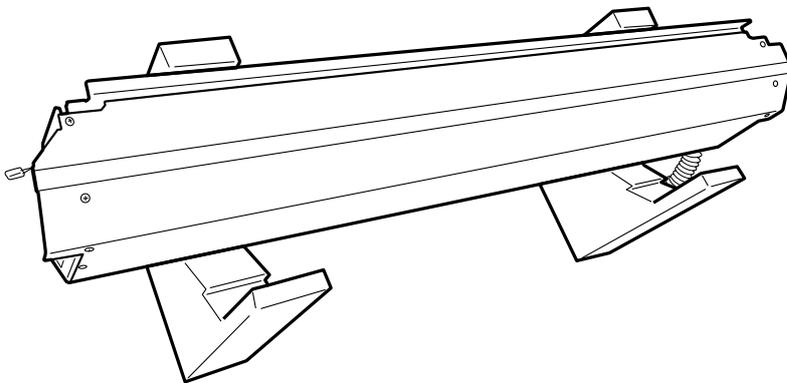


Disengage motor from the axle by unfastening the 3 Screw as indicated. Retain all parts.

Remove and retain the 3 screw from the canister as indicated.


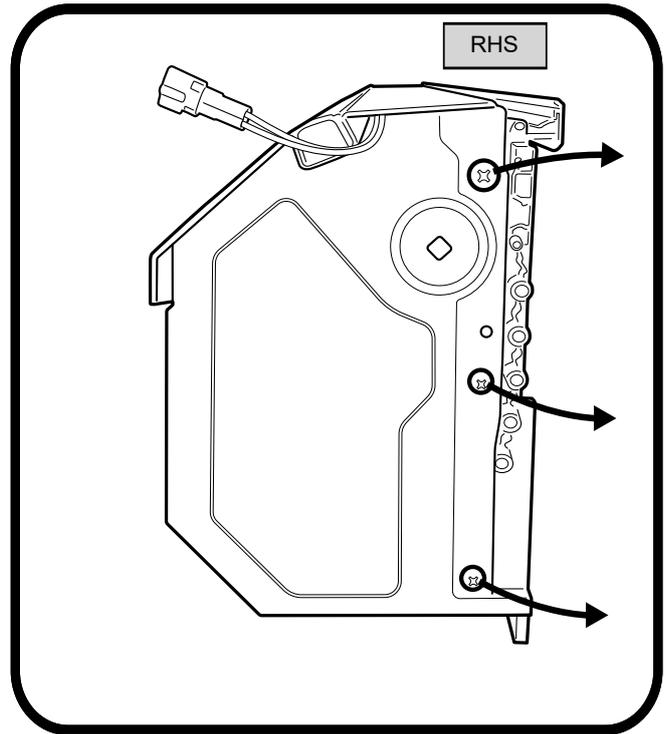
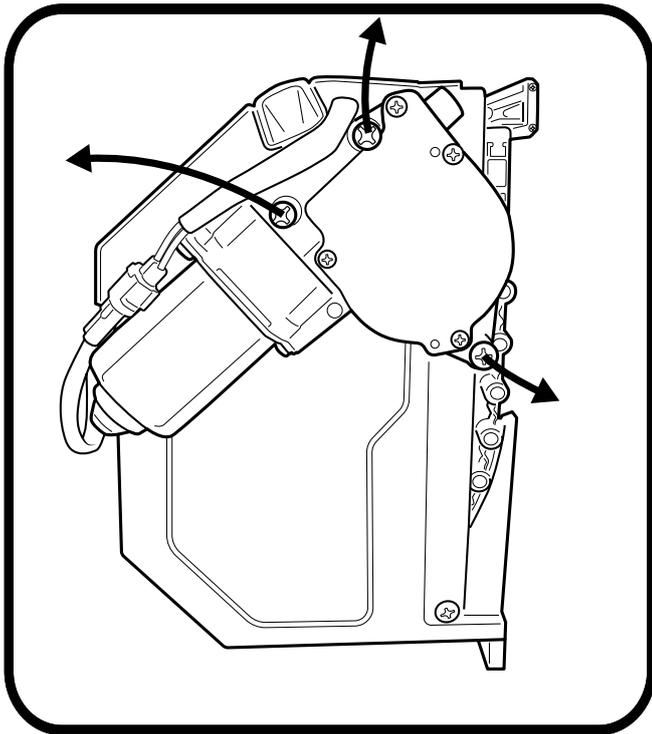


Now on the other side, remove and retain the 4 screws from the canister as indicated.



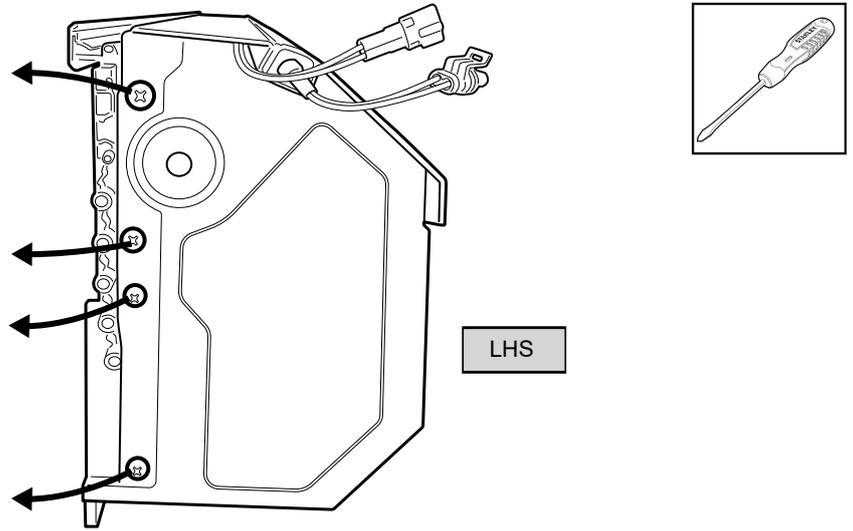


Align side rail to side of canister, guide the track to go in between the curtain end rubber stop.


NOTE: LHS side rail to be assembled first.

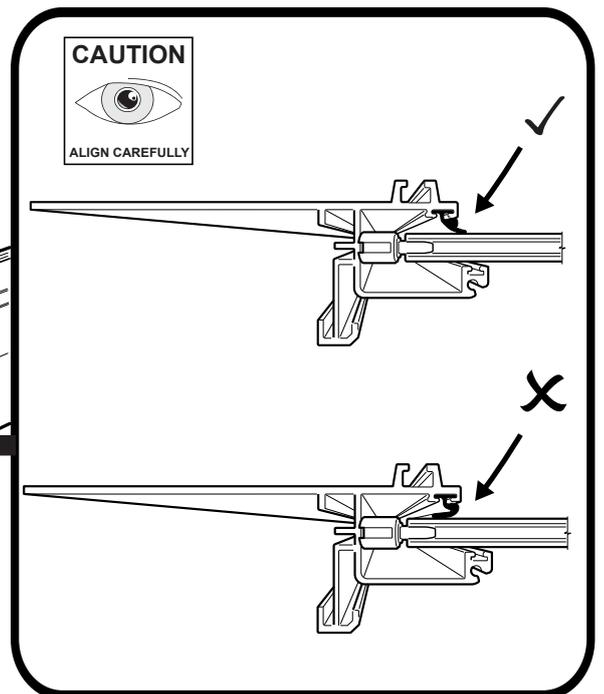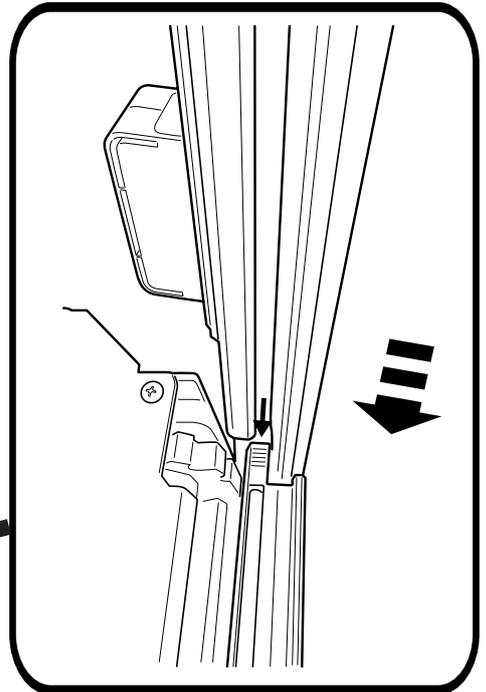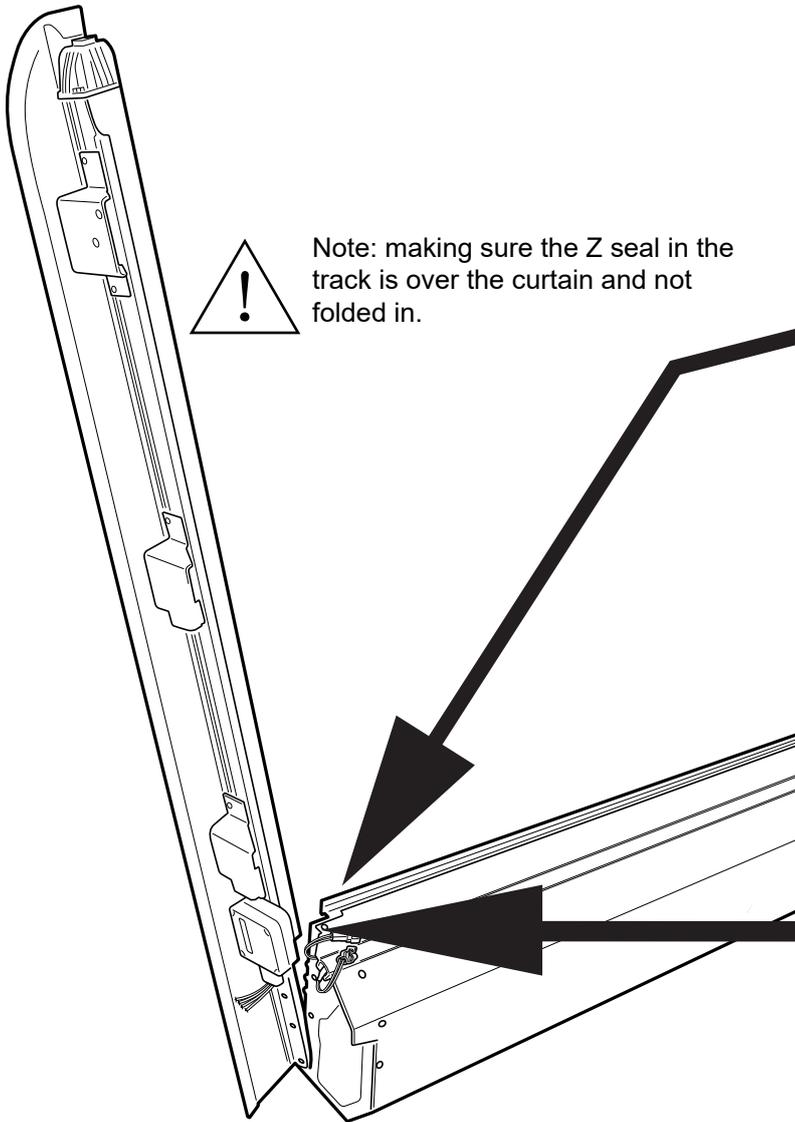


Fasten the side rail using the retained screws, spring washer and washer.

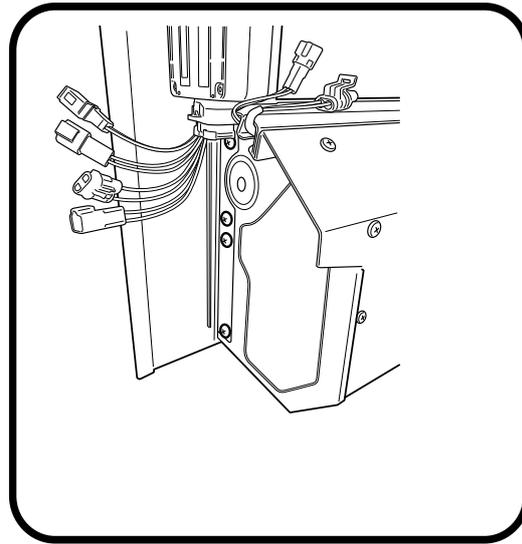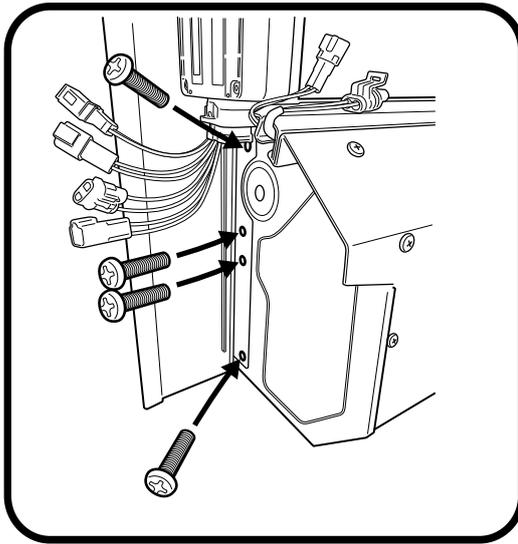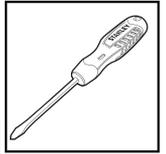


Connect motor connector to receiver

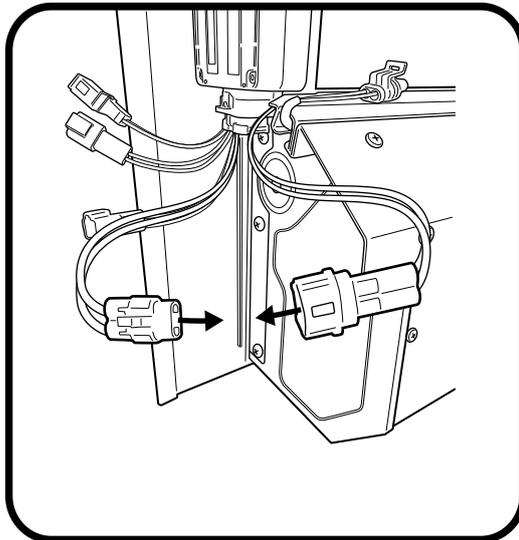




Connect LED Loom to receiver

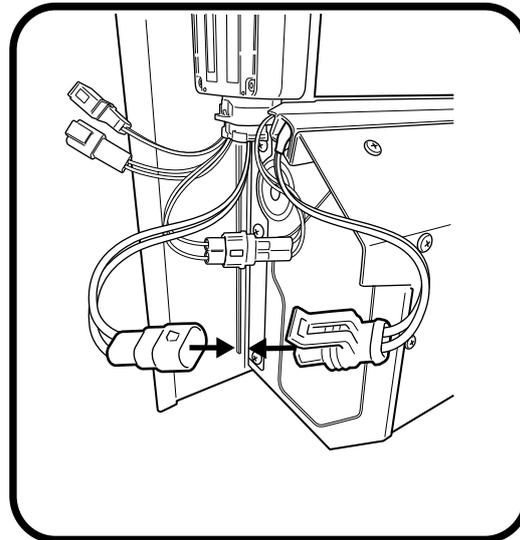



Align side rail to side of canister, guide the track to go in between the curtain end robber stop.

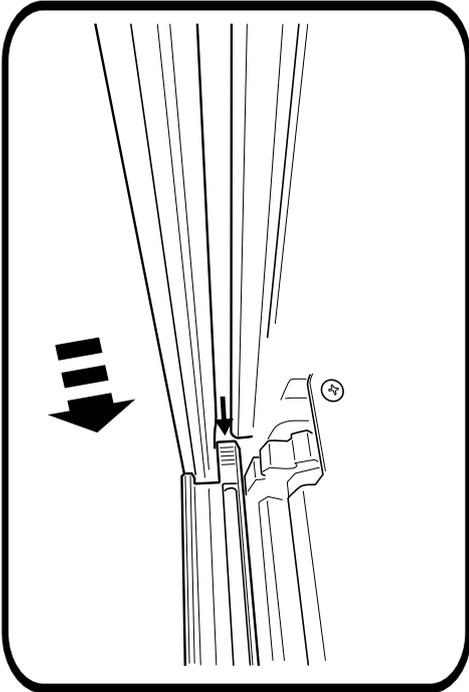

Note: making sure the Z seal in the track is over the curtain and not folded in.

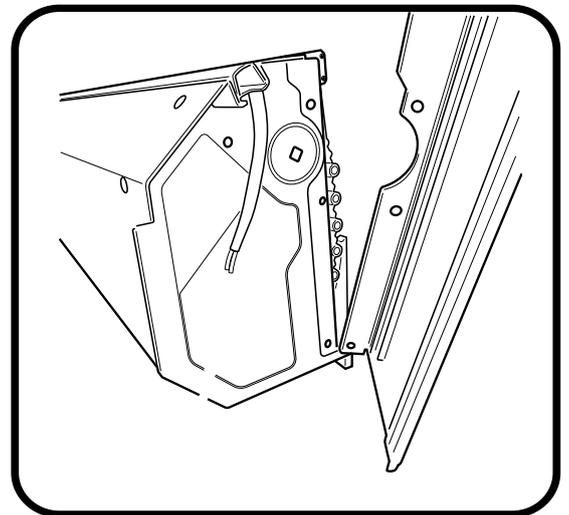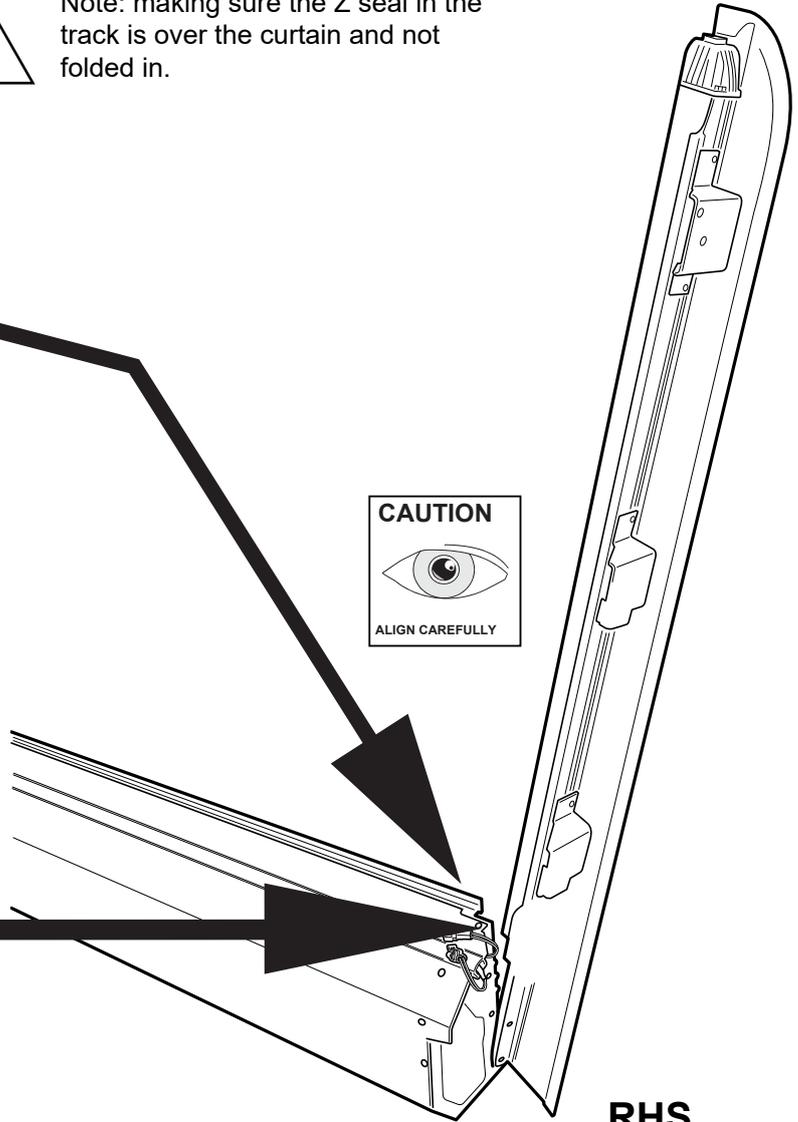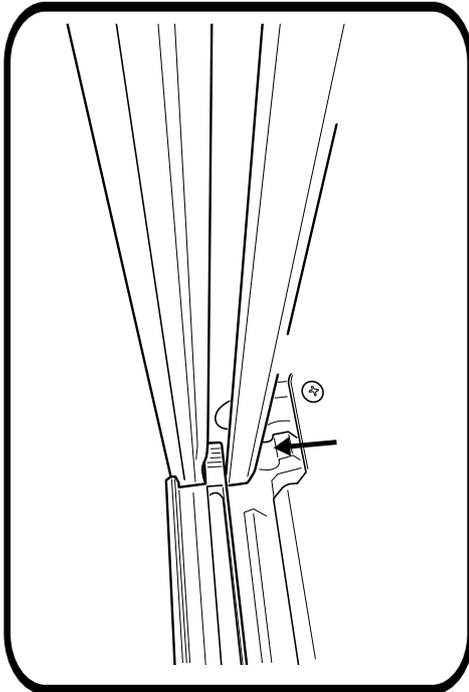


Fasten the side rail using the retained screws, spring washer and washer, only to the locations indicated.

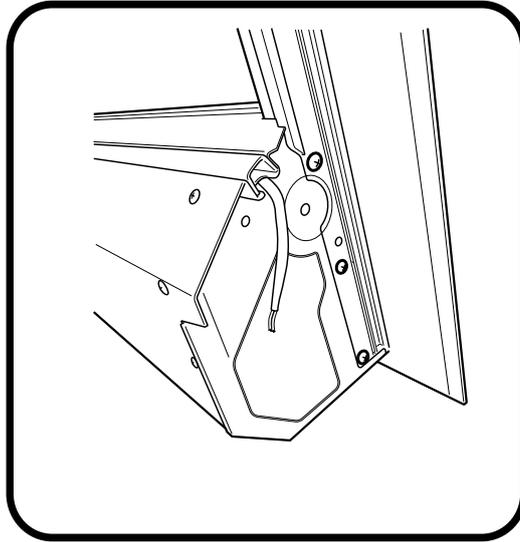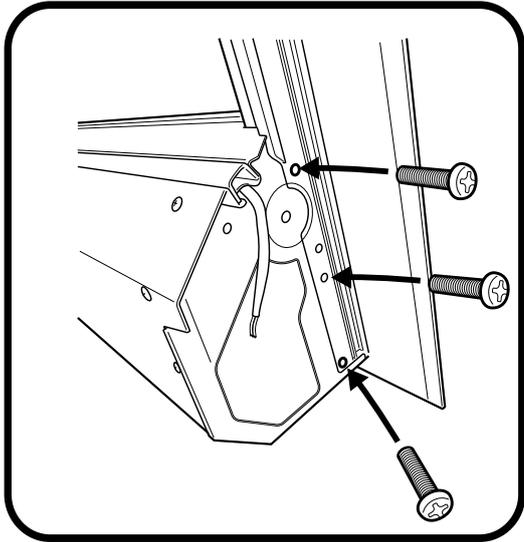



Feed M6 bolt through spring washer, motor and rubber bush.

**NOTE:** Rubber bush orientation has to be as per image. ( side with text on rubber, to face the motor).


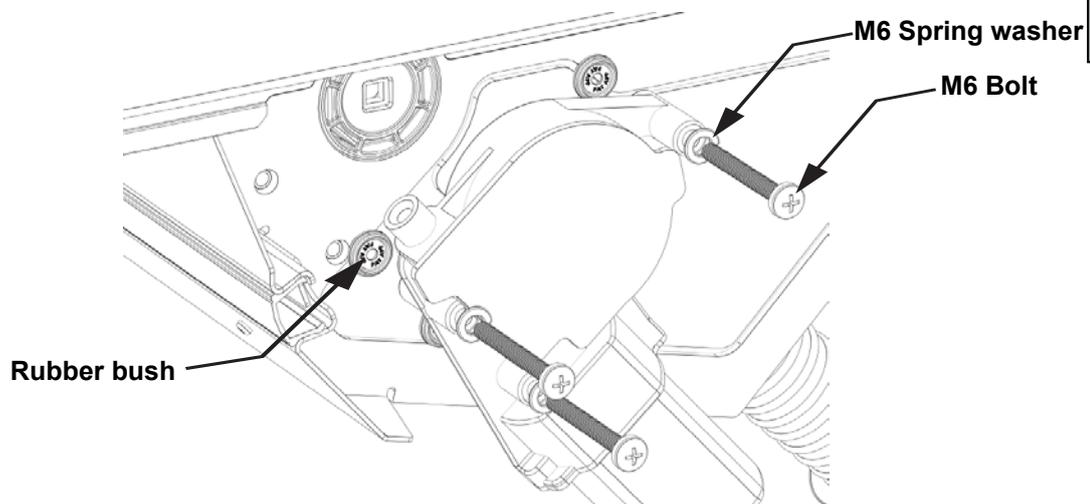


Align & insert motor shaft to axle.

**NOTE:** Pull / push curtain for axle to rotate.

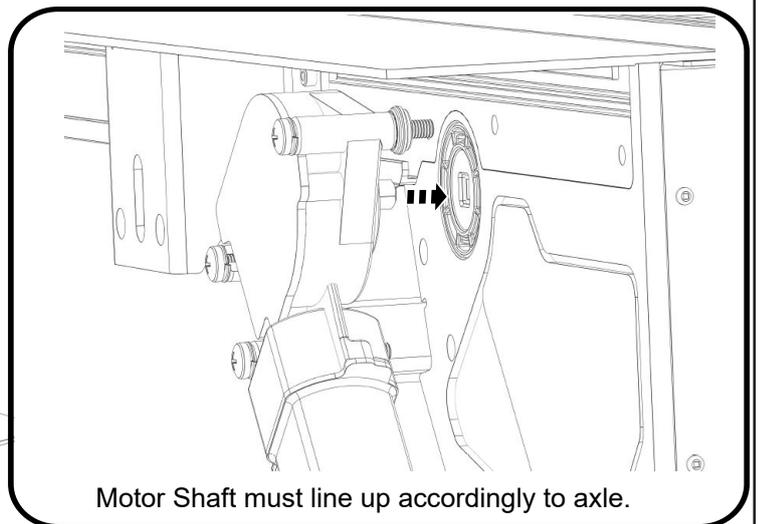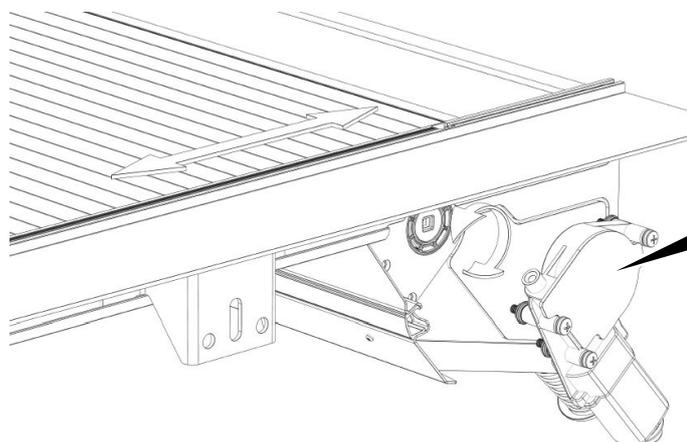




Fasten all 3 screws to 2nm torque. Over tensioning will cause operating issue's.

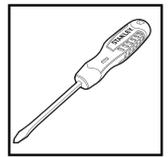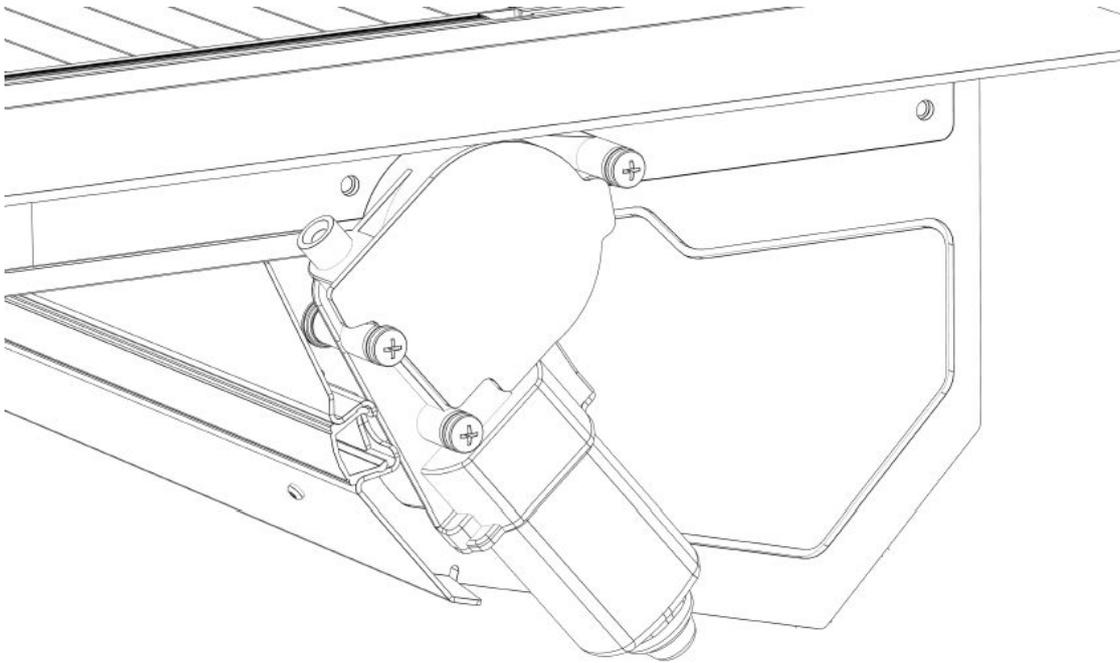


**Motor is to sit level.**

Any obstructions between motor and canister may cause operating issues.


Apply D-sponge foam tape to side rail as indicated. NOTE: Join foam firmly to the pre-fitted foam of the canister. Carefully trim excess off & discard as indicated. Repeat on the other side.

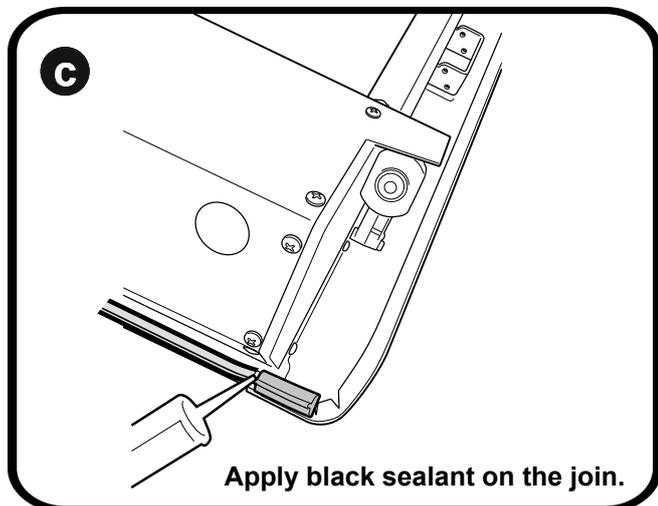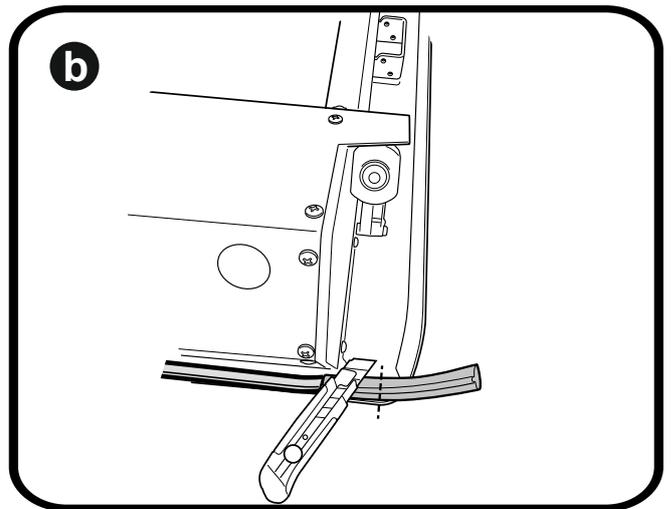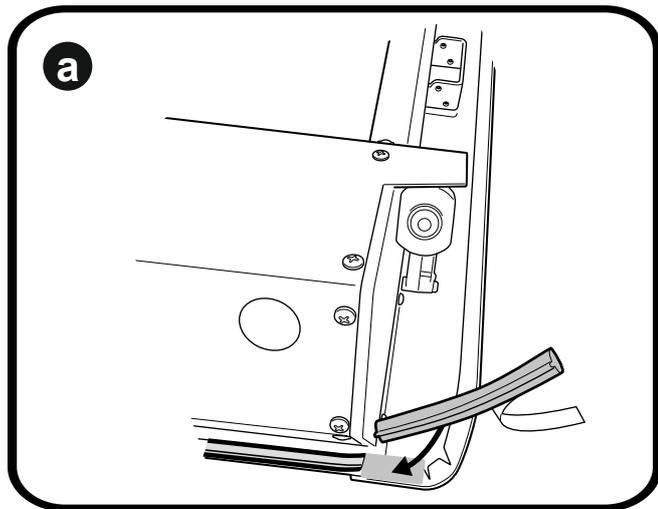


Apply black sealant on the join.

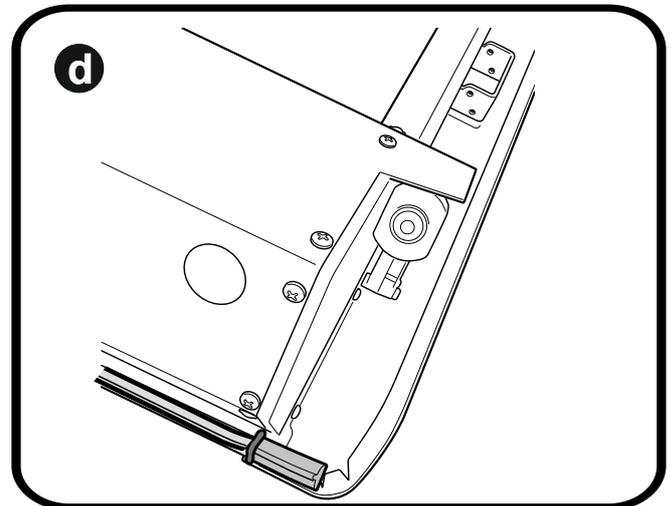


Carefully bring down the assembled unit.

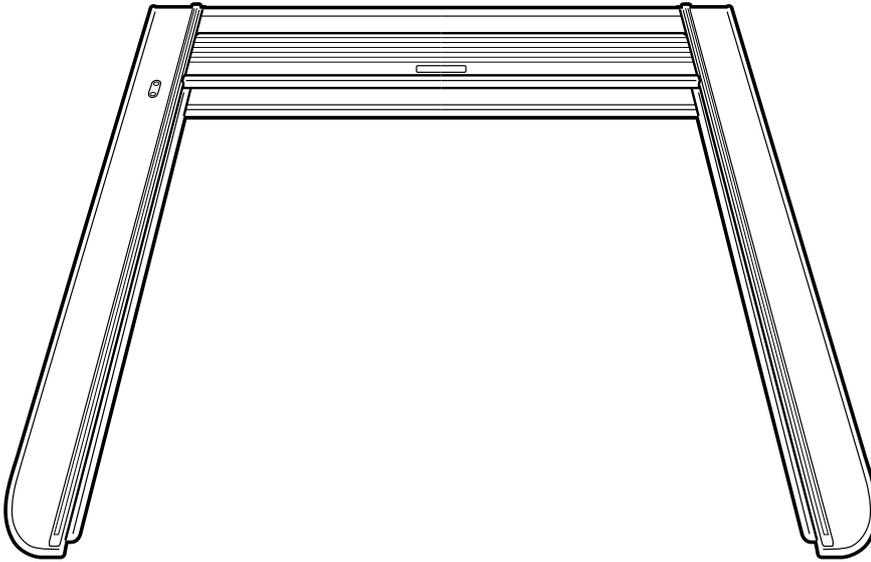


Insert side end caps to the top cover.

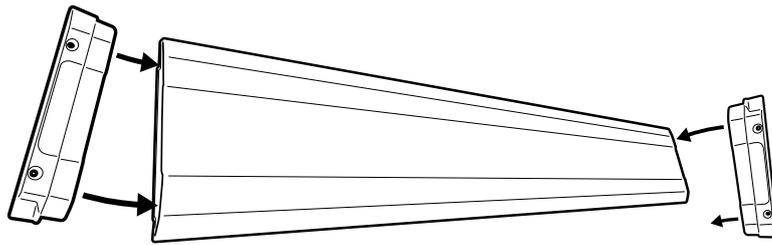


Place & Align top cover over the canister and side rails.

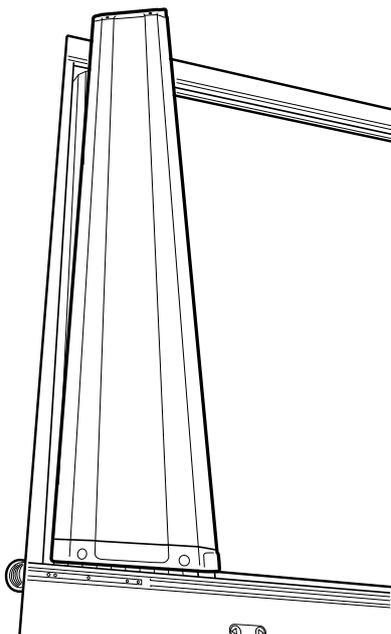


Using countersunk screws provided, line up end cap holes to the threads on the side rail. Fasten to 3nm torque. Repeat to the other side.

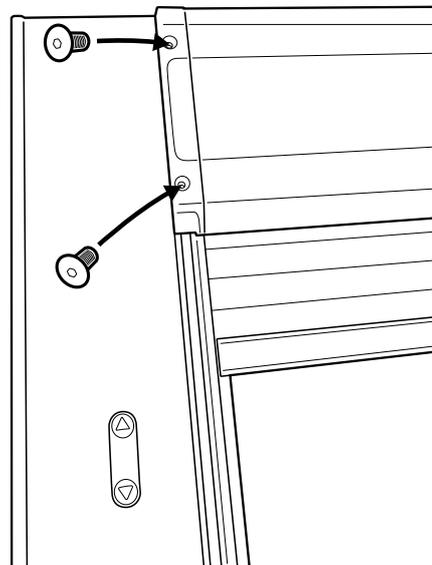


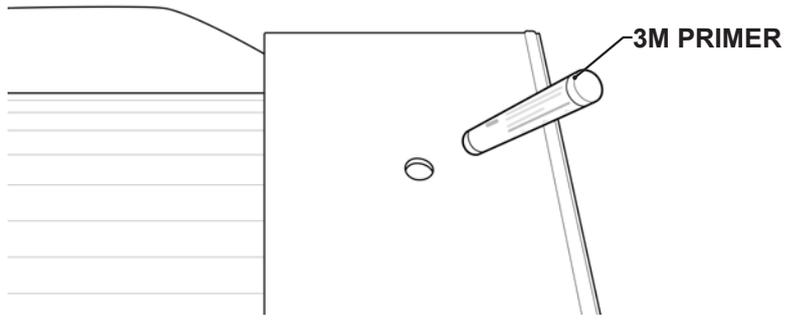


Apply 3M primer provided around side rail holes.

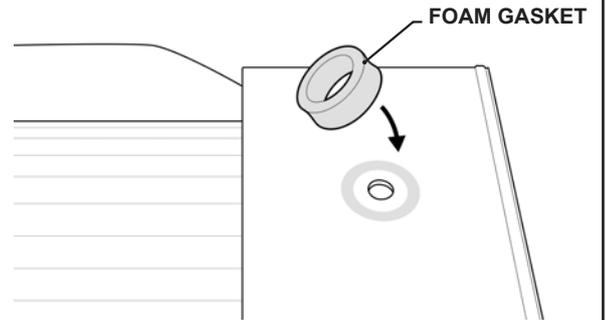


Peel away backing from foam sealant and stick to side rail. Front and rear gaskets are not identical.


Repeat on all holes.

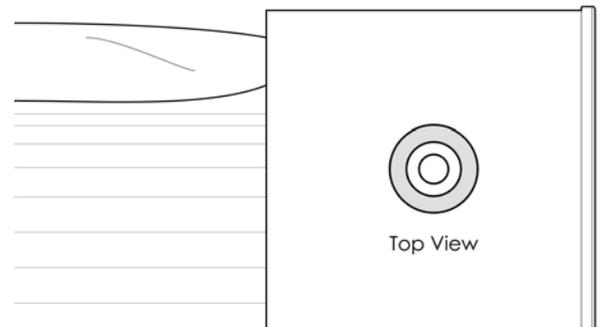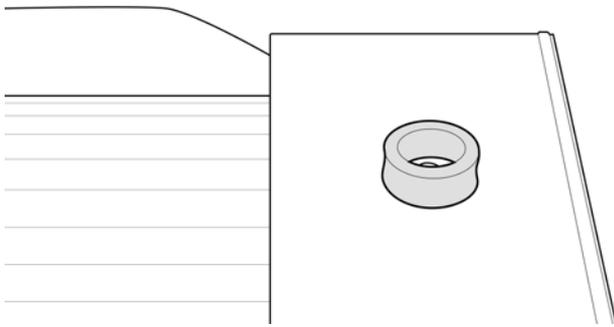

Remove all rubber cups from sports bar.

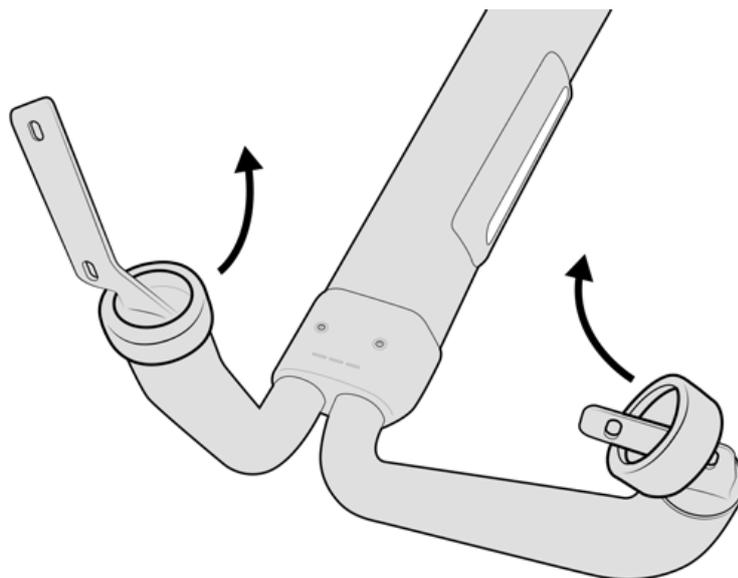


Trim front leg of sports bar to base as shown. Repeat on front legs only.

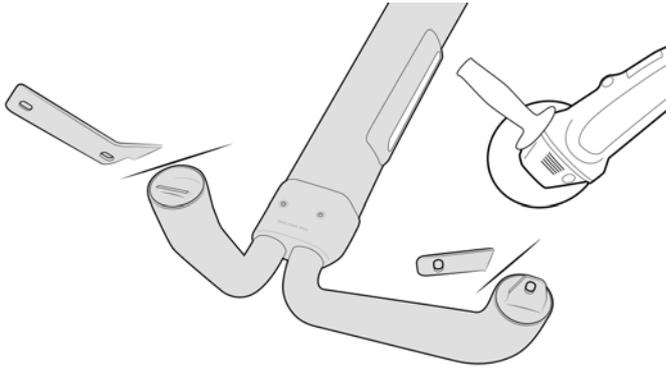


Cut the rear leg as shown be careful not to damage the sports bar.


Place previously removed rubber cups back on the sports bars.

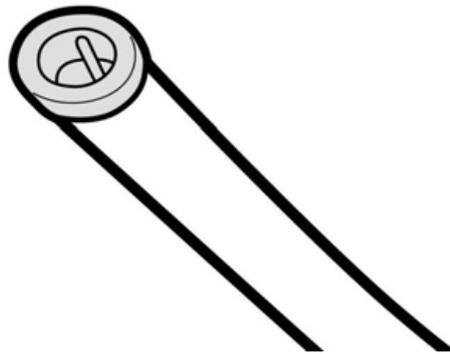


Drill the M6 Sports bar hole with a 6.5mm drill only for the front leg. Repeat for mirroring side

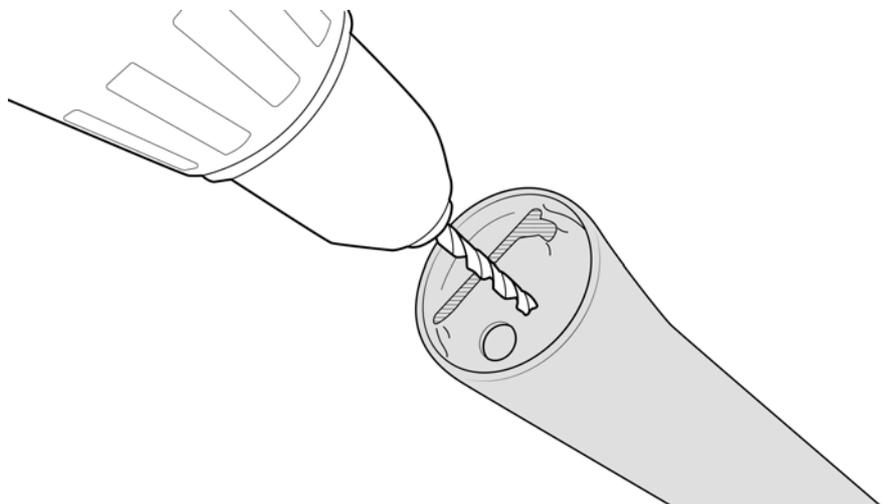


Spray the hole and threading bolt with lubricant.

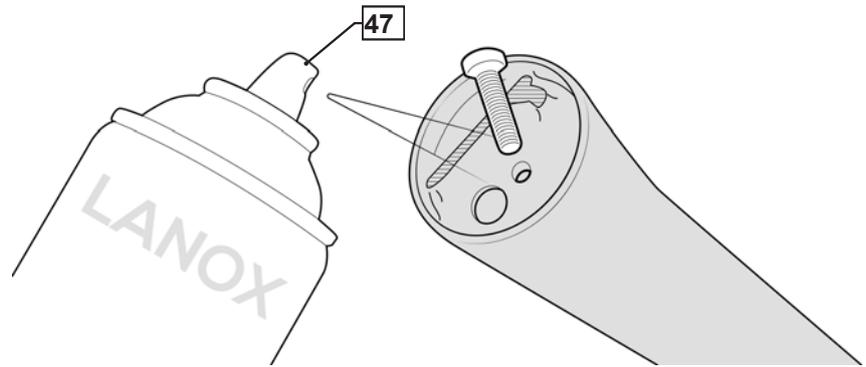


Carefully fasten the threading bolt as shown. This will make a bigger thread in the housing.

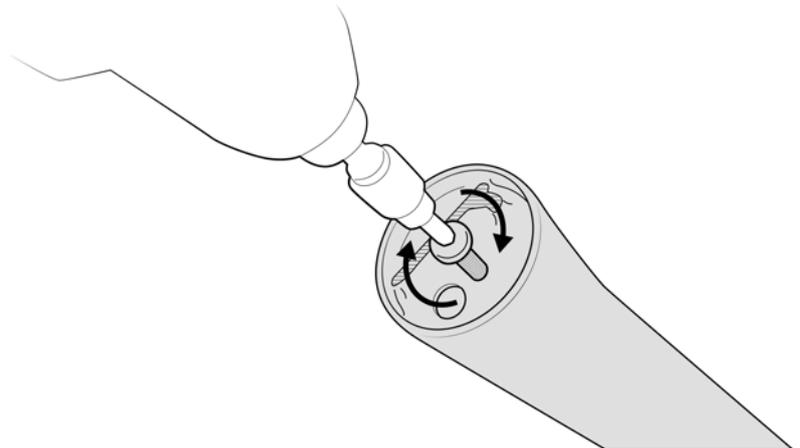


Place and tighten grub screw followed by locking it with the nut.

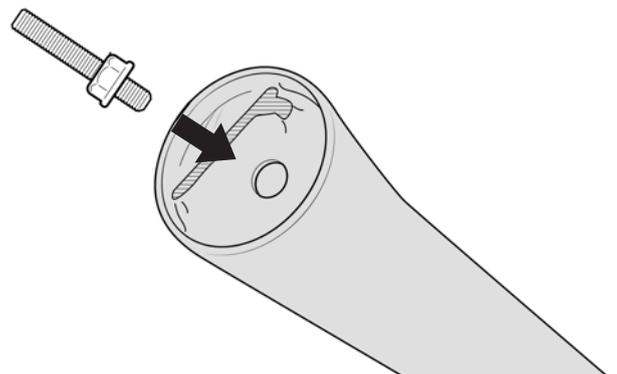

**Place Sportsbar on Roll R cover**

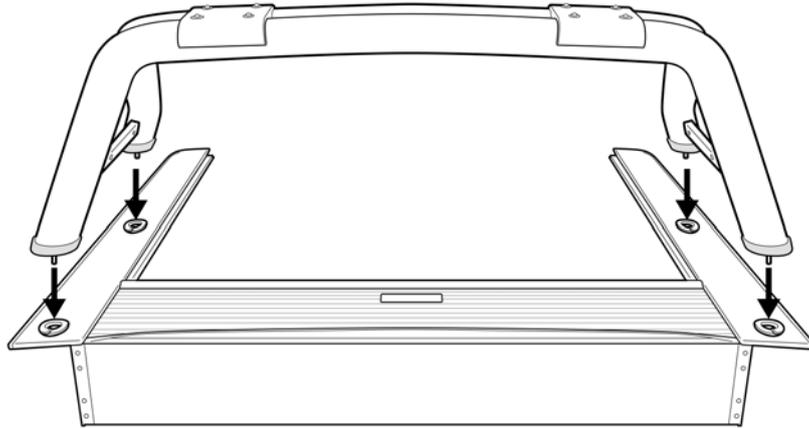


**Place flat washer  
and tighten with the  
nylock nut provided.  
Repeat on all four  
legs.**


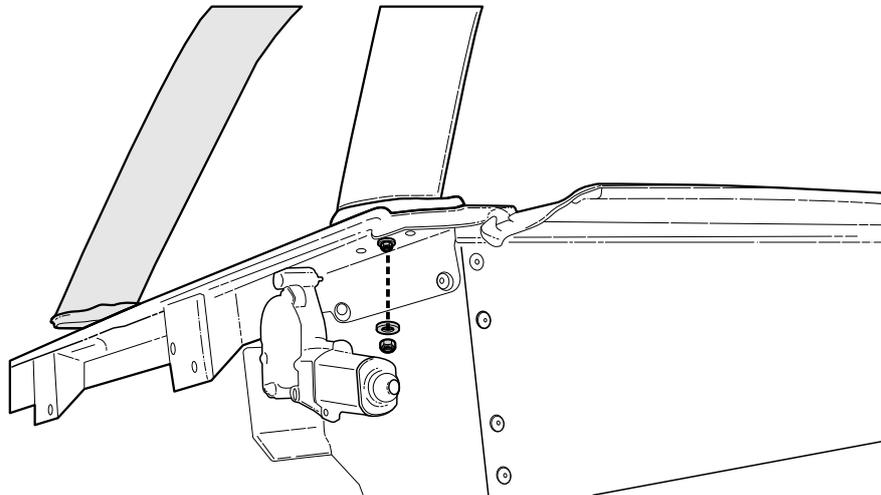


**Note - Do not overtighten**

Drill the rear hole of the sports bar rear leg mounting holes bigger with a step drill. You should be left with a 16mm hole.

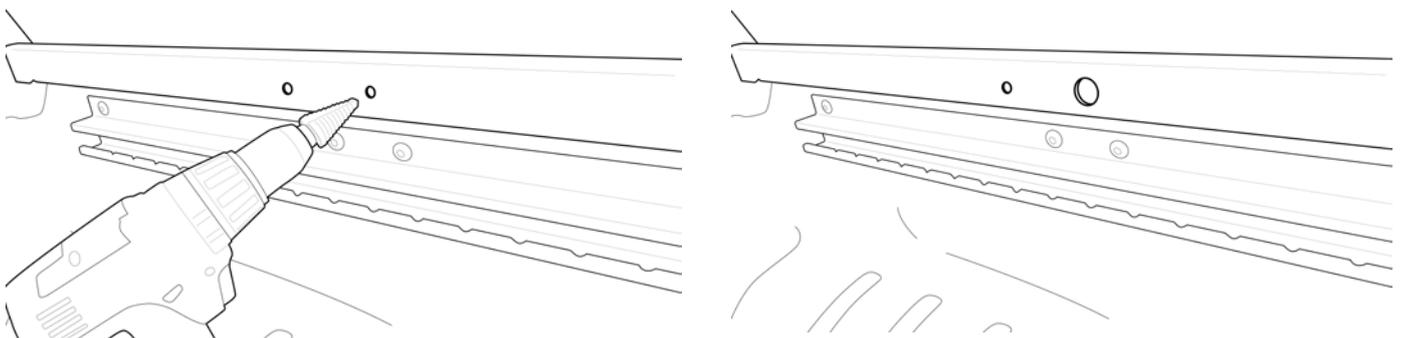


Place the Roll-R-Cover unit on to Ute bed.

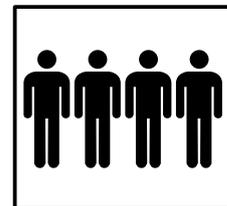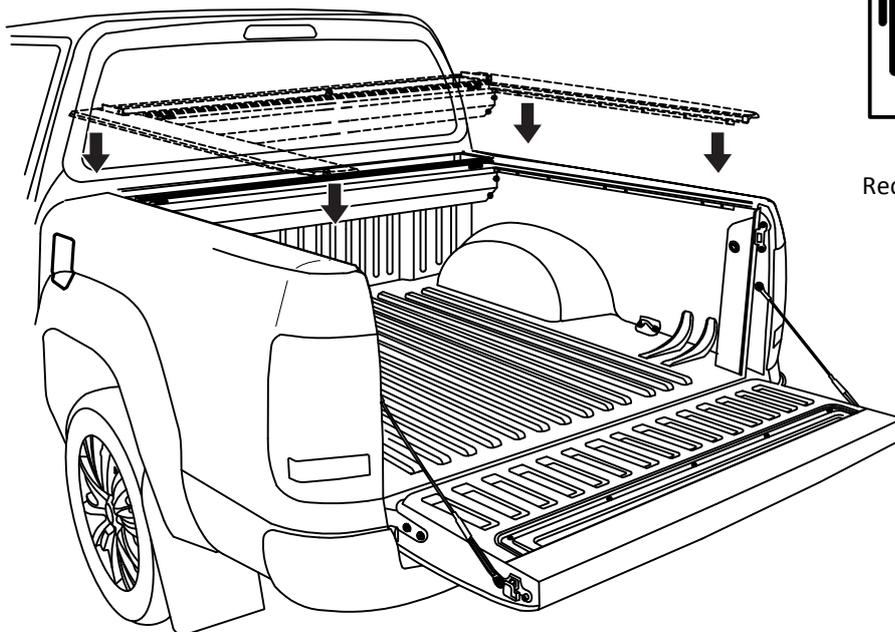


4 People  
Recommended for lift

With care, pull out any side rubber that has folded under the side rail.

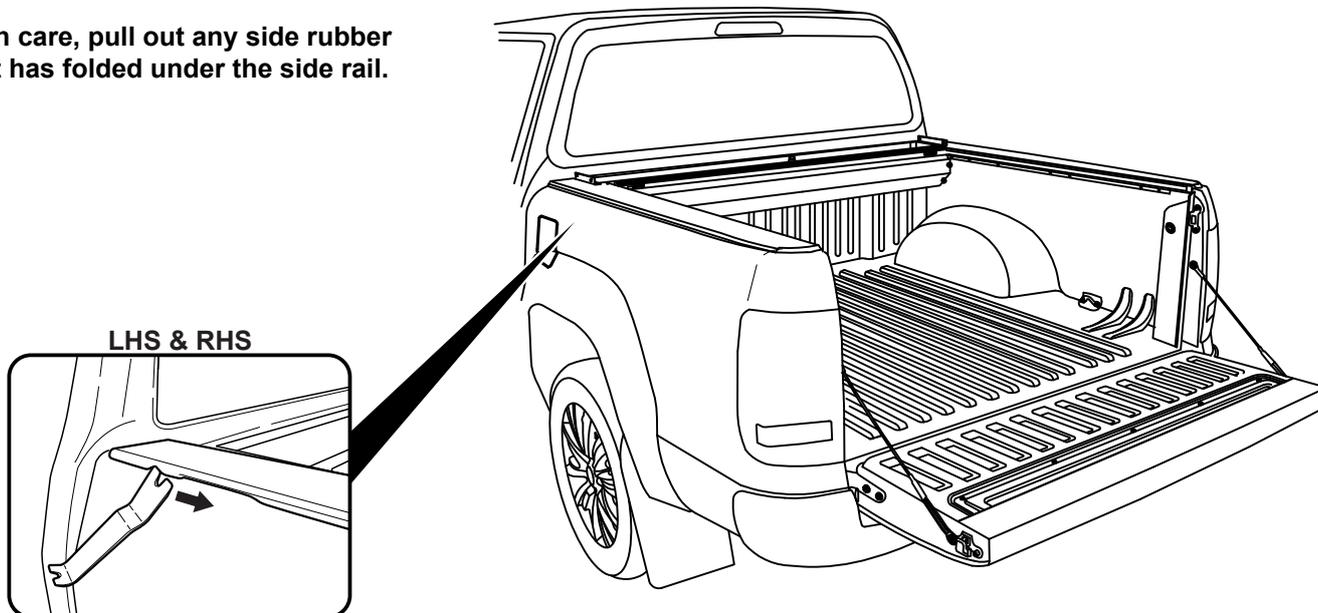

With the tailgate up (Closed position),  
Pull left & right hand side rails  
towards the tailgate, stopping short by  
5mm between tailgate and side-rail  
end-cap.

5mm

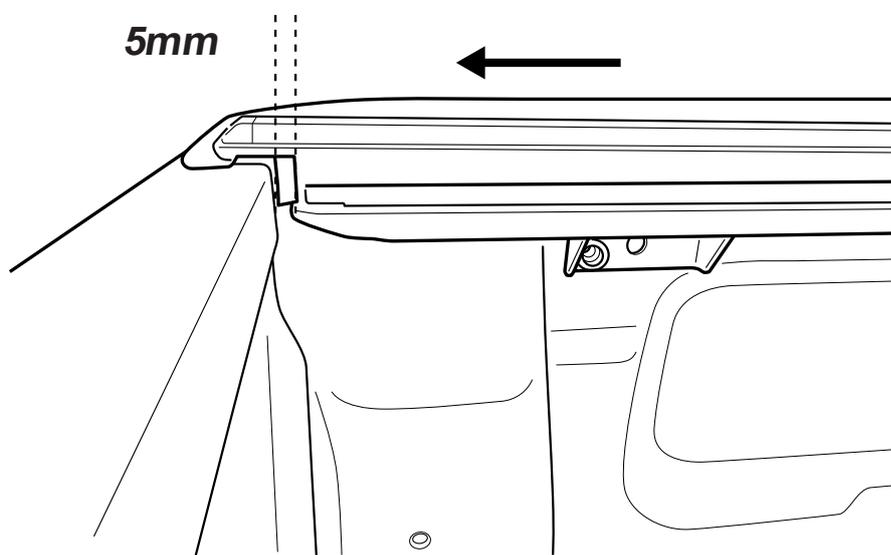


Foam compressed to  
5mm when tailgate is  
closed.

Gap between tailgate and side-rail end cap to be 5mm.

Foam seal



Side rail end cap

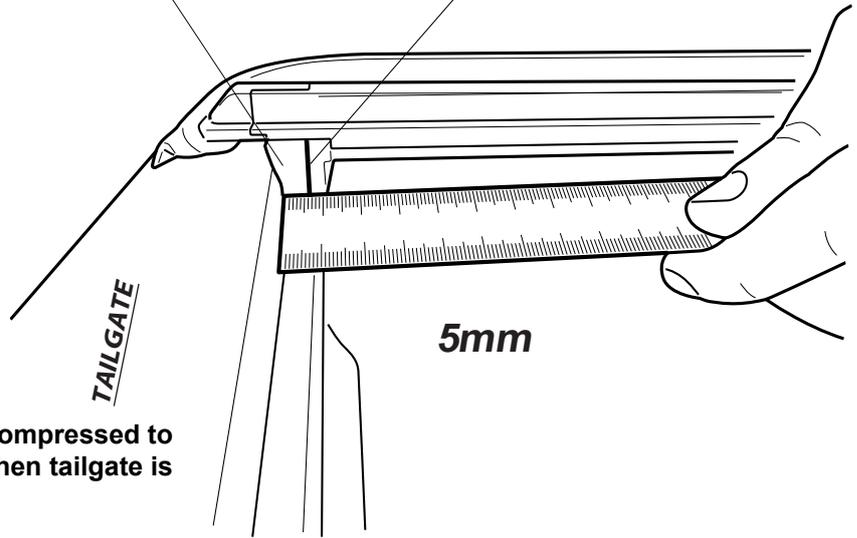


Foam compressed to 5mm when tailgate is closed.

Position clamp behind the inner top lip of the bed rail and the center elongated hole of the side rail mounting brackets. Repeat to all 6 positions.




Ensure the M8 nut is in the indicated slot of the clamp

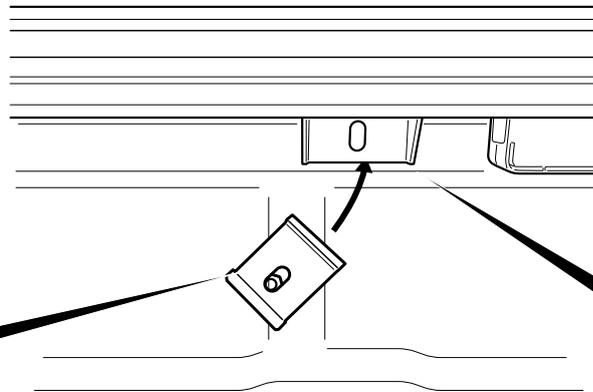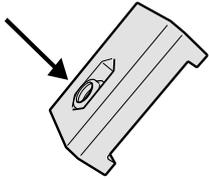


Fasten clamp loosely into position using M8 washer, M8 spring washer and M8 x 35mm bolt.

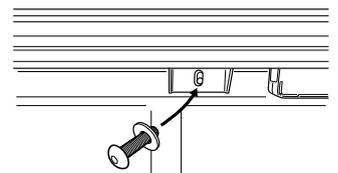

Apply pressure then tighten clamps in the order indicated.

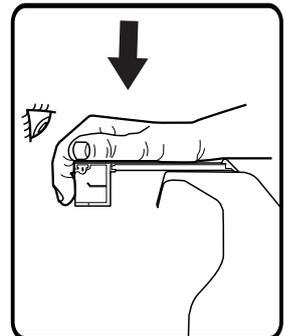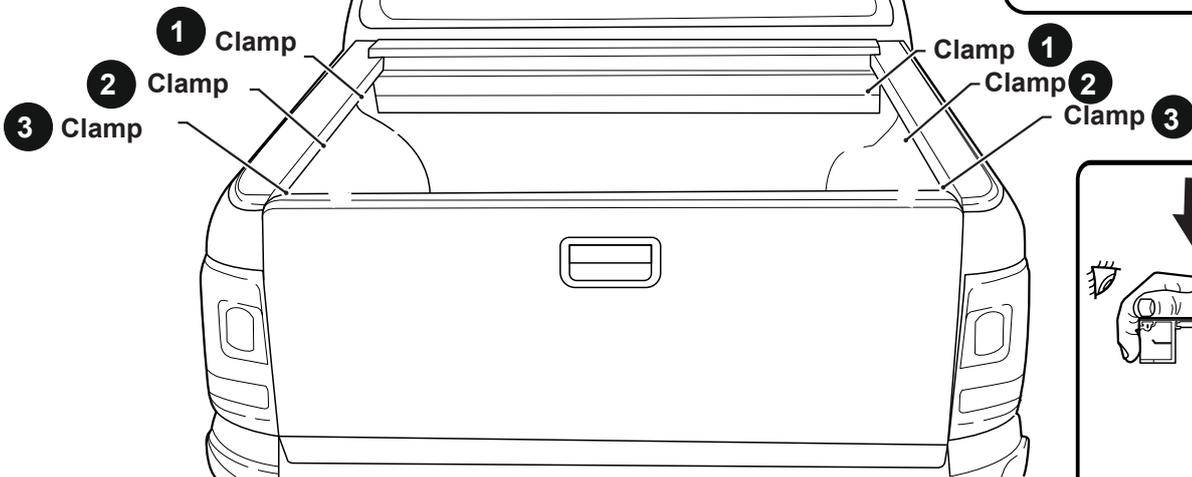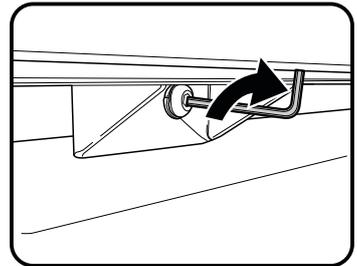

Apply flat plate behind adjusting bolt hole to the ute bed panel or to the liner if the Ute is equipped with a tub liner.

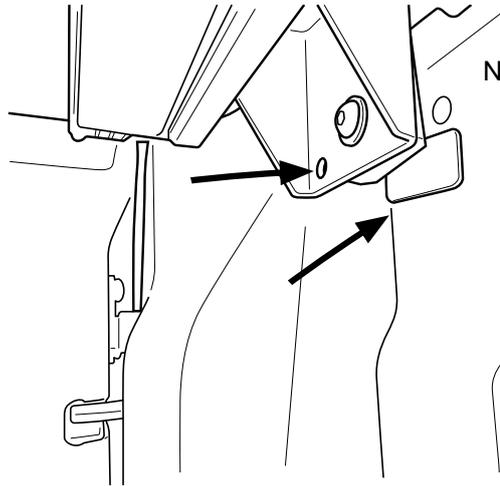


Note: Rear Clamp bracket.






Note: Clean surface before applying flat plate.

Feed M8 nut into M8x70mm bolt and through clamp bracket's pre-installed nutsurt as indicated.

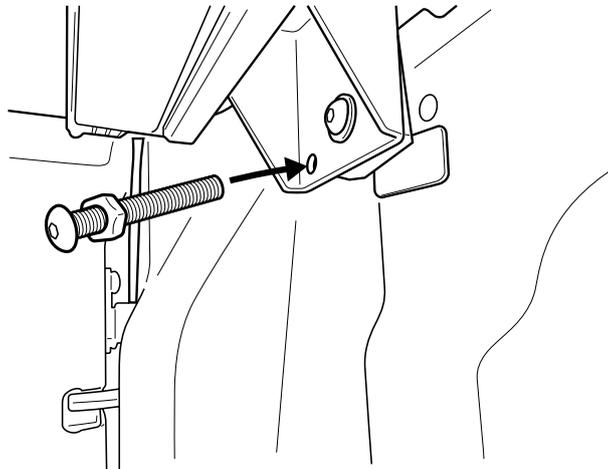


Side rail rubber must have a 1mm gap from the top of the tailgate in the closed position.

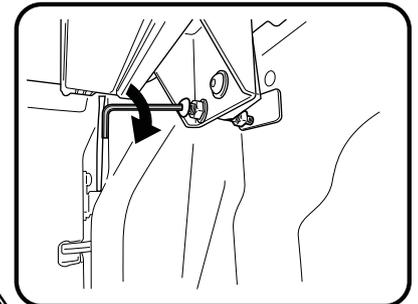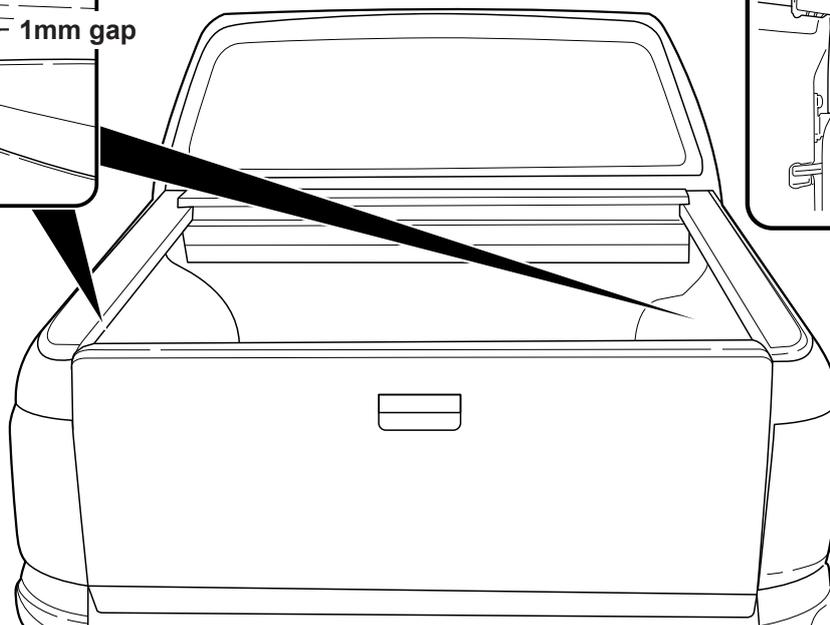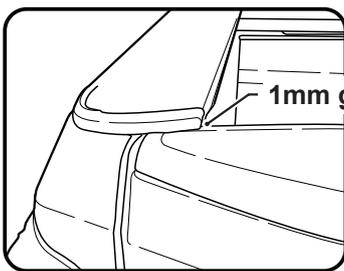

Drive the adjustment bolt in to lift the rear of the side rail till it clears the tailgate.




Fasten the M8 nut against clamp bracket.

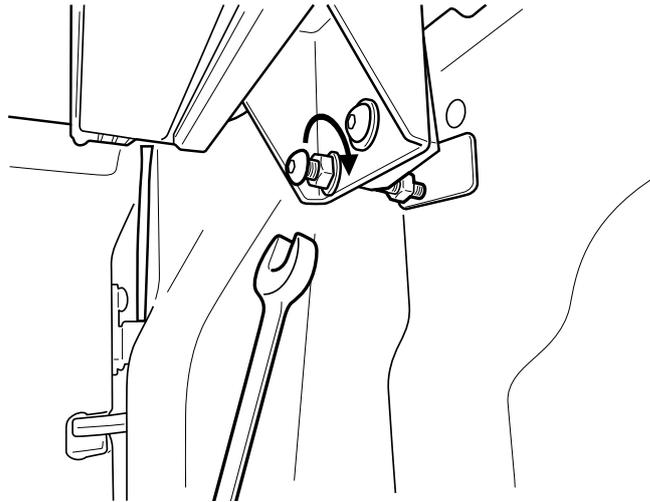




Install front drain pipes through pre-drilled holes of the canister. ( RHS/LHS)



Note: With care push tube in.  
Taking care pull the tube back  
so it seals correctly against  
the front panel of the tub.

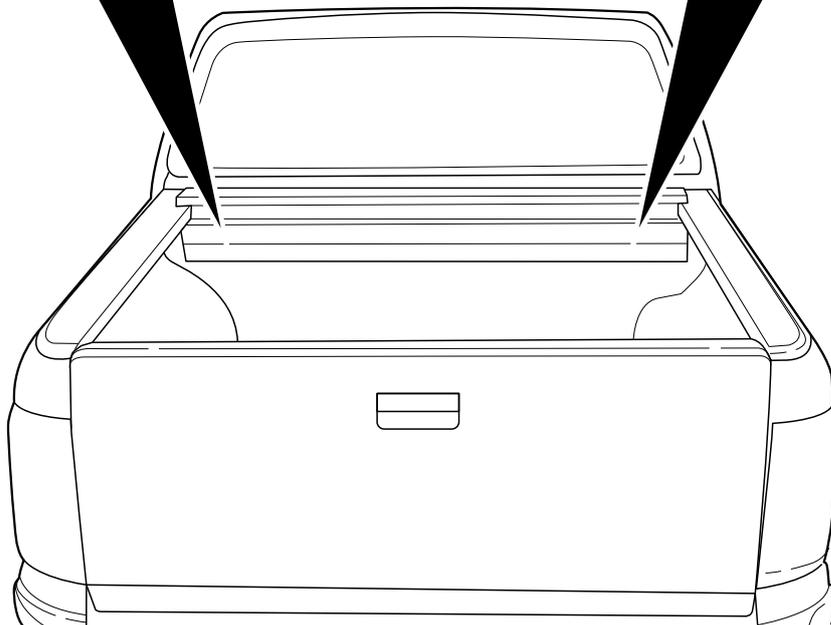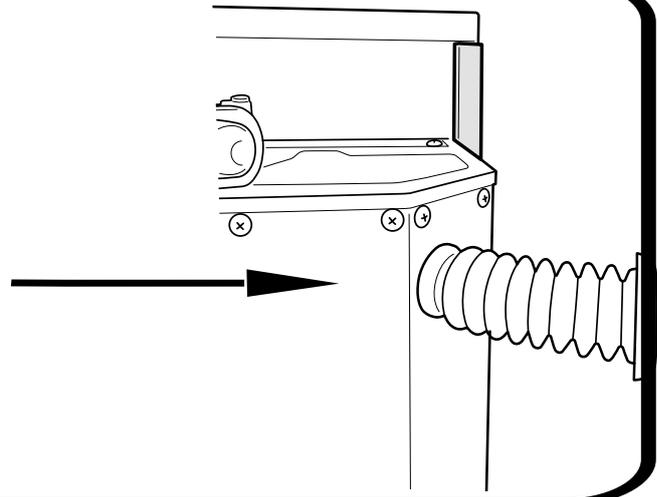
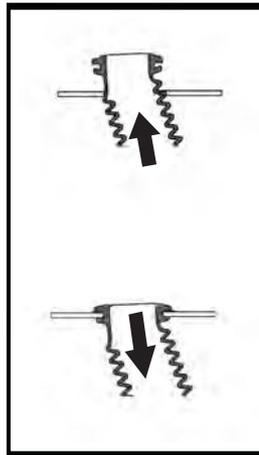


Insert the nylon spacer , repeat step on the other side.

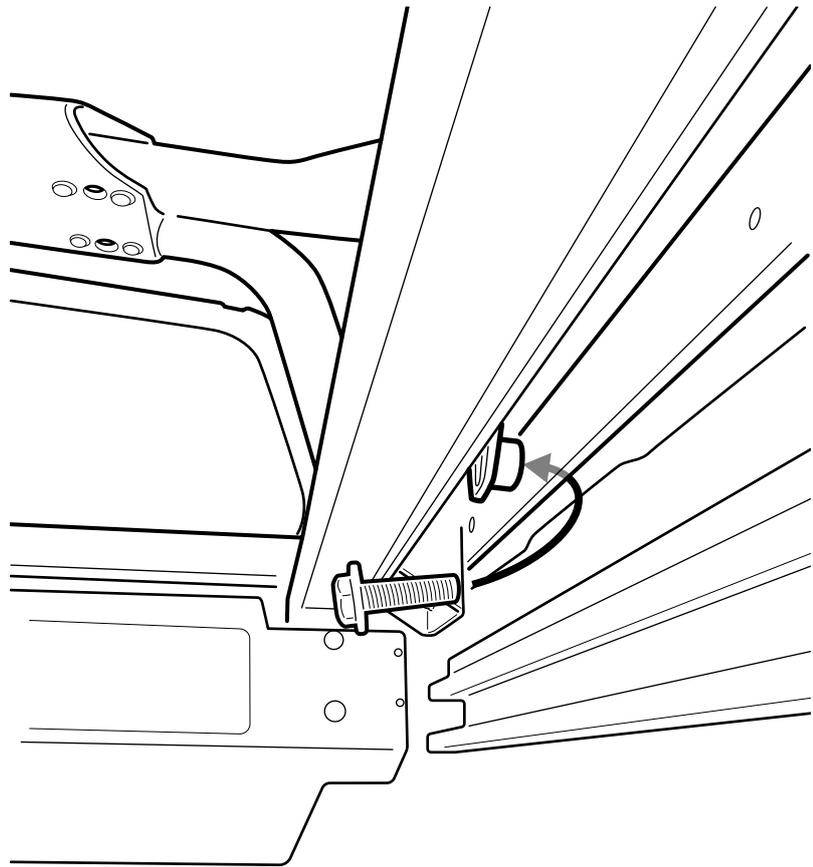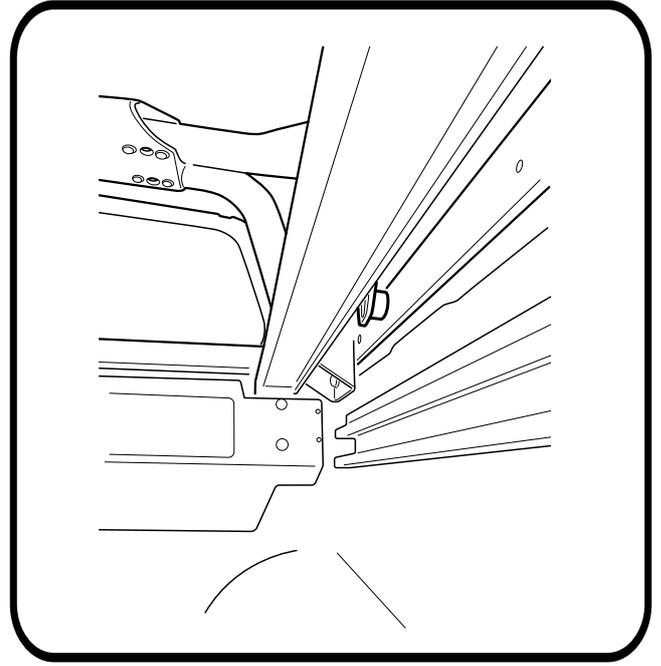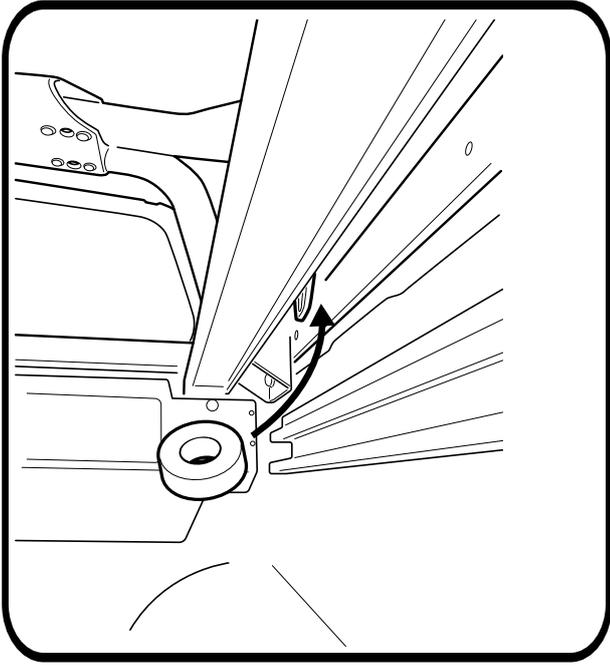


Using the provided M8 hex bolt followed by the m8 washer, feed through the tub lip, nylon space and the sports bar leg. repeat to on the other side.

Fasten using the provided M8 washer followed by the nylok M8 nut.

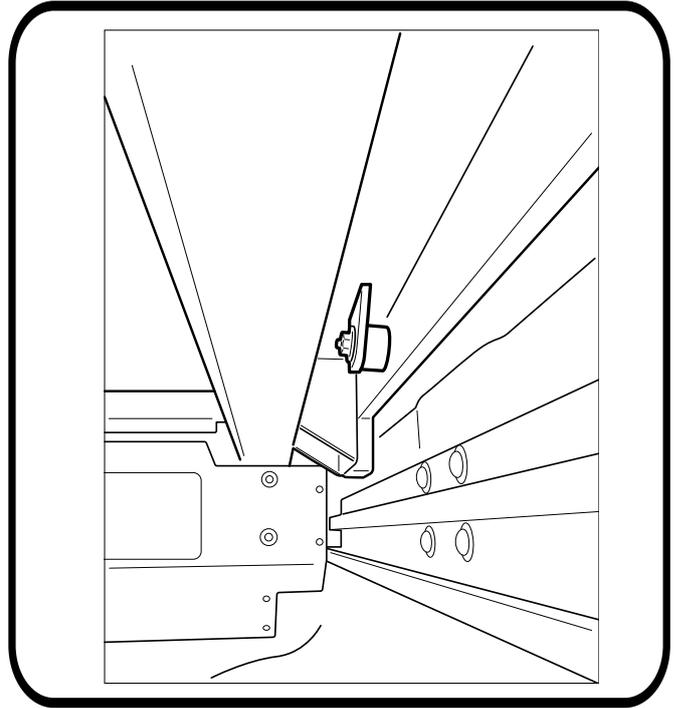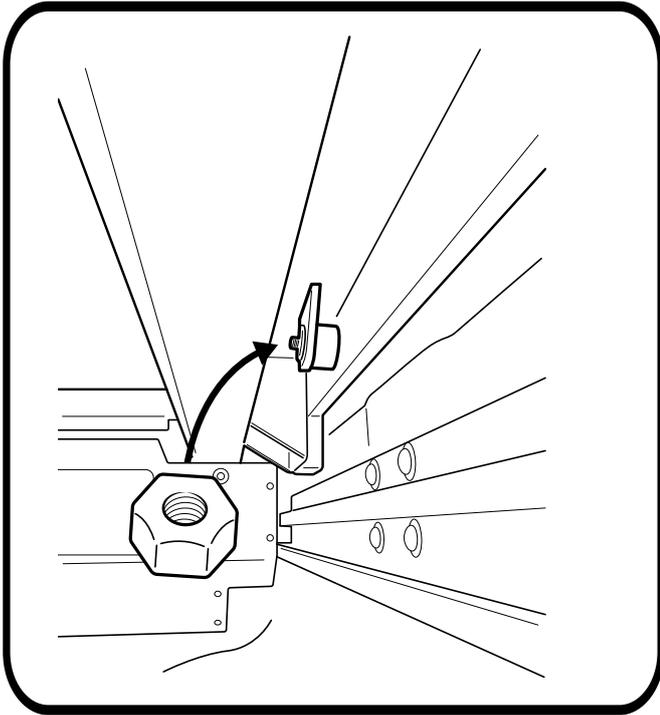


Feed brake light loom back through the cavity and reconnect to connectors for correct operation of brake light.

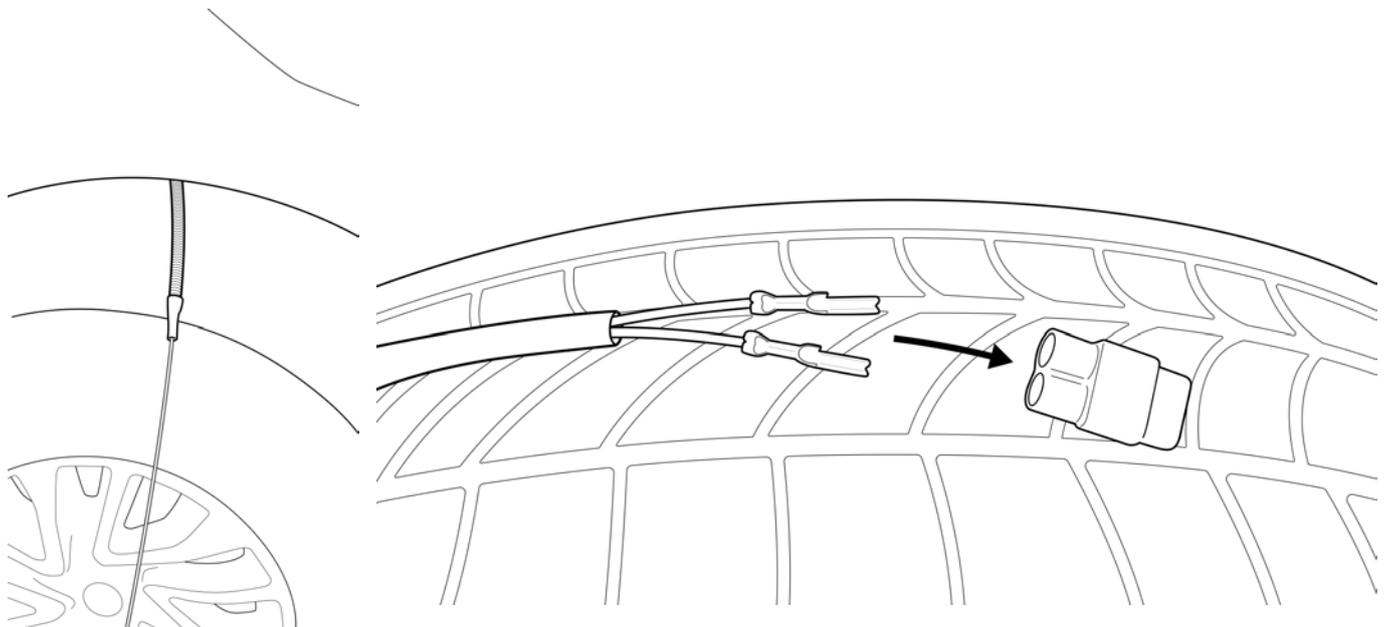

- a. Connect Battery loom S2.75 to Receiver loom.
- b. **Carefully** connect CI-Loom-short to Receiver loom.



Align connectors carefully to avoid pushing pins out.

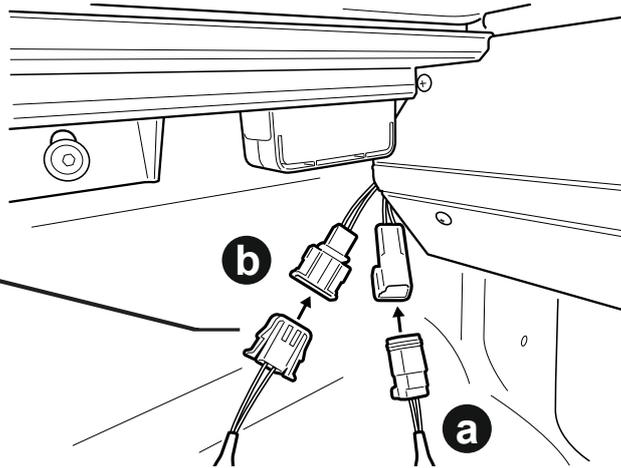

NOTE: 1. To wear in the Roll R Cover please fully open & close the cover approximately 15 times after install is complete.

2. Set your vehicle locking system to unlock all doors with one press of the factory remote unlock button. This setting can be found in your vehicle settings.

### Operating instructions:

Press unlock on vehicle key fob to activate controller.

When vehicle is unlocked the side rail sensor buttons will be active to control.

When vehicle is locked the side rail sensor buttons will be inactive.

### Using factory key fob to operate:

Pressing unlock twice on the factory key fob within 4 seconds, will activate the roll r cover to open.

Pressing lock twice on the factory key fob within 4 seconds, will activate the roll r cover to close.



### Vehicle proximity:

Tapping the proximity twice to open or lock the car door will act exactly the same way as the key fob being pressed twice.

Touch & let go to open, touch & let go again to pause.

Touch & let go to close, touch & let go again to pause.

